

ALIEN

SPECTACULAR

1:2

SCALE

EASY
ASSEMBLY

BUILD THE
TERRIFYING
XENOMORPH
FROM ALIEN

PACK 9

KITS 61 - 68

ALIEN

PACK 9 | BUILD INSTRUCTIONS



KIT 61

THE LEFT ARM (II)

KIT 62

THE LEFT LEG (I)

KIT 63

THE LEFT LEG (II)

KIT 64

THE LEFT LEG (III)

KIT 65

THE LEFT LEG (IV)

KIT 66

THE LEFT LEG (V)

KIT 67

THE LEFT LEG (VI)

KIT 68

THE LEFT LEG (VII)

WARNING: Some parts are assembled using magnets. These magnets can cause serious injury if they are swallowed. Keep away from children. If you suspect a magnet has been swallowed, seek medical help straight away.

Some parts may have sharp edges, please handle them with care.

The installation of electronic parts must always be carried out by an adult. When replacing batteries, use the same type of batteries.

Please ensure that the battery compartment is securely fastened before you use the model.

Used batteries should be recycled.

Please make sure to check with your local council how batteries should be disposed of in your area.

Batteries can present a choking danger to small children and may cause serious harm if ingested. Do not leave them lying around and keep any spare batteries locked away at all times.



STEPS & TIPS ONLINE

Hachette Partworks Ltd, 4th Floor, Jordan House,
47 Brunswick Place, London N1 6EB

www.hachettepartworks.com

© 2023/2024 Hachette Partworks Ltd.

© 2023 20th Century Studios.

ALL RIGHTS RESERVED


All parts belong to a kit. Collectors item for adults.

Not suitable for children under 14.



KIT 61: THE LEFT ARM (II)

In this kit you will finish your assembly of the left arm and start building the skin covering for the left calf.

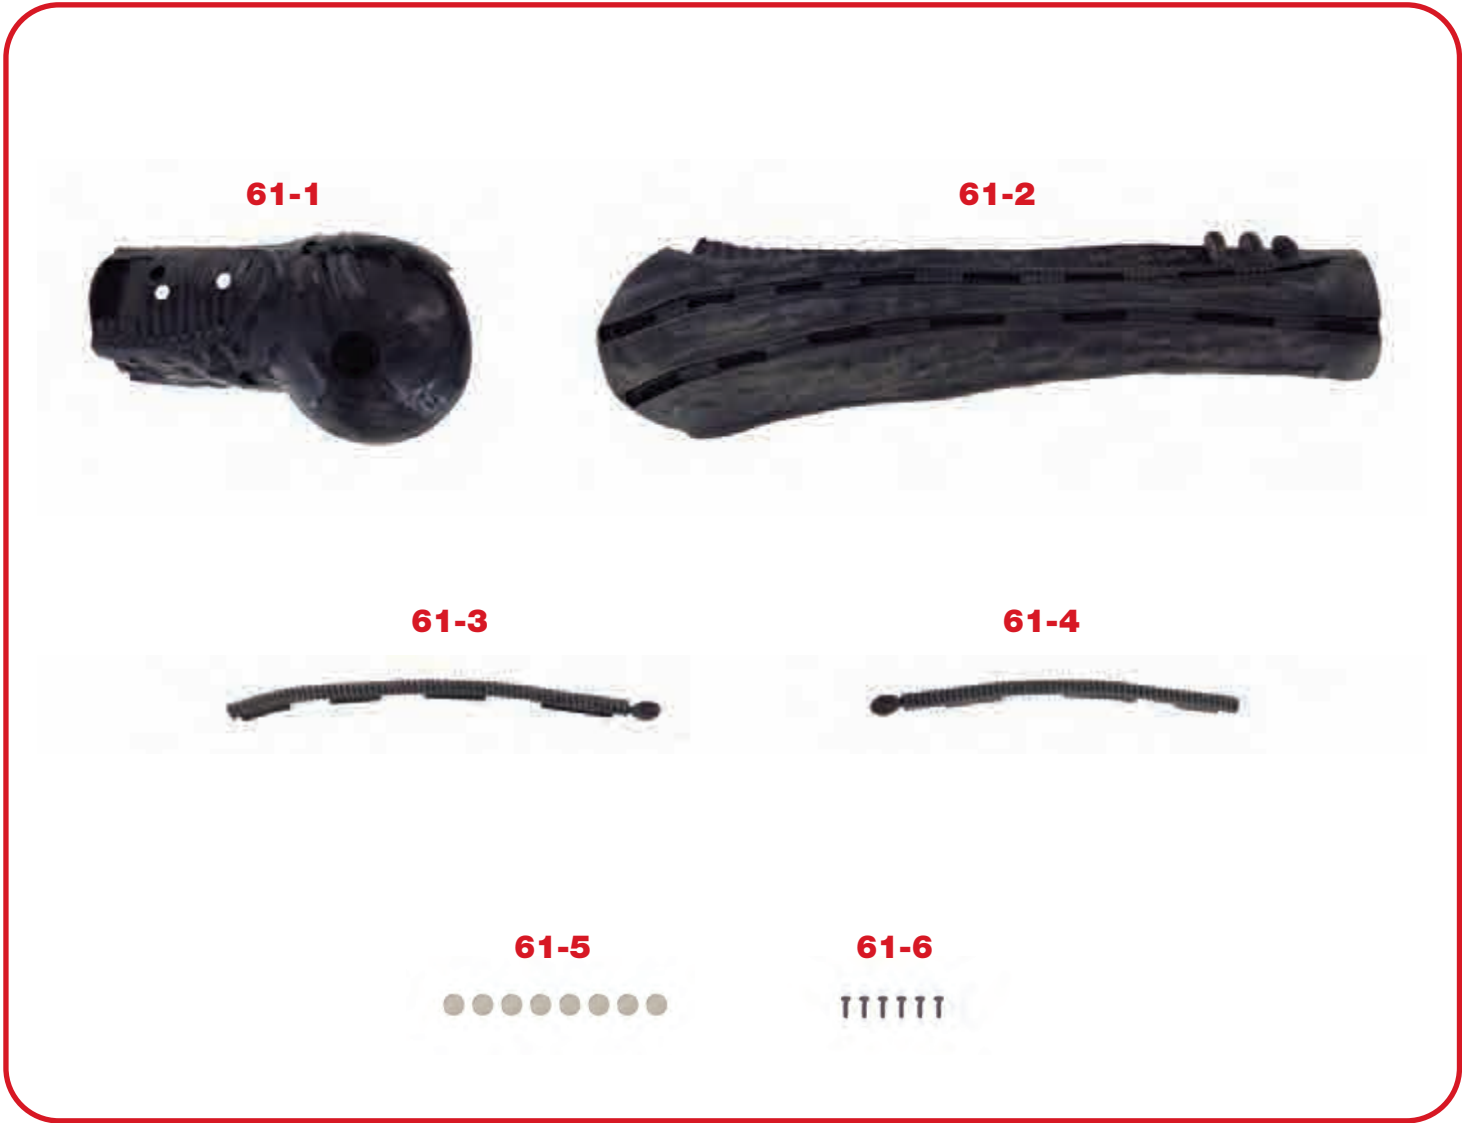

PARTS SUPPLIED


Ref	Name	Qty	Ref	Name	Qty
61-1	Left Humerus	1	61-4	Pipe L2	1
61-2	Left Calf Skin	1	61-5	Magnets	8
61-3	Pipe L1	1	61-6	2.3x6mm screws (1 spare)	6

KIT 61: THE LEFT ARM (II)

Take the left humerus skin **57-1**, which was worked on in pack 8 - kit 59 and place the Left Humerus **61-1** inside. Four Magnets **61-5** are to be fitted inside the Left Humerus **61-1**, as shown. As always, before glueing in place, check that they are orientated so that they are attracted to the magnets directly below.




1

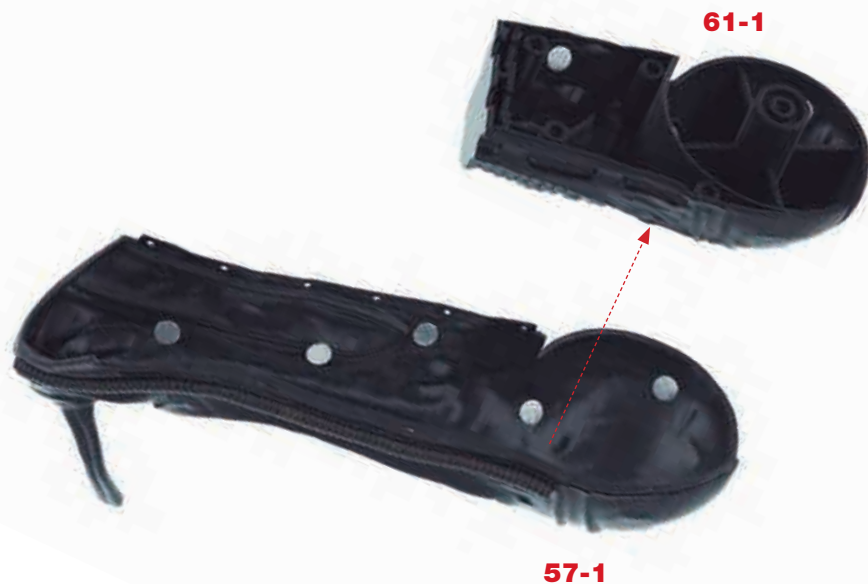


Separate parts **57-1** and **61-1** and put the skin **57-1** aside until it is needed in step 4.

2

KIT 61: THE LEFT ARM (II)


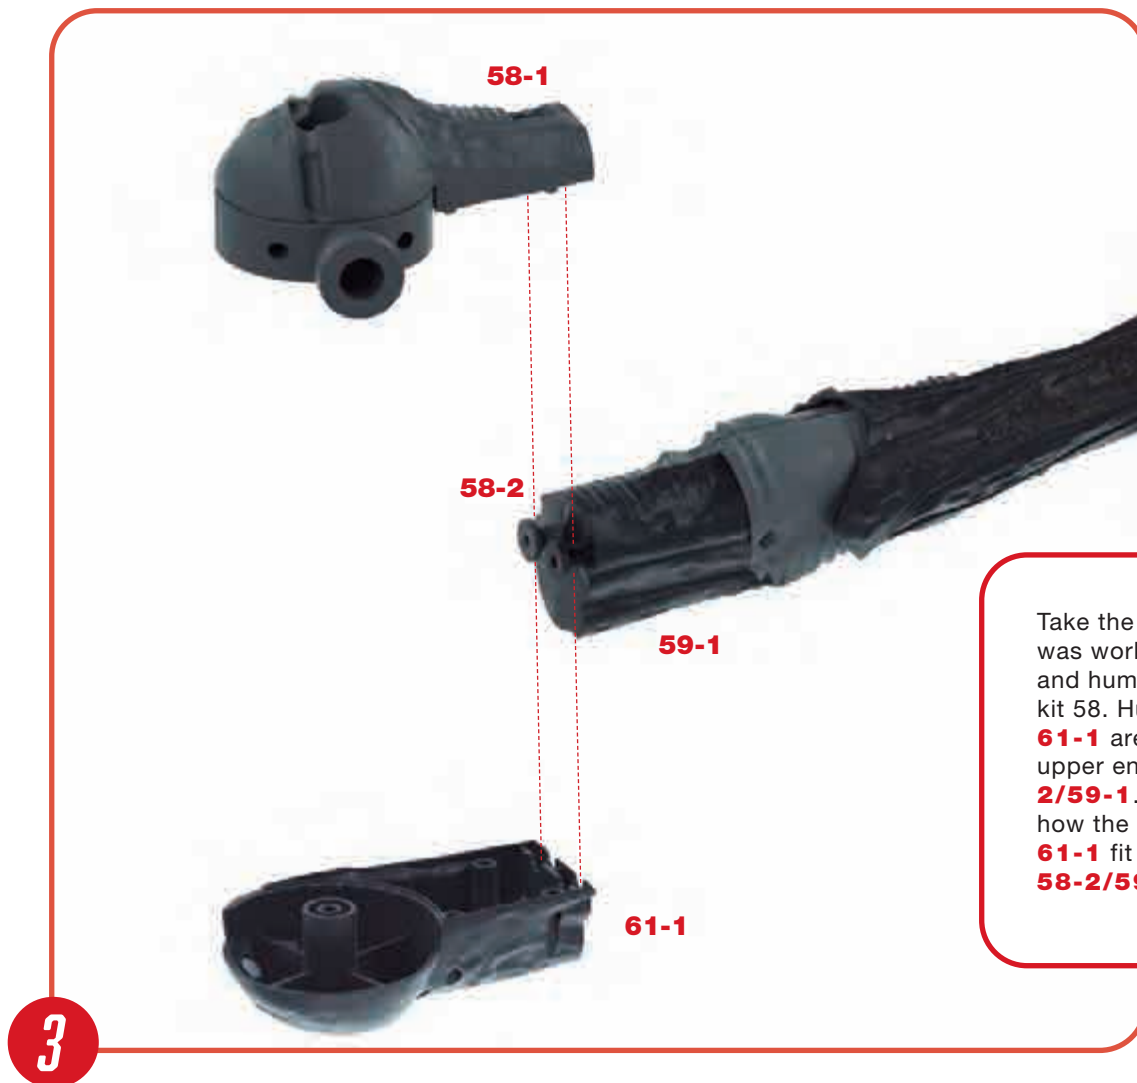


Take the left arm assembly which was worked on in pack 8 - kit 60 and humerus **58-1** from pack 8 - kit 58. Humerus parts **58-1** and **61-1** are sandwiched over the upper end of the humerus **58-2/59-1**. Study the diagram to see how the slots in parts **58-1** and **61-1** fit over the pegs on parts **58-2/59-1**.

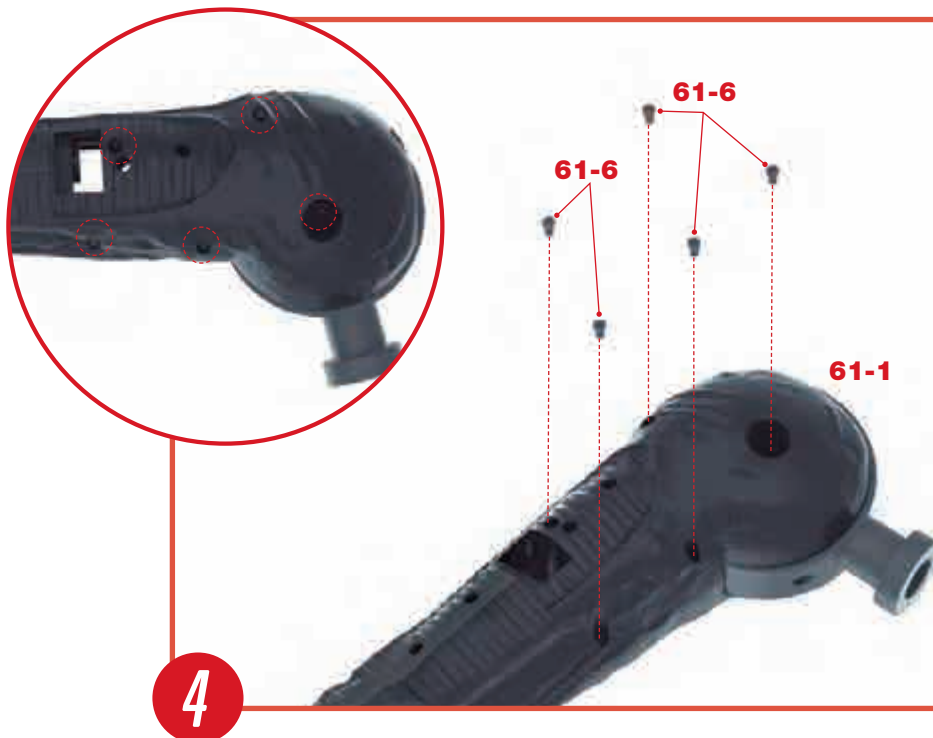

Holding the parts together, fix them in place by inserting and tightening five 2.3x6mm screws **61-6** into the holes in Humerus **61-1**.

KIT 61: THE LEFT ARM (II)

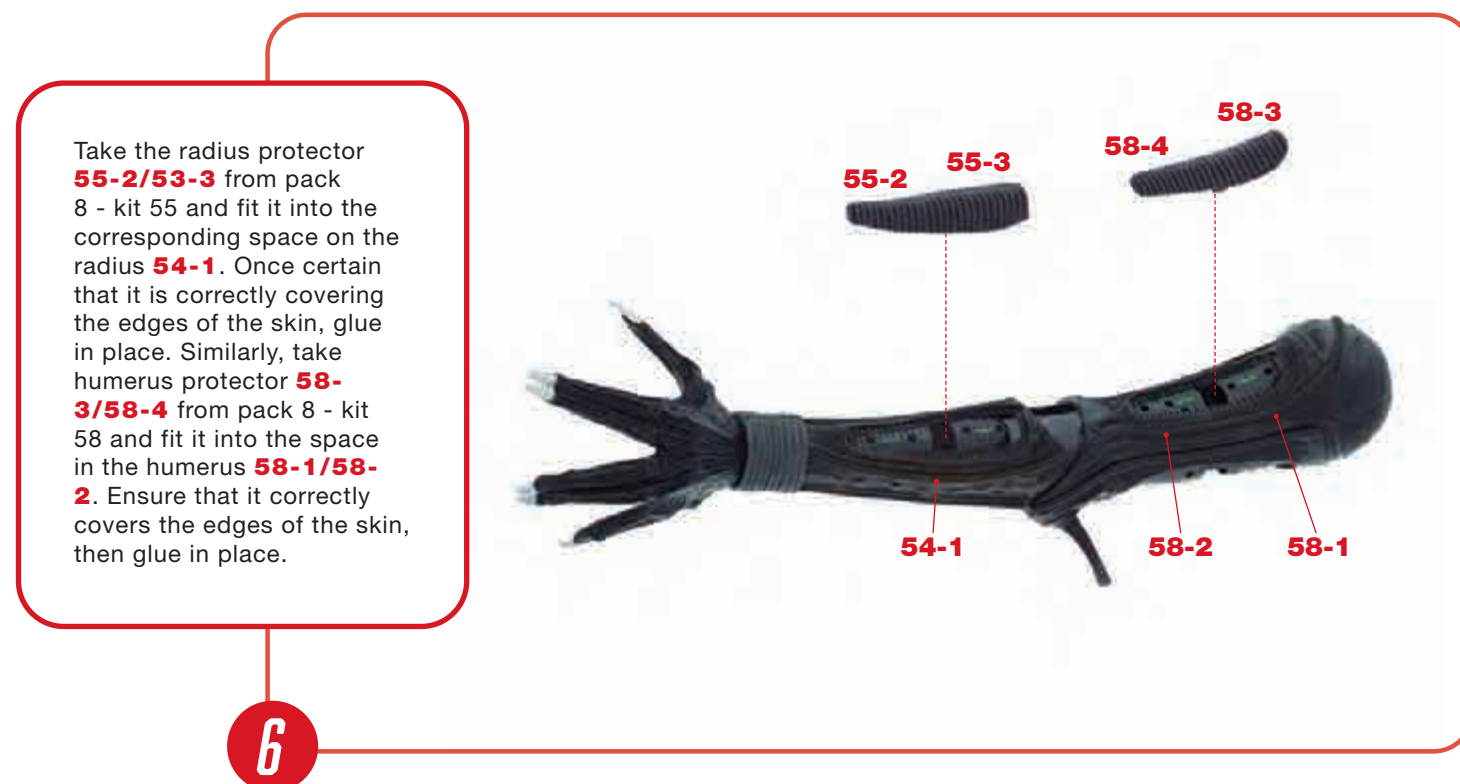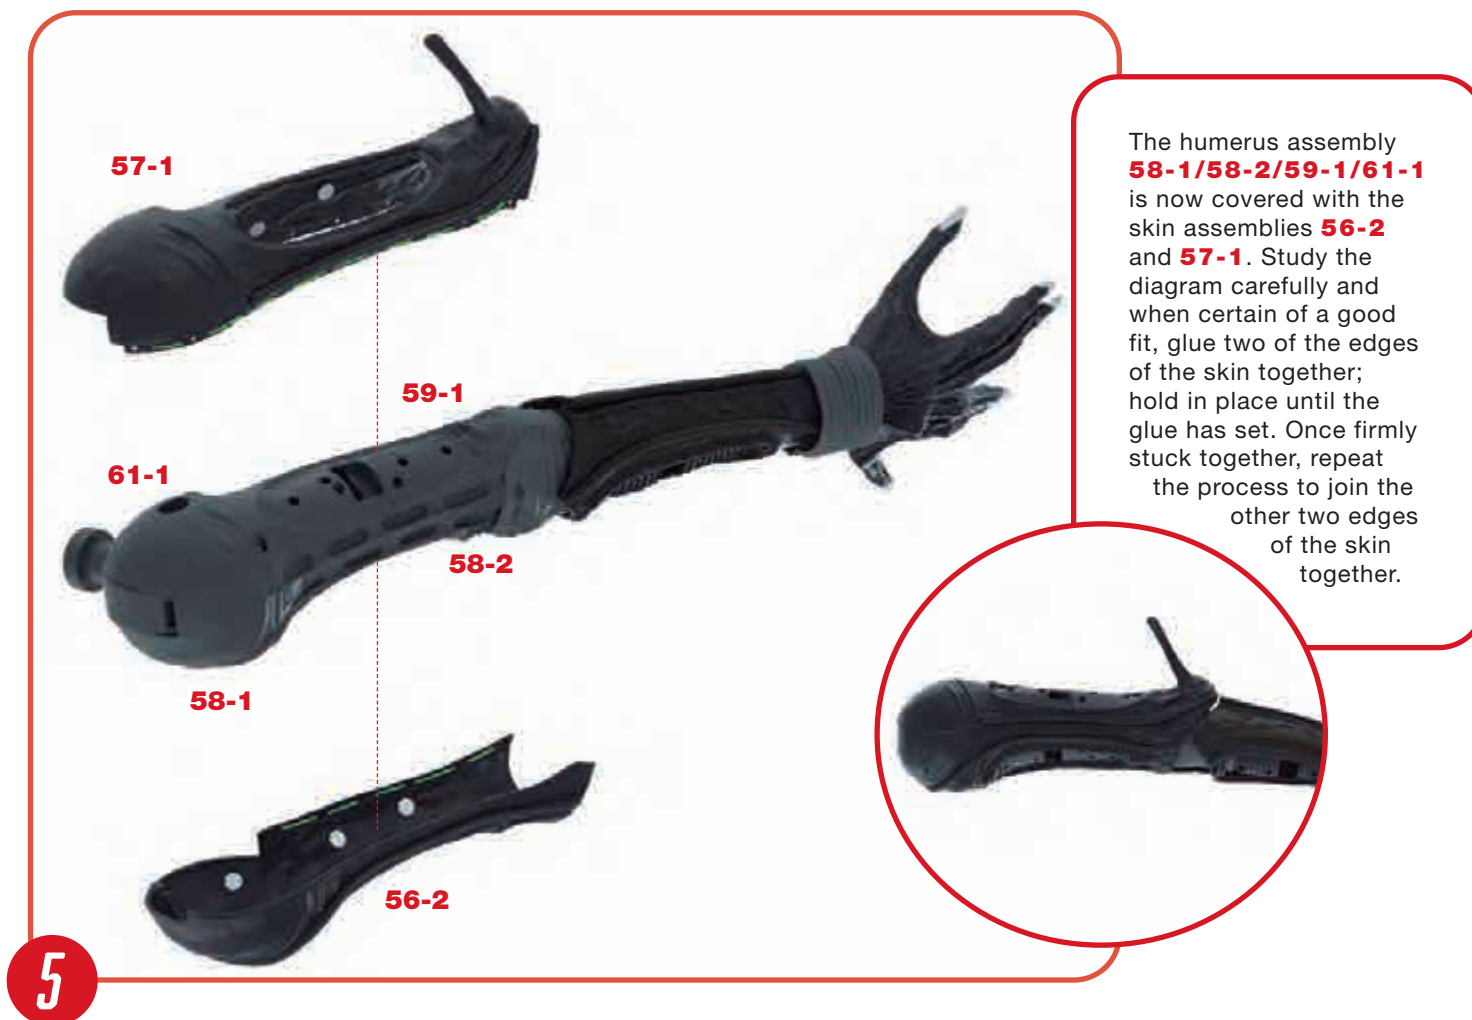

KIT 61: THE LEFT ARM (II)

Fit the humerus protector **59-3/59-4**, which was assembled in pack 8 - kit 59, into the corresponding space on the Radius **58-2/61-1**. Once certain that the edges of the skin are correctly covered, glue in place.



7




Four magnets **61-5** are now glued into circular recesses inside the Left Calf Skin **61-2**. It doesn't matter which way round they are fitted.

8

KIT 61: THE LEFT ARM (II)

Turn the Calf Skin **61-2** over and fit Pipe L1 **61-3** to the right and Pipe L2 **61-4** to the left. After test-fitting, glue in place.

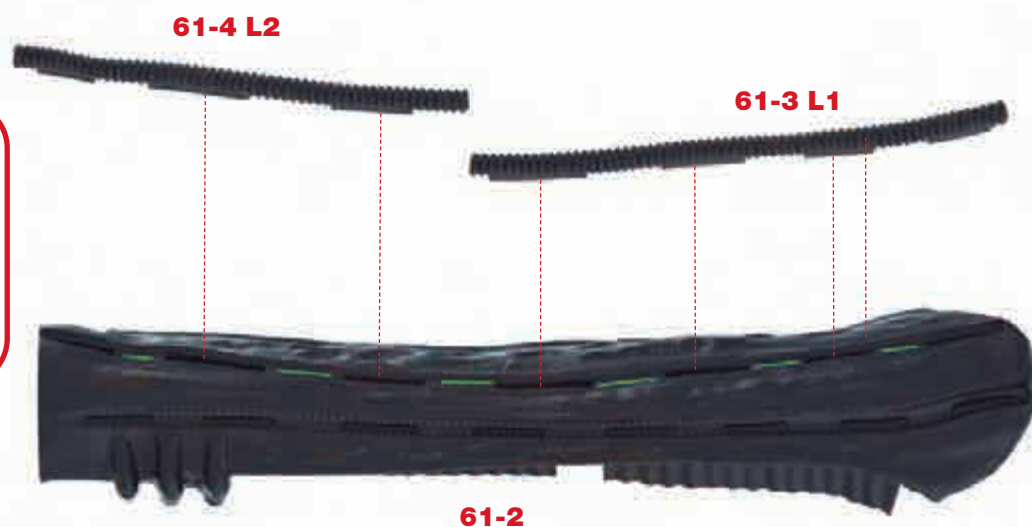

9

KIT 61 IS COMPLETE



*THE LEFT ARM HAS BEEN FINISHED AND
WORK HAS BEGUN ON THE LEFT LEG.*

KIT 62: THE LEFT LEG (I)

In this kit you will start to build parts of the left leg of the Xenomorph.

62-1



62-2



62-3



62-5



62-4



62-6



62-7



PARTS SUPPLIED

Ref	Name	Qty	Ref	Name	Qty
62-1	Left Tibia 1	1	62-5	Pipe L4	1
62-2	Left Tibia 2	1	62-6	Magnets	8
62-3	Connector	3	62-7	2.3x6mm screws (1 spare)	5
62-4	Pipe L3	1			

KIT 62: THE LEFT LEG (I)



KIT 62: THE LEFT LEG (I)


4



Two pipes are now fitted to the calf skin **61-2** which was last worked on in the previous kit. Pipe L3 **62-4** is fitted to the left and, as a continuation, Pipe L4 **62-5** fitted to the right. Once you are happy with the fit, glue in place.

5

Turn the Skin **61-2** over and glue four Magnets **62-6** into the remaining circular recesses. It doesn't matter which way round they are fitted.

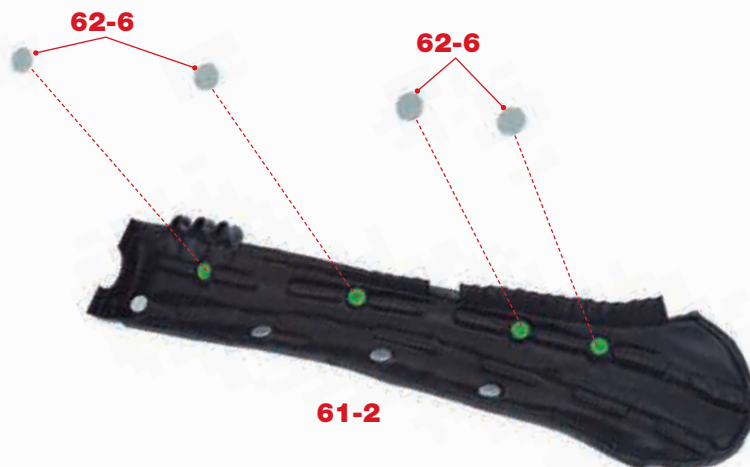


6



Turn the Skin **61-2** around and fit the Tibia assembly **62-1/62-2** inside.

KIT 62: THE LEFT LEG (I)

Four Magnets **62-6** are now fitted into circular recesses inside Left Tibia parts **62-1** and **62-2**. After checking that they are attracted to the magnets directly below, glue in place.

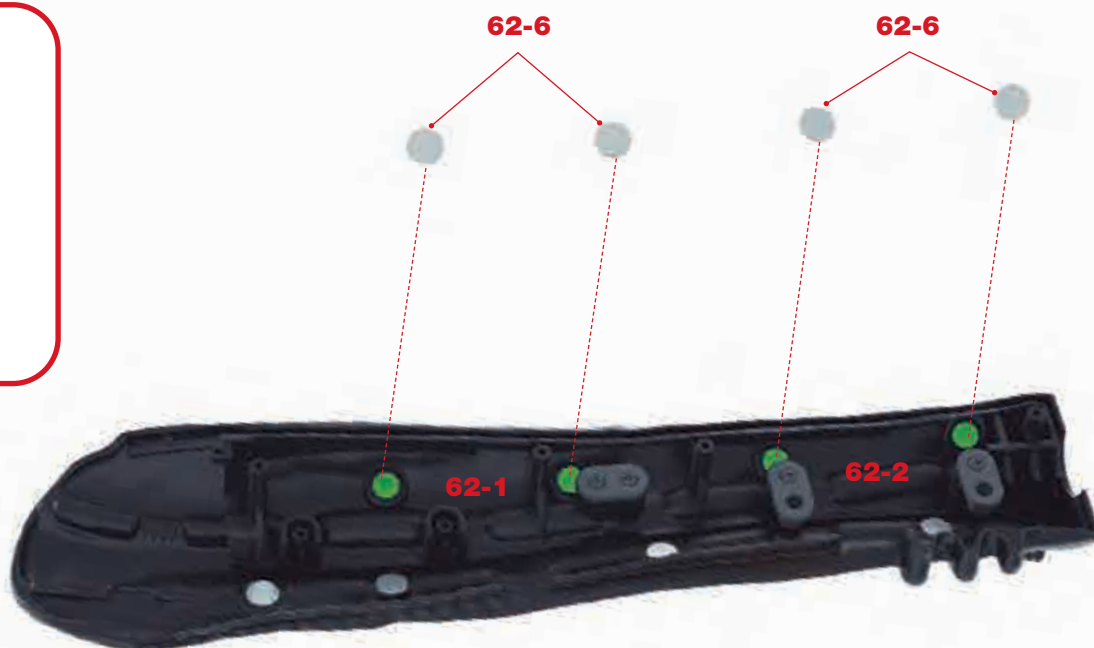

7

KIT 62 IS NOW COMPLETE



*CONSTRUCTION HAS BEGUN ON
THE LEFT TIBIA AND FURTHER
MAGNETS HAVE BEEN FITTED.*

KIT 63: THE LEFT LEG (II)


In this kit you will continue to work on the Xenomorph's left leg.



PARTS SUPPLIED

Ref	Name	Qty	Ref	Name	Qty
63-1	Left Tibia 3	1	63-4	Left Calf Skin	1
63-2	Left Tibia 4	1	63-5	Magnets	8
63-3	Connectors	3	63-6	2.3x6mm screws (1 spare)	9

KIT 63: THE LEFT LEG (II)

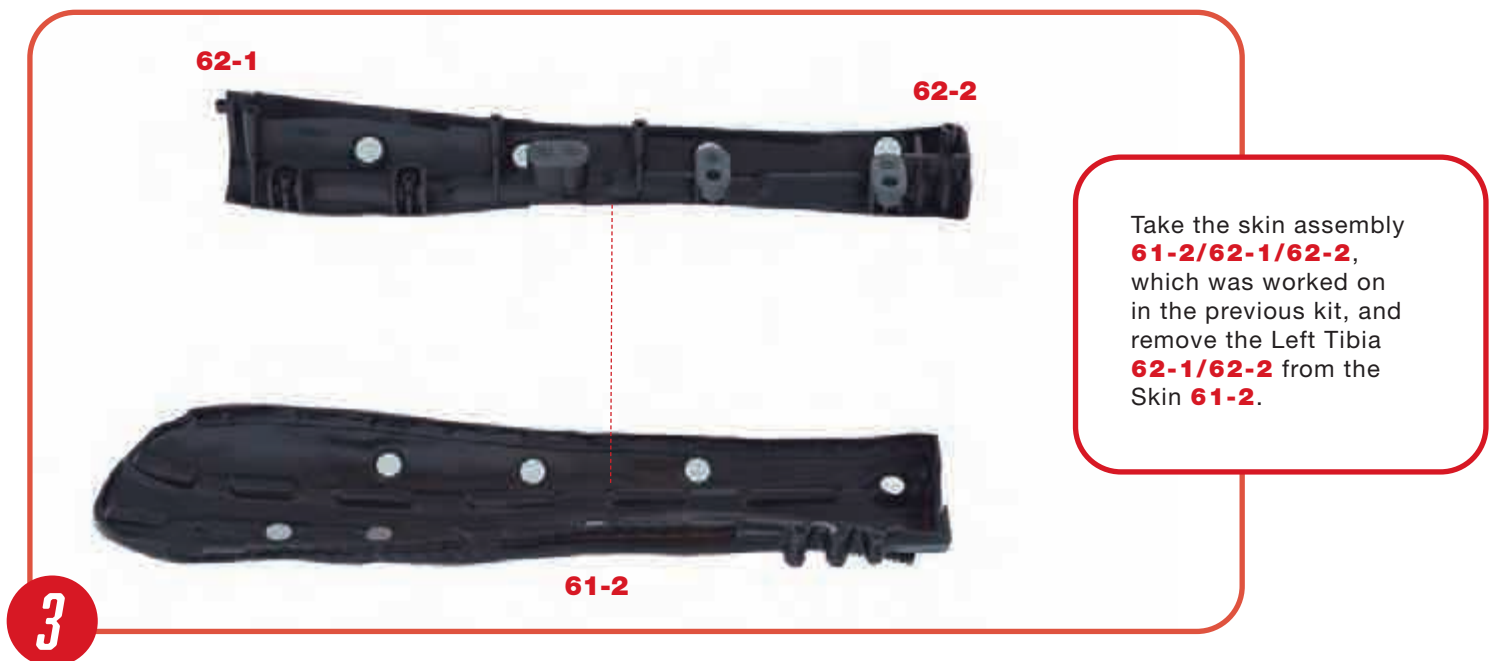


KIT 63: THE LEFT LEG (II)



4

Take the Tibia assembly **63-1/63-2** from step 2 and join it to assembly **62-1/62-2**. This is done by fitting the two free Connectors **62-3** over the raised screw sockets on Left Tibia **63-2**.

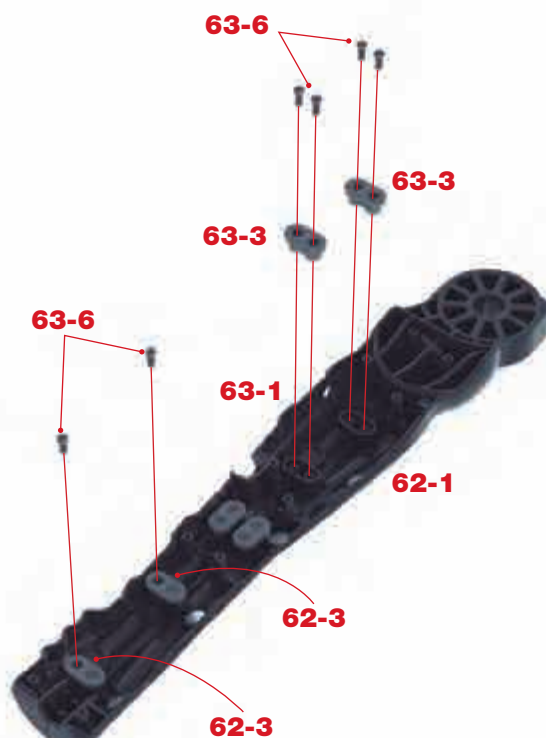

5



Fit the remaining Connectors **63-3** into the oval recesses, as shown. Secure these and the other connectors **62-3** in place with six 2.3x6mm screws **63-6**.

Fit the tibia assembly **62-1/62-2/63-1/63-2** inside the skin **61-2**.

6



KIT 63: THE LEFT LEG (II)

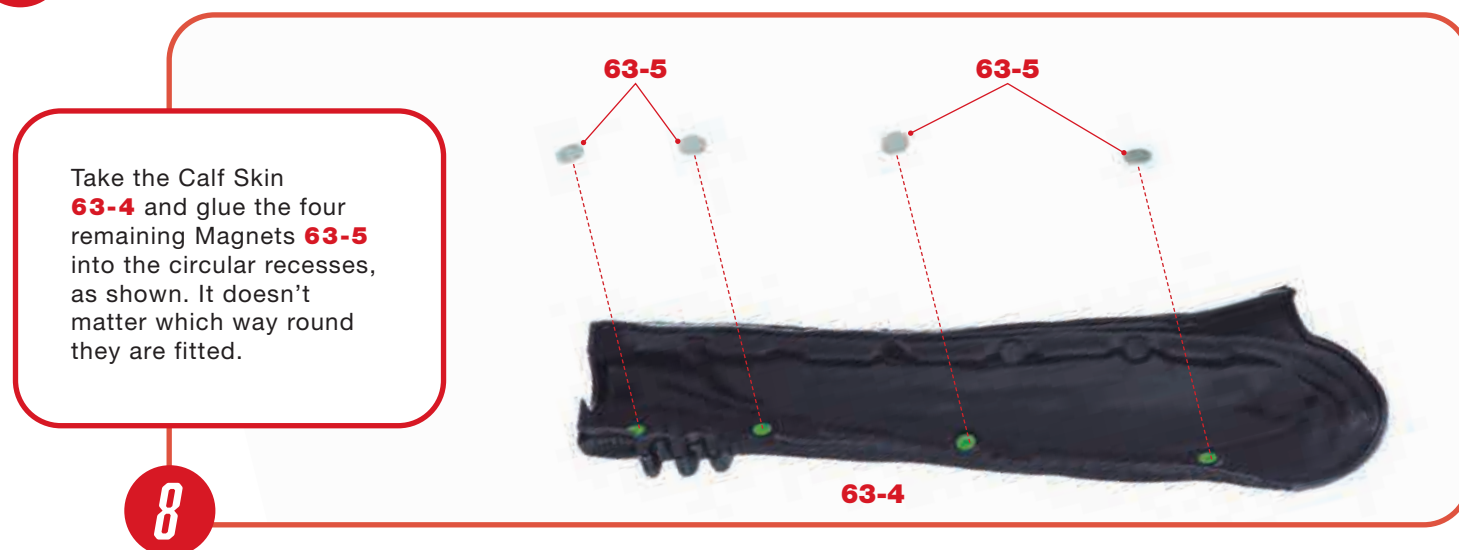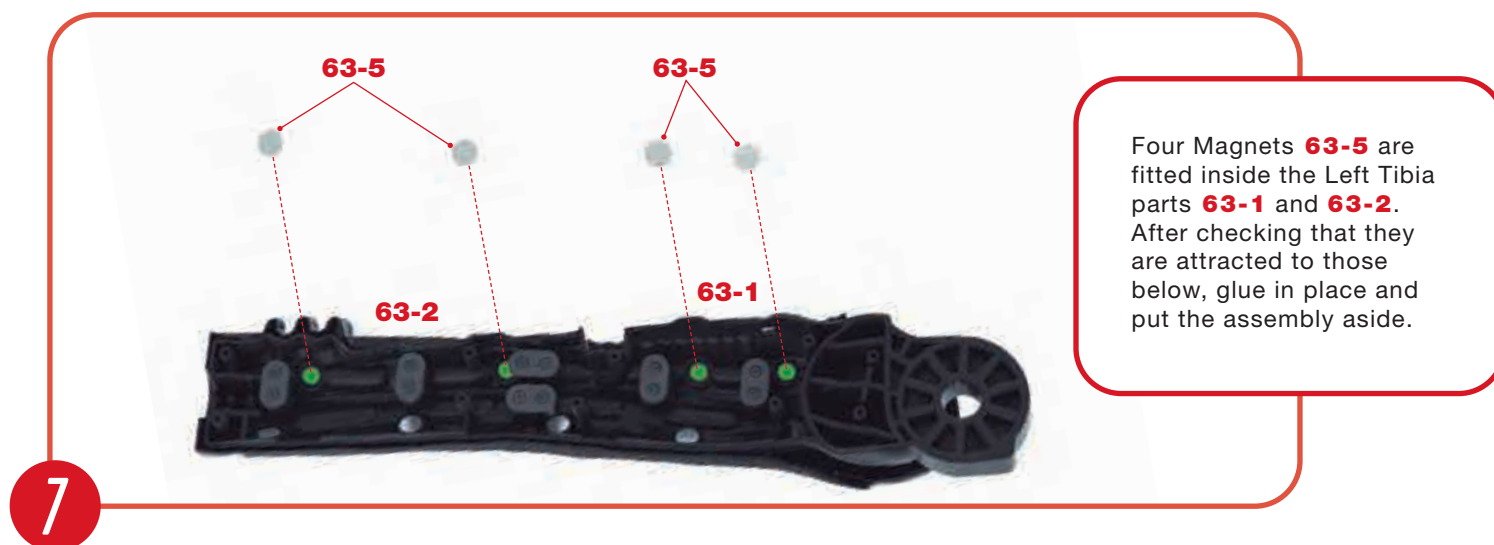

KIT 63 IS COMPLETE



*CONSTRUCTION HAS CONTINUED
ON THE LEFT LEG WITH MAGNETS
AND CONNECTORS BEING FITTED.*

KIT 64: THE LEFT LEG (III)

In this kit you will continue working on parts of the Xenomorph’s left tibia.

64-1



64-2



64-3



64-4



64-5



64-6






64-7





PARTS SUPPLIED

Ref	Name	Qty	Ref	Name	Qty
64-1	Left Tibia 5	1	64-5	Pipe L6	1
64-2	Left Tibia 6	1	64-6	Magnets	8
64-3	Connectors	3	64-7	2.3x6mm screws (1 spare)	5
64-4	Pipe L5	1			

KIT 64: THE LEFT LEG (III)

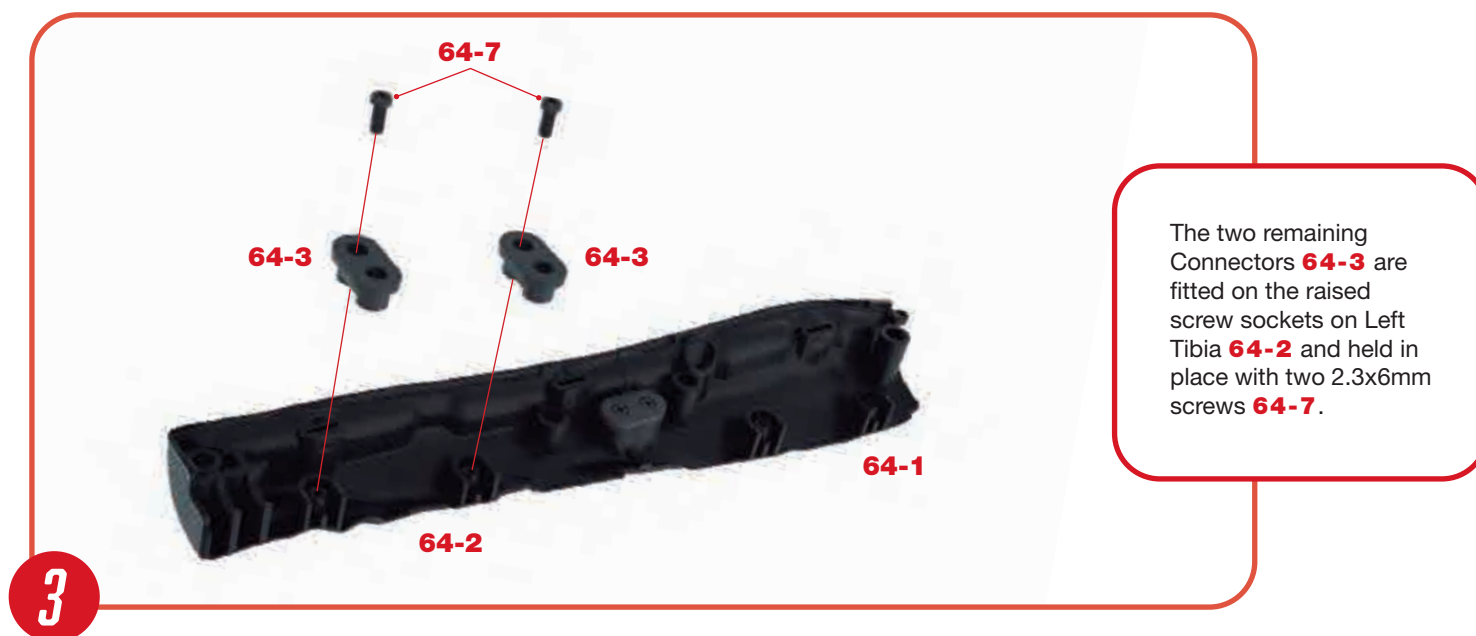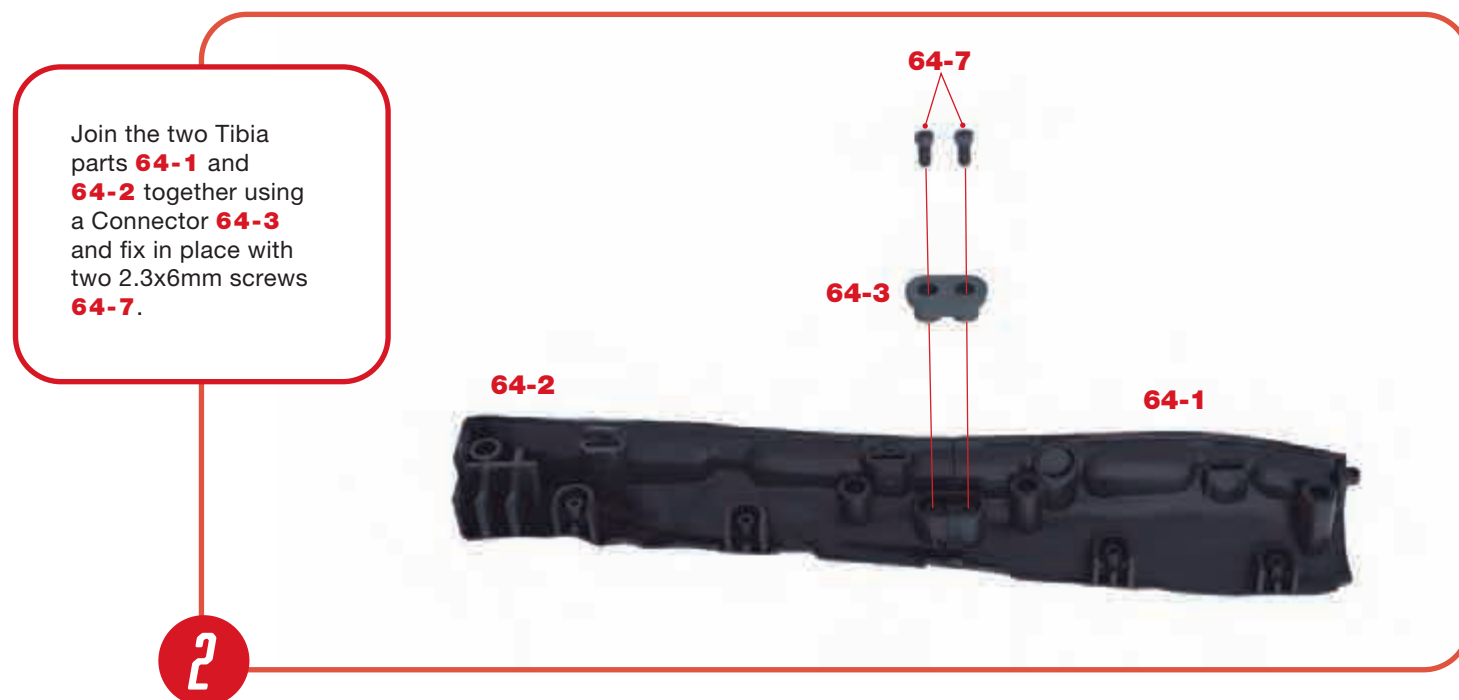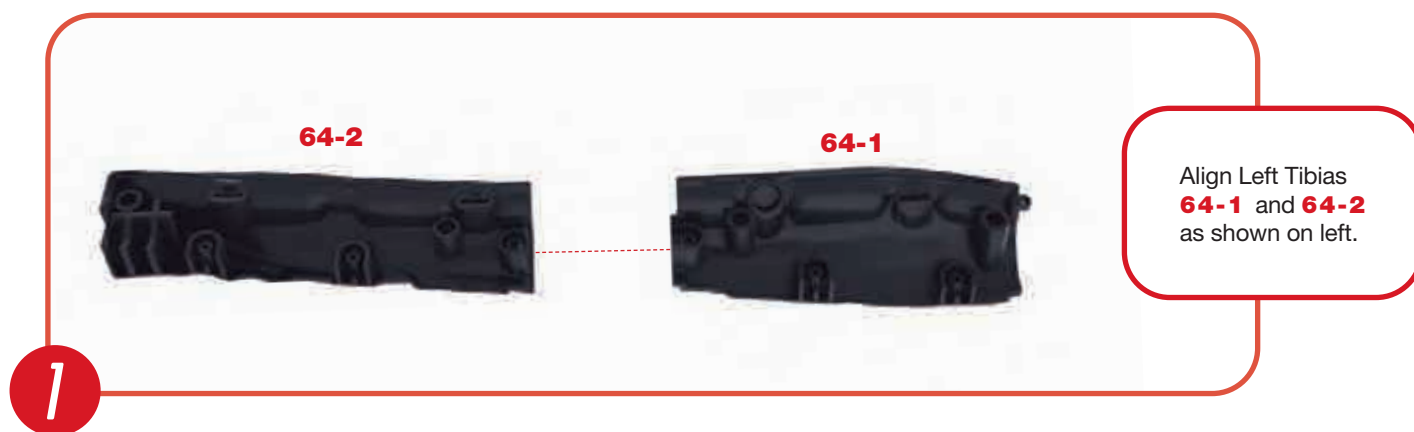


KIT 64: THE LEFT LEG (III)

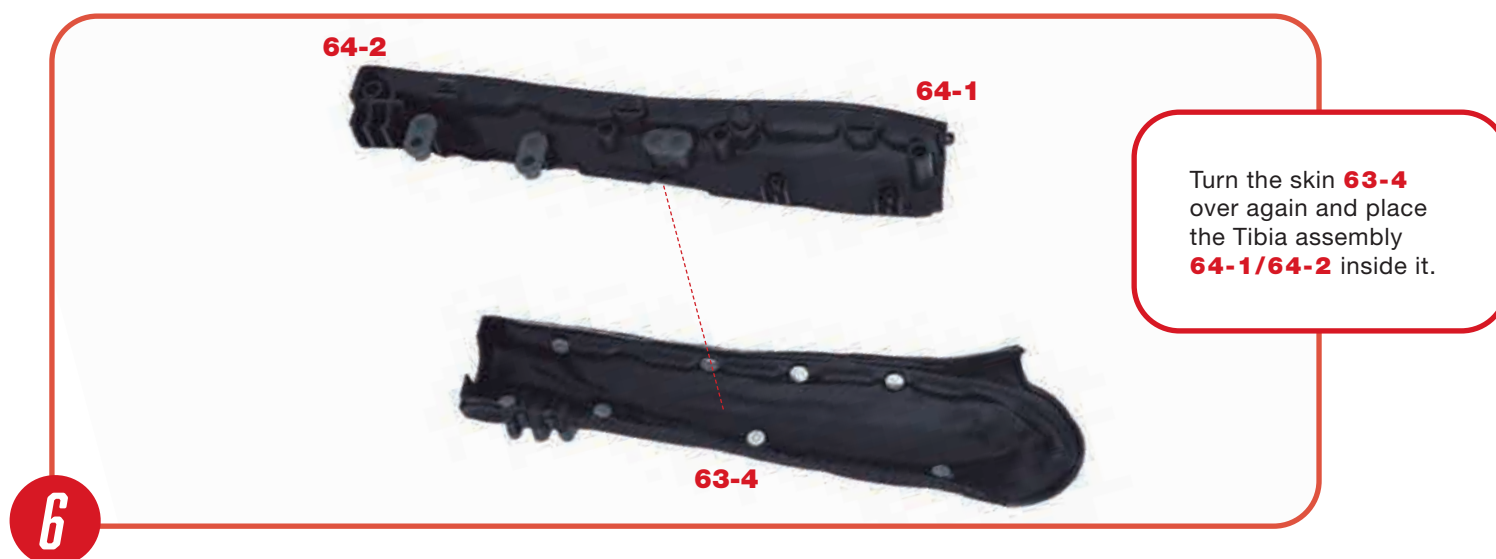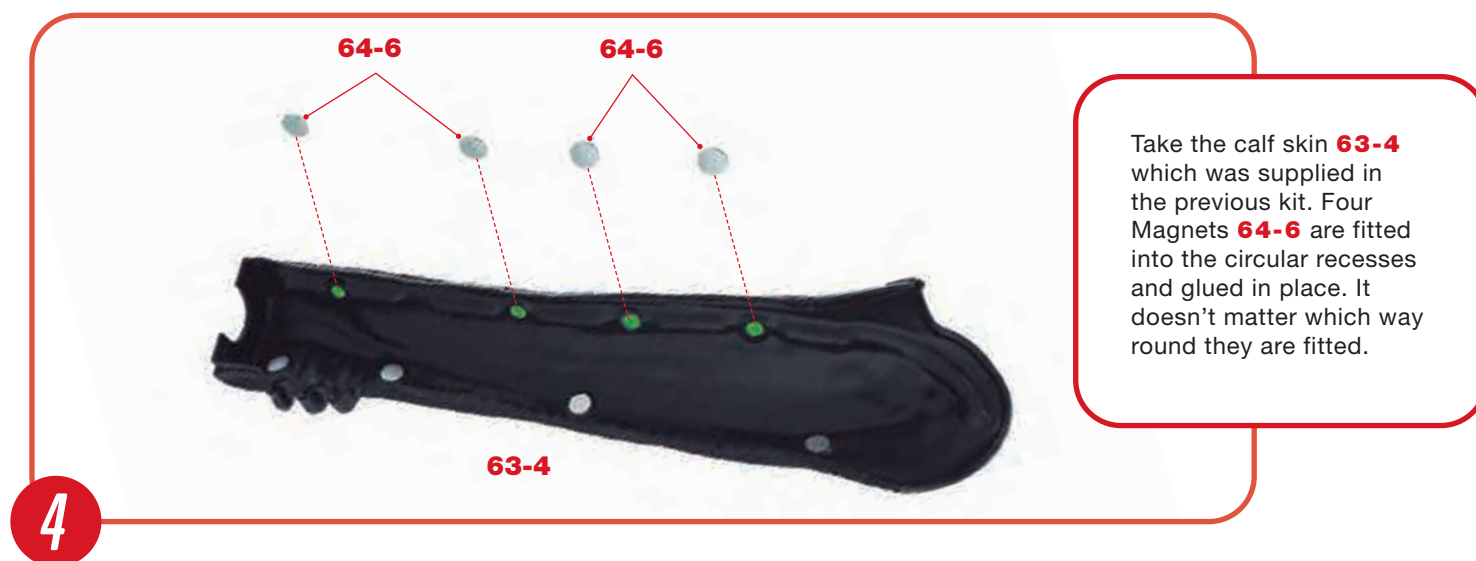

KIT 64: THE LEFT LEG (III)

Next, four Magnets **64-6** are fixed into the recesses on the tibia assembly **64-1/64-2**. These need to be fitted so that they are attracted to the magnets directly below. Once certain they are orientated correctly, glue in place.

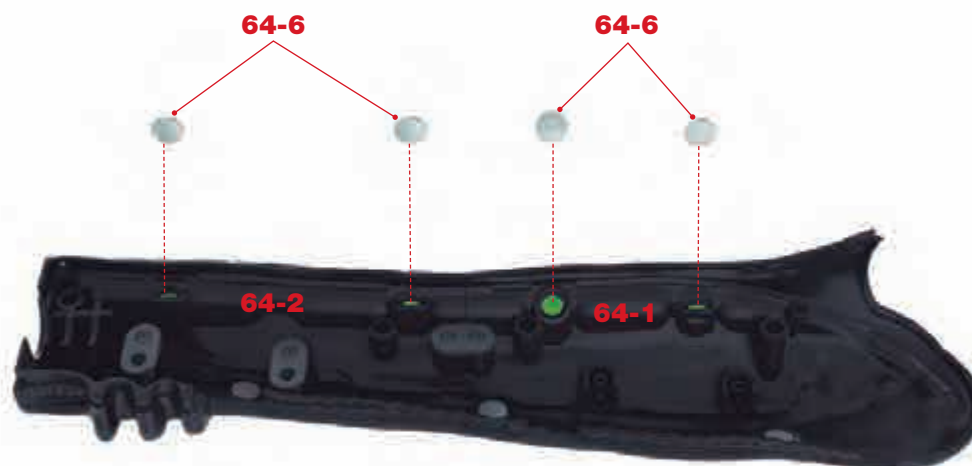

7


KIT 64 IS COMPLETE



*FURTHER WORK HAS BEEN COMPLETED
ON THE LEFT LEG, WITH MAGNETS, PIPES
AND CONNECTORS FITTED.*

KIT 65: THE LEFT LEG (IV)

In this kit you will continue working on parts of the Xenomorph's left tibia.

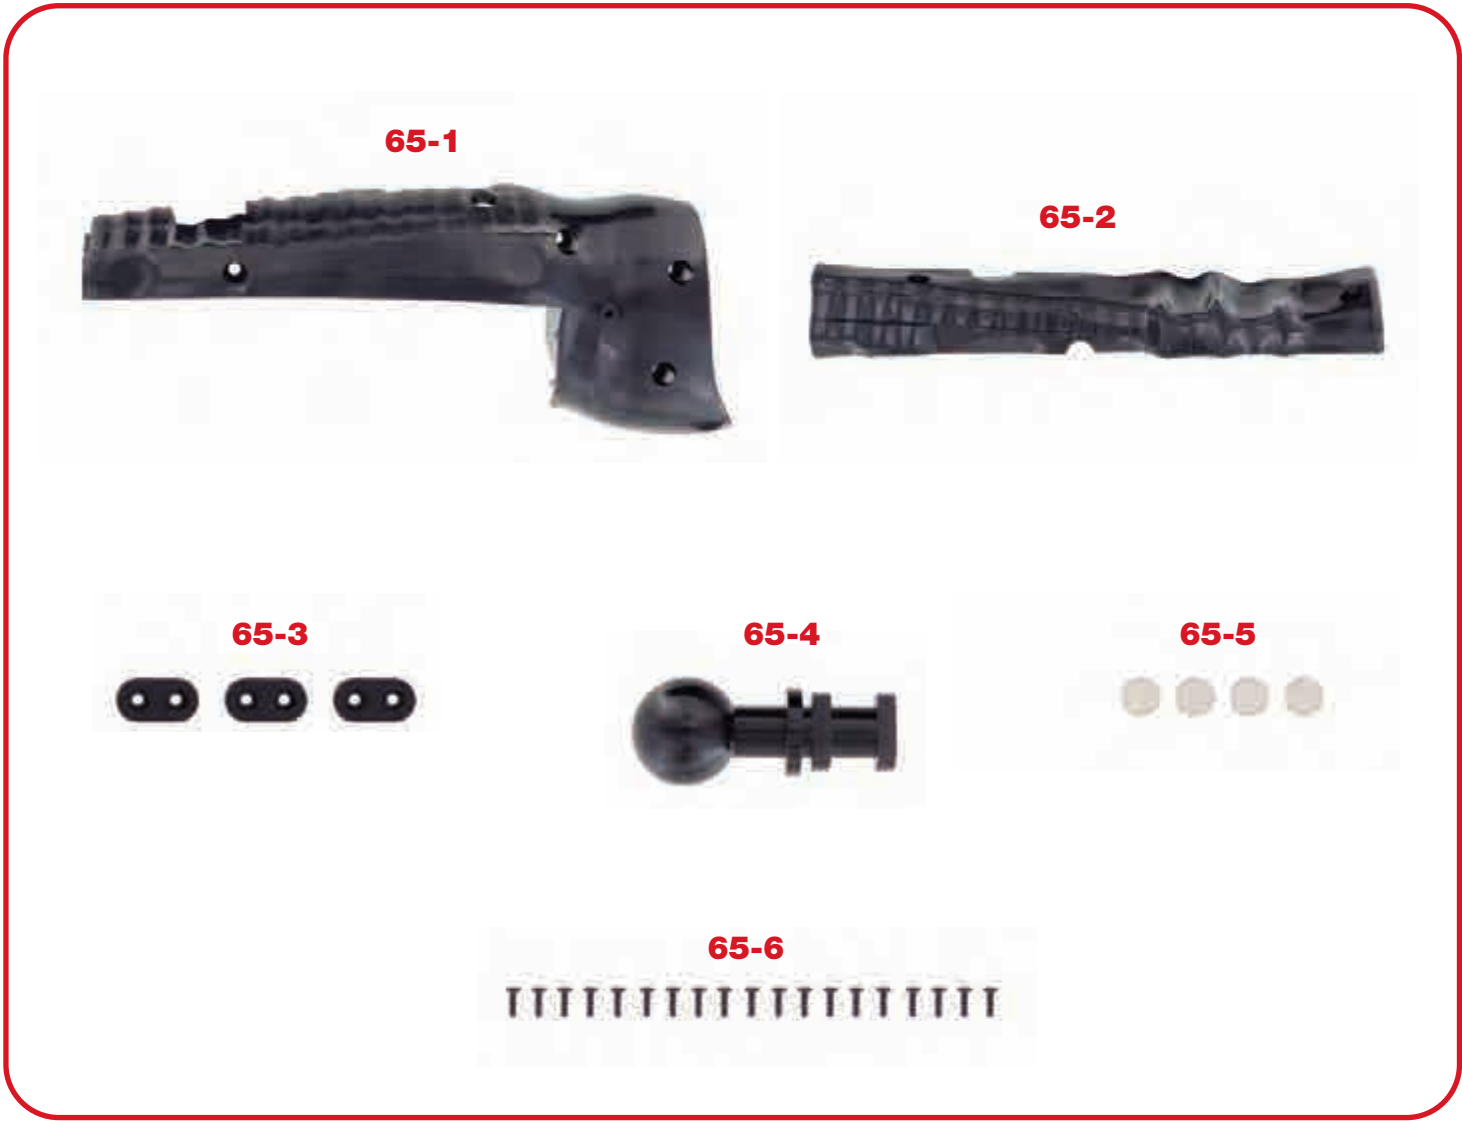

PARTS SUPPLIED

Ref	Name	Qty	Ref	Name	Qty
65-1	Left Tibia 7	1	65-4	Ball Joint	1
65-2	Left Tibia 8	1	65-5	Magnets	4
65-3	Connectors	3	65-6	2.3x6mm screws (1 spare)	19

KIT 65: THE LEFT LEG (IV)




KIT 65: THE LEFT LEG (IV)



4

Assemblies **64-1/64-2** and **65-1/65-2** are now joined together. There is a locating hole on part **64-1** (circled) which fits over a peg on part **65-1** (arrow) and the free side of the connectors **64-3** are fitted over the raised screw sockets in Left Tibia **65-2**.

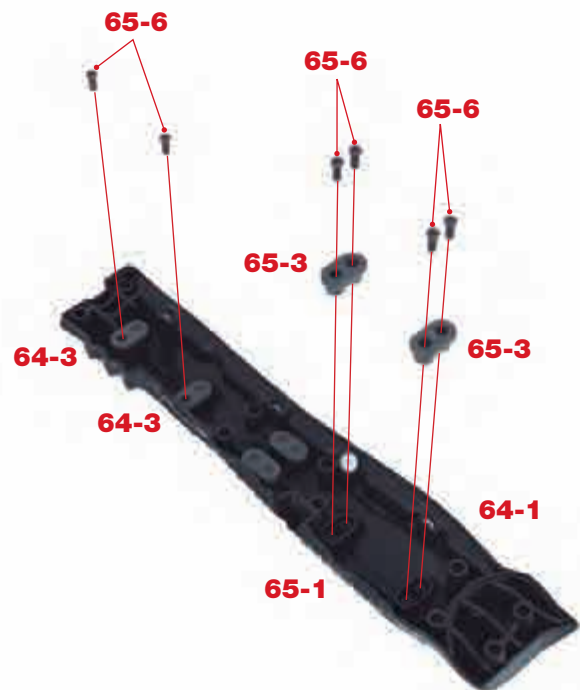

5

Fit the remaining two Connectors **65-3** over the oval recesses inside Tibia **64-1** and **65-1** and fix in place with four 2.3x6mm screws **65-6**. Take a further two 2.3x6mm screws **65-6** to secure the connectors from the previous step.




6


Fit the tibia assembly **64-1/64-2/65-1/65-2** inside the skin **63-4**.

KIT 65: THE LEFT LEG (IV)

Four Magnets **65-5** are fitted into the circular recesses inside the Tibia section **65-1/65-2**. After checking that they are orientated so that they are attracted to the magnets directly below, glue in place.

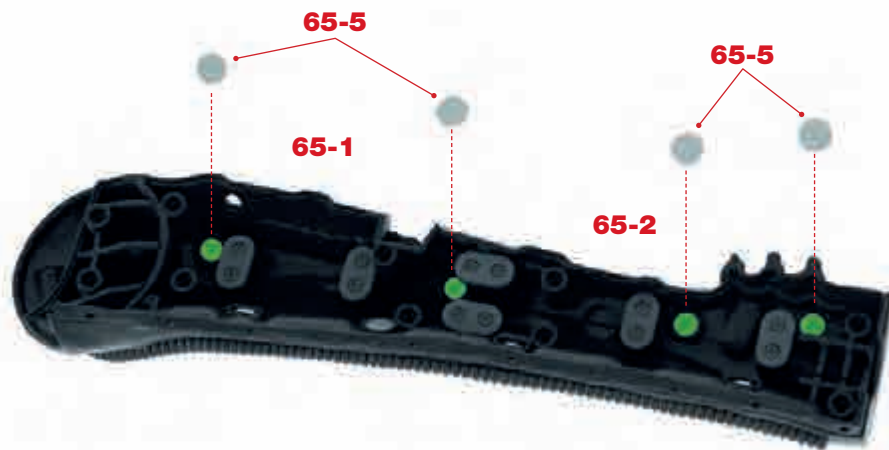


7

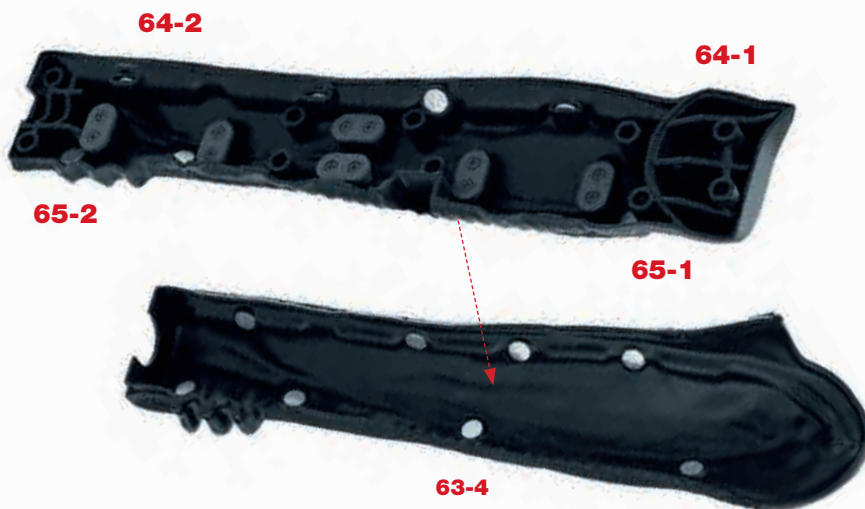

Top: Remove the skin **63-4** and put to one side.

Bottom: Take the assembly **62-1/62-2/63-1/63-2** which was worked on in kit 63, and remove the skin **61-2**. Put this to one side.

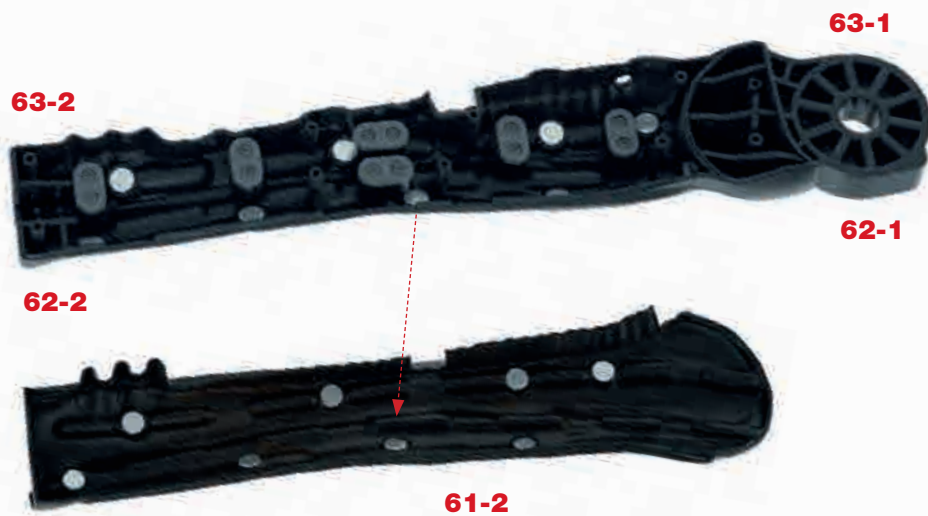


8

KIT 65: THE LEFT LEG (IV)

Sandwich the Ball Joint **65-4**, supplied with this kit, between the two recesses formed by the tibia assemblies **62-2/63-2** and **64-2/65-2**, as shown. Then join the sections together.



KIT 65: THE LEFT LEG (IV)

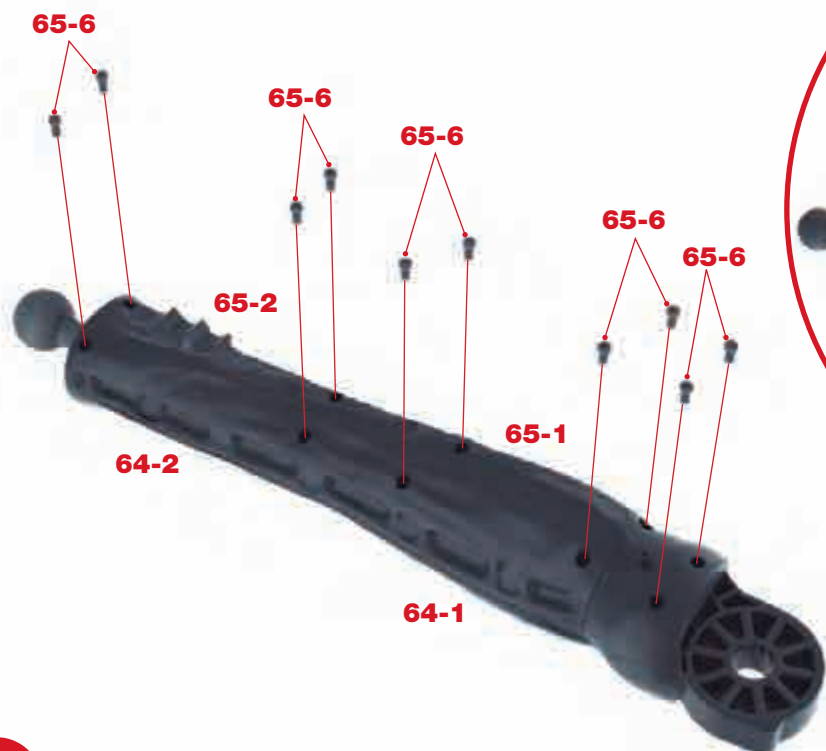

Holding the assembly together, secure in place with ten 2.3x6mm screws **65-6**, as shown above.

10

KIT 65 IS COMPLETE

THE LEFT TIBIA SECTIONS HAVE BEEN JOINED TOGETHER AND FURTHER MAGNETS ADDED TO THE SKIN.



KIT 66: THE LEFT LEG (V)


In this kit you will start to assemble parts of the Xenomorph’s left thigh.



PARTS SUPPLIED

Ref	Name	Qty	Ref	Name	Qty
66-1	Left Thigh Skin Covering	1	66-4	Connectors	2
66-2	Left Femur 1	1	66-5	Magnets	6
66-3	Left Femur 2	1	66-6	2.3x6mm screws (1 spare)	5

KIT 66: THE LEFT LEG (V)

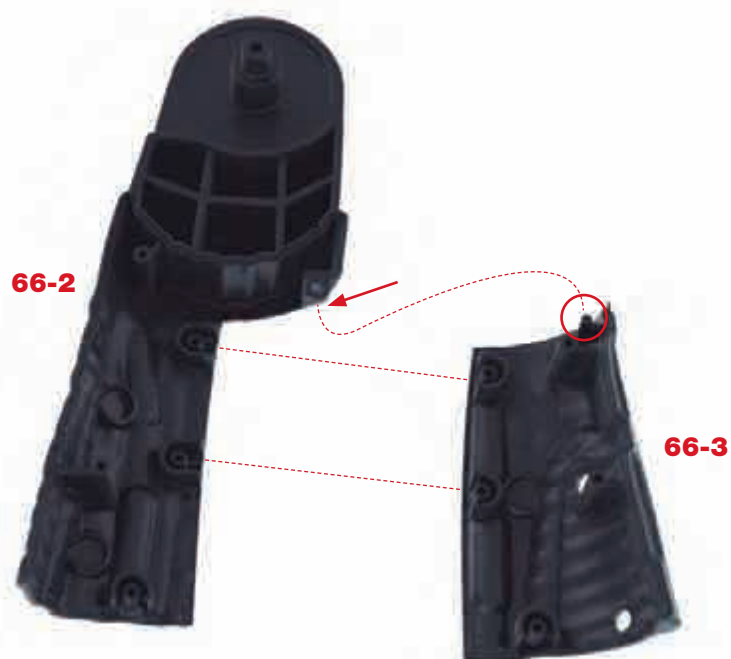

The two Femur parts **66-2** and **66-3** are joined by aligning the parts, as shown and fitting the locating hole in Femur **66-2** (arrow) over the peg on Femur **66-3** (circle).

1


Secure the femur parts together by fitting two Connectors **66-4** into the oval recesses formed by the two sections. Fix in place with four 2.3x6mm screws **66-6**.



2

KIT 66: THE LEFT LEG (V)

Fit three Magnets **66-5** into the circular recesses inside the Thigh Skin Covering **66-1** and glue in place. The orientation of the magnets isn't important.

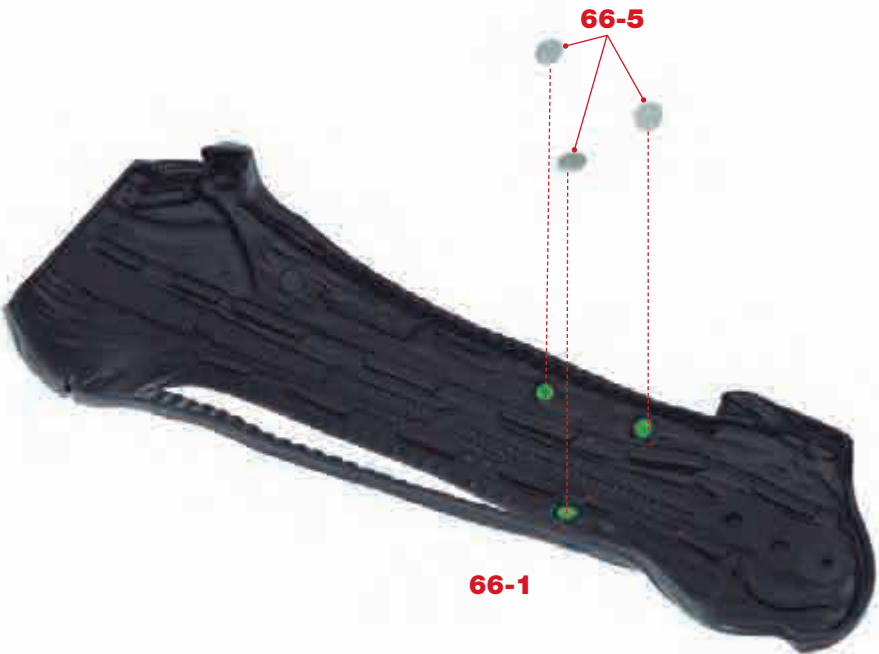

3




Place the Femur assembly **66-2/66-3** inside the Skin **66-1**, making sure that the circular recesses in the Femur **66-2/66-3** align with the magnets in the skin.

4


KIT 66: THE LEFT LEG (V)

Fit the remaining three Magnets **66-5** into the recesses inside the femur assembly **66-2/66-3**. Once certain that they are attracted to the magnets below, glue in place.

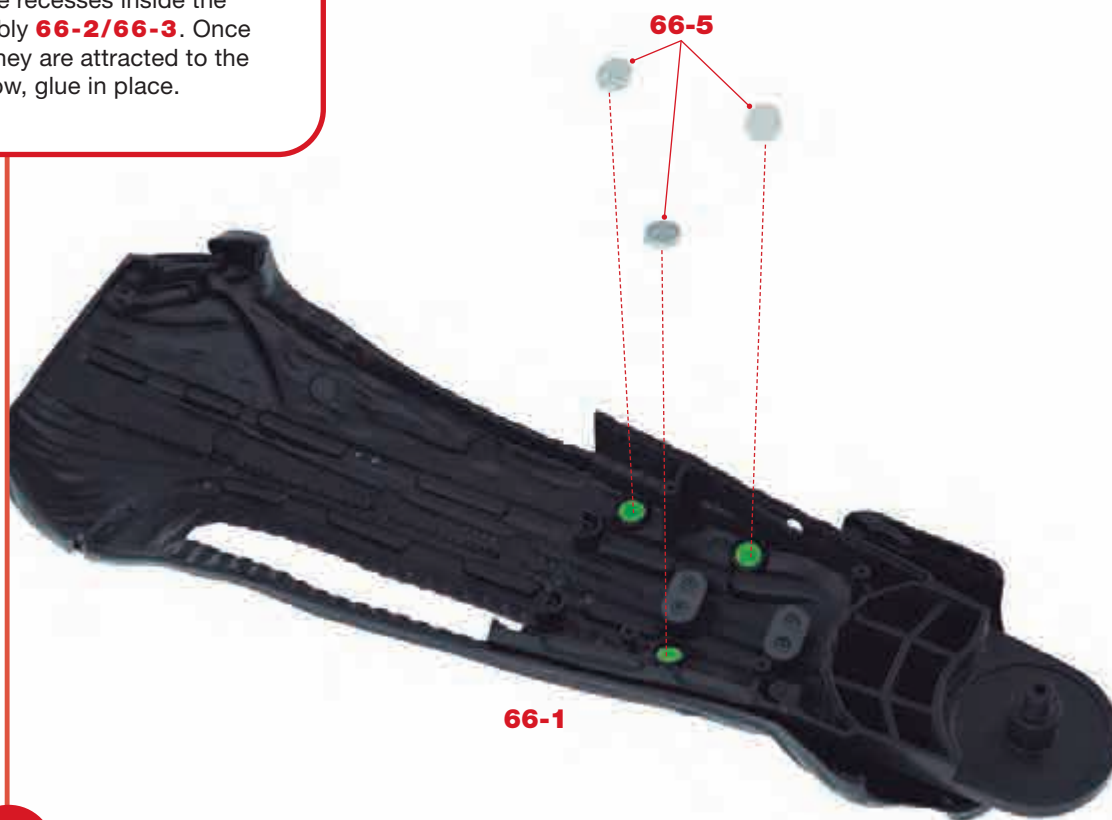

5

KIT 66 IS COMPLETE

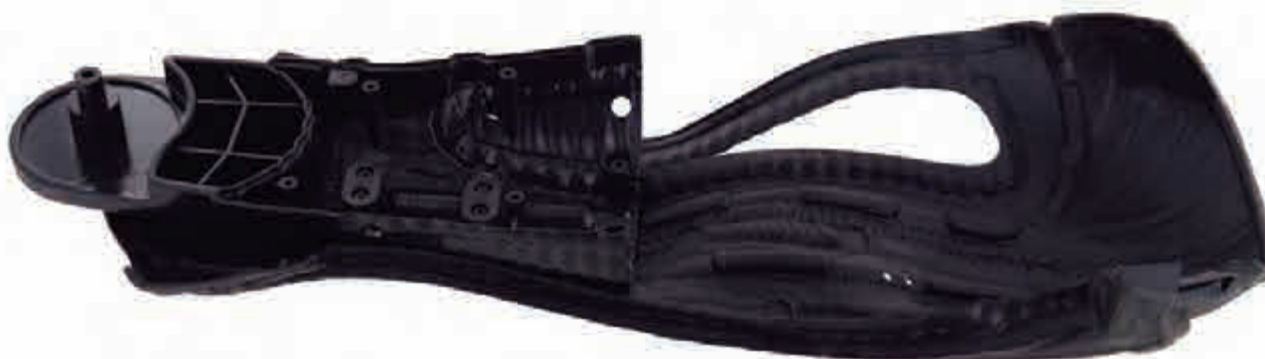

*WORK HAS BEGUN ON THE LEFT THIGH
WITH SECTIONS OF THE FEMUR BEING
JOINED AND MAGNETS ADDED.*

KIT 67: THE LEFT LEG (VI)

In this kit you will join the different parts of the left femur and attach the outer skin covering.



PARTS SUPPLIED


Ref	Name	Qty	Ref	Name	Qty
67-1	Left Femur 3	1	67-5	Pipe A2	1
67-2	Left Femur 4	1	67-6	Pipe A3	1
67-3	Connectors	4	67-7	Magnets	10
67-4	Pipe A1	1	67-8	2.3x6mm screws (1 spare)	9

KIT 67: THE LEFT LEG (VI)

Align the two Femur sections **67-1** and **67-2** as shown on the right.




1

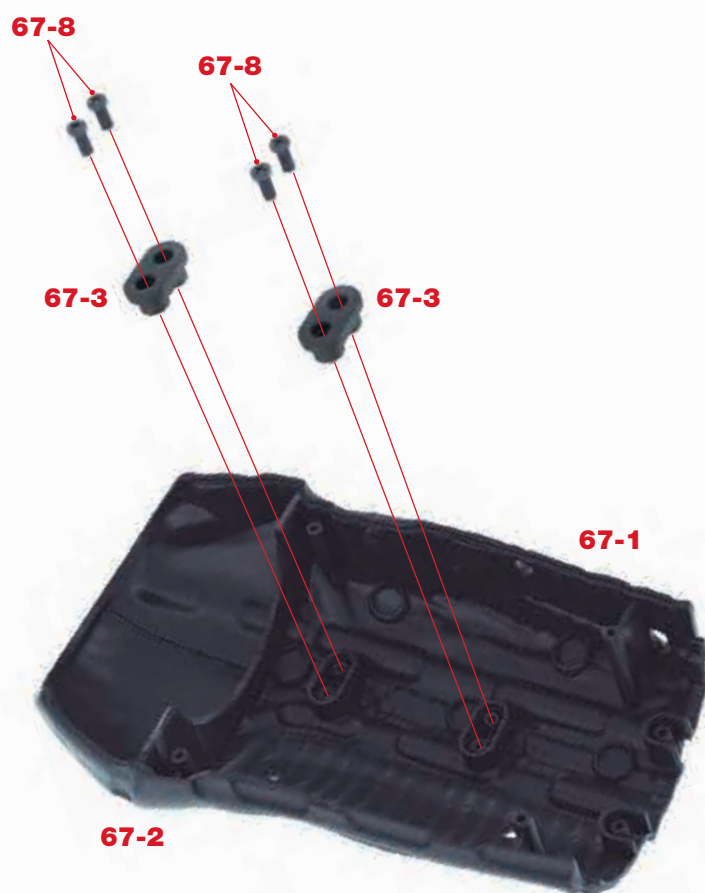

Join the Femur sections **67-1** and **67-2** together by fitting two Connectors **67-3** into the oval recesses formed in the middle. Secure in place with four 2.3x6mm screws **67-8**.

2


KIT 67: THE LEFT LEG (VI)

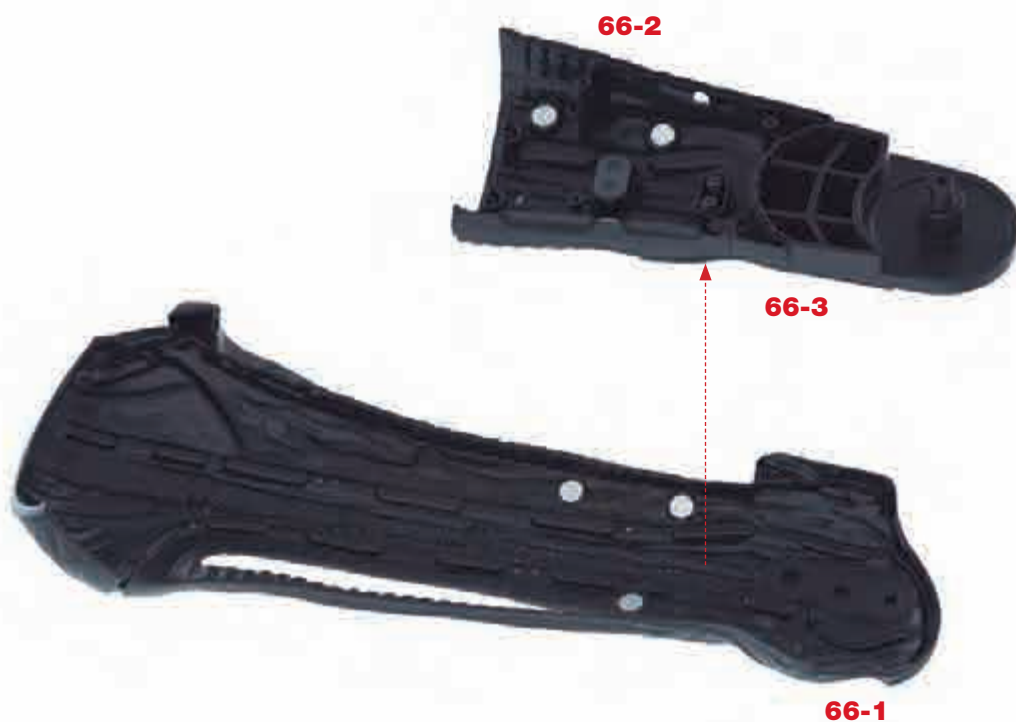

Take the thigh assembly, **66-1/66-2/66-3** which was worked on in the previous kit and remove the femur assembly **66-2/66-3**.


3

Five Magnets **67-7** are glued into the remaining circular recesses in Skin **66-1**, as shown. It doesn't matter which way up they are fitted.

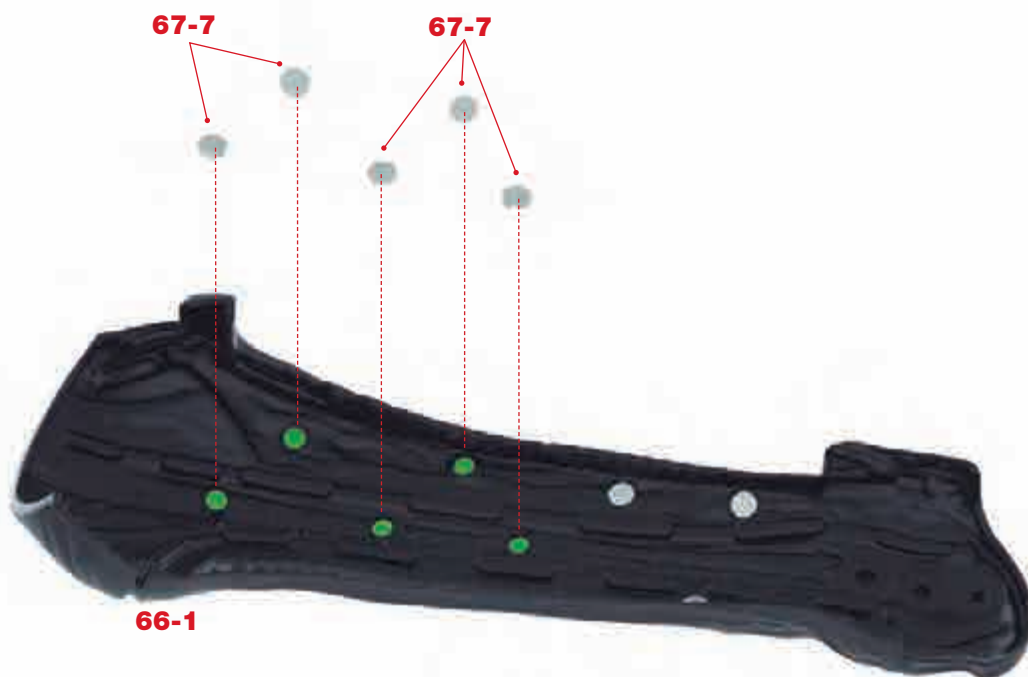


4

KIT 67: THE LEFT LEG (VI)

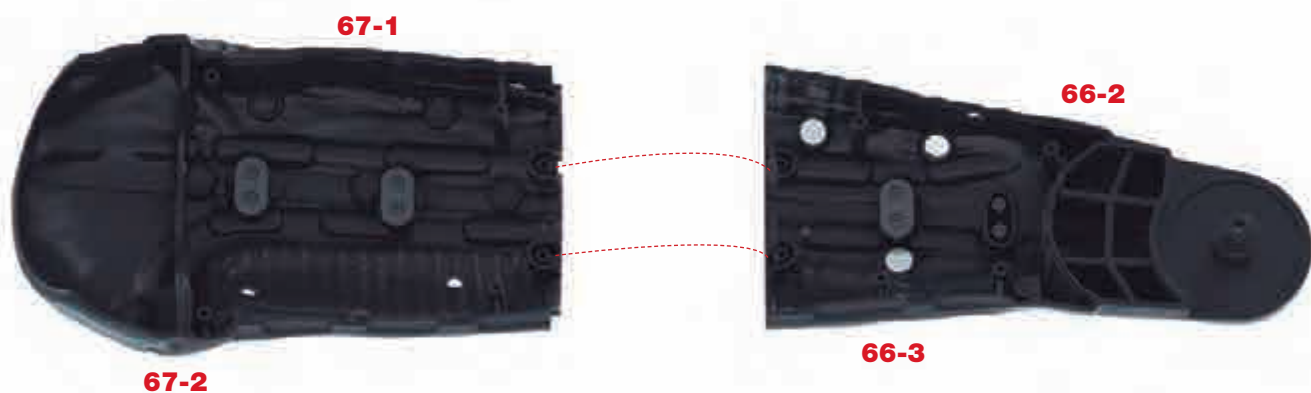


5

Take the femur assembly **66-2/66-3** from the previous kit and align it with assembly **67-1/67-2**, as shown.

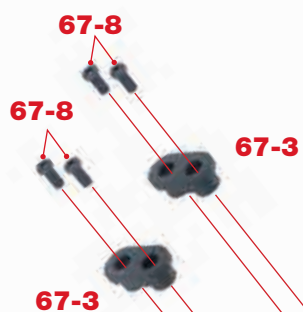


Join the assemblies together by fitting two Connectors **67-3** over the raised screw sockets inside the oval recesses. Fix in place with four 2.3x6mm screws **67-8**.

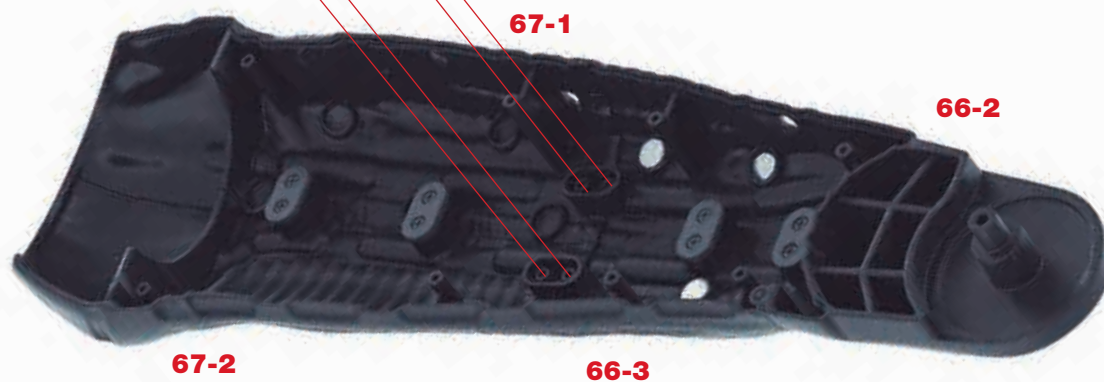

6

KIT 67: THE LEFT LEG (VI)

Turn the skin **66-1** over and test-fit the Pipes A3 **67-6**, A2 **67-5** and A1 **67-4**, from left to right, into the slots running along the length of the skin. There are locating pegs at one end of the pipes and they will only fit into the specific slots assigned to them. Once you are happy with the fit, glue in place.

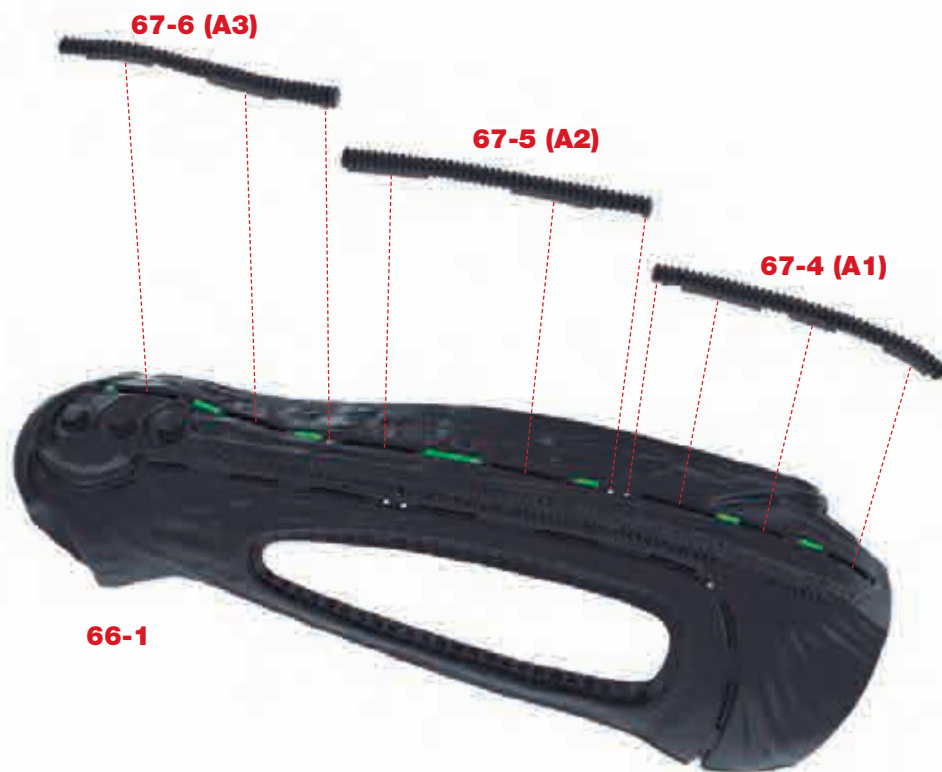


7



Place the femur assembly **66-2/66-3/67-1/67-2** inside the skin **66-1**.

8

KIT 67: THE LEFT LEG (VI)

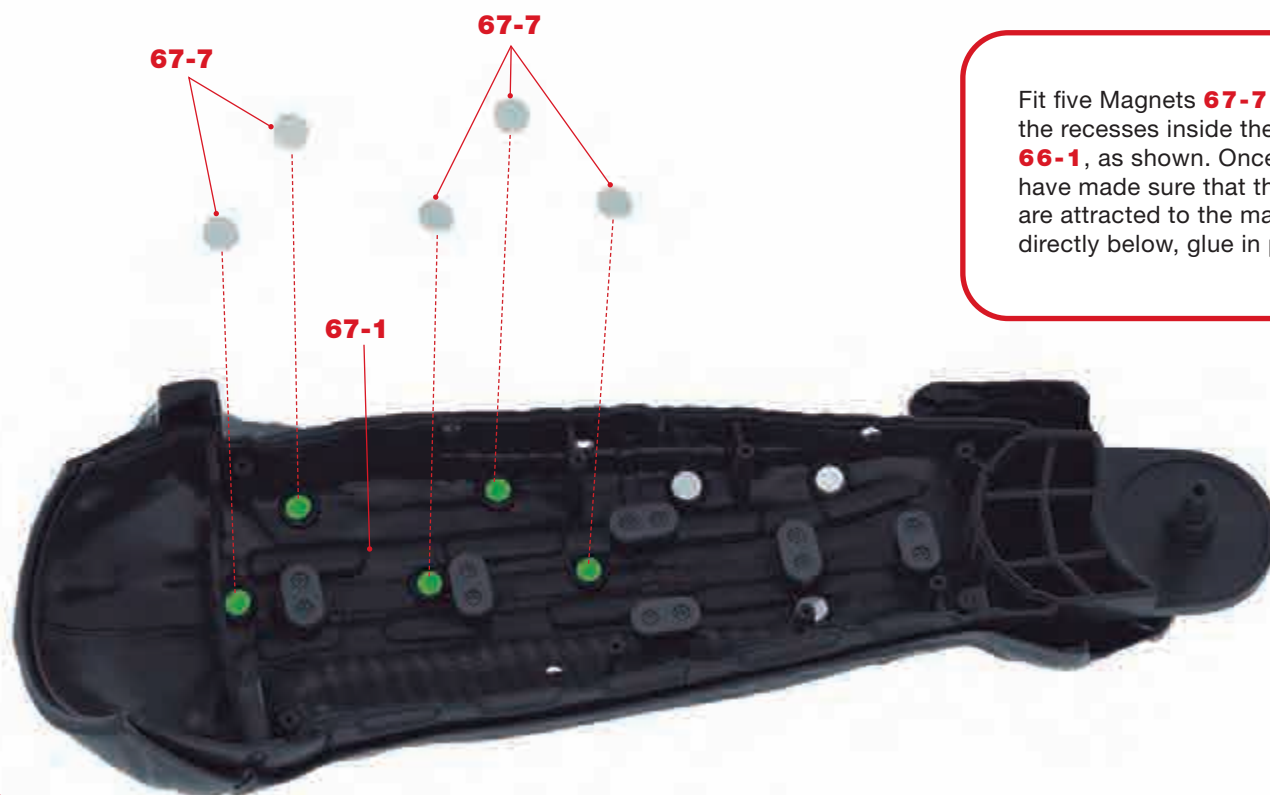

Fit five Magnets **67-7** into the recesses inside the skin **66-1**, as shown. Once you have made sure that they are attracted to the magnets directly below, glue in place.

9

KIT 67 IS COMPLETE

WORK HAS CONTINUED ON THE LEFT FEMUR WITH SECTIONS BEING JOINED TOGETHER AND MAGNETS FITTED.



KIT 68: THE LEFT LEG (VII)



In this kit you will continue working on parts of the Xenomorph's left femur and left thigh.




PARTS SUPPLIED

Ref	Name	Qty	Ref	Name	Qty
68-1	Left Femur 5	1	68-5	Pipe B2	1
68-2	Left Femur 6	1	68-6	Connector	2
68-3	Left Thigh Skin	1	68-7	Magnets	8
68-4	Pipe B1	1	68-8	2.3x6mm screws (1 spare)	5

KIT 68: THE LEFT LEG (VII)

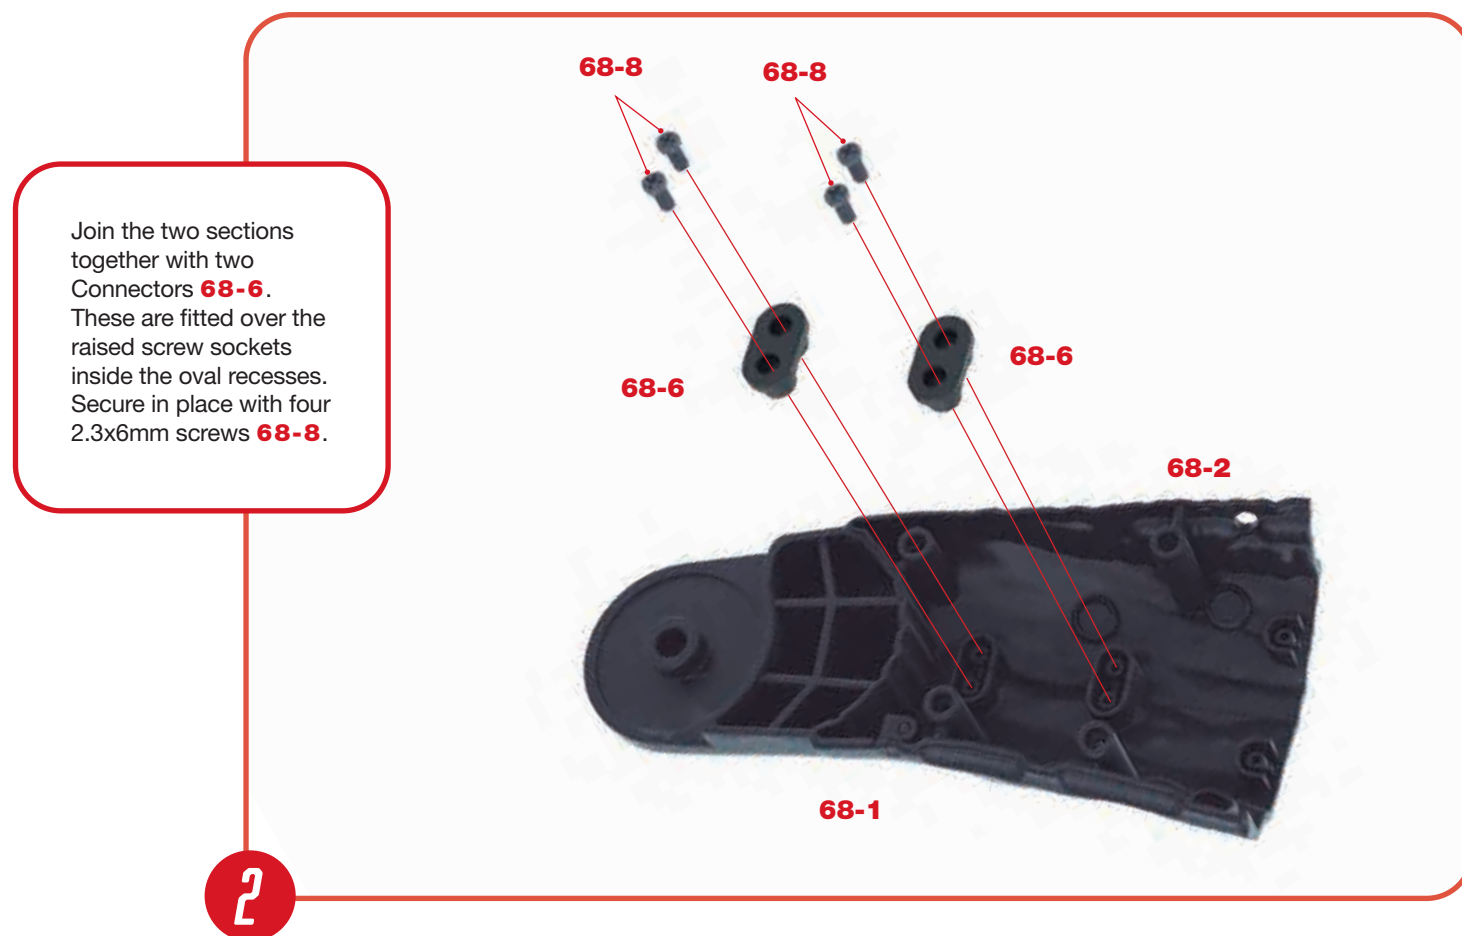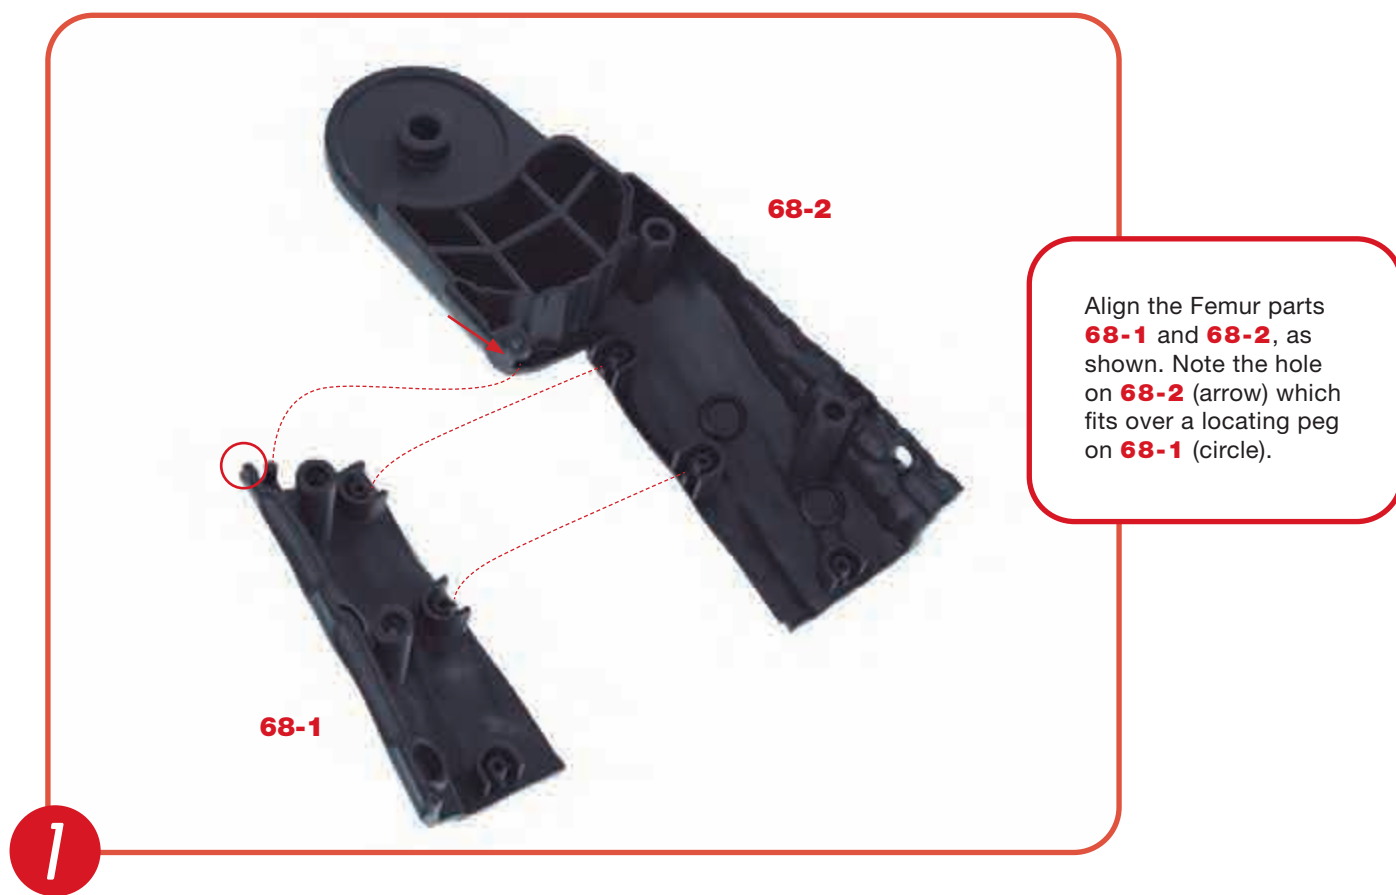

KIT 68: THE LEFT LEG (VII)

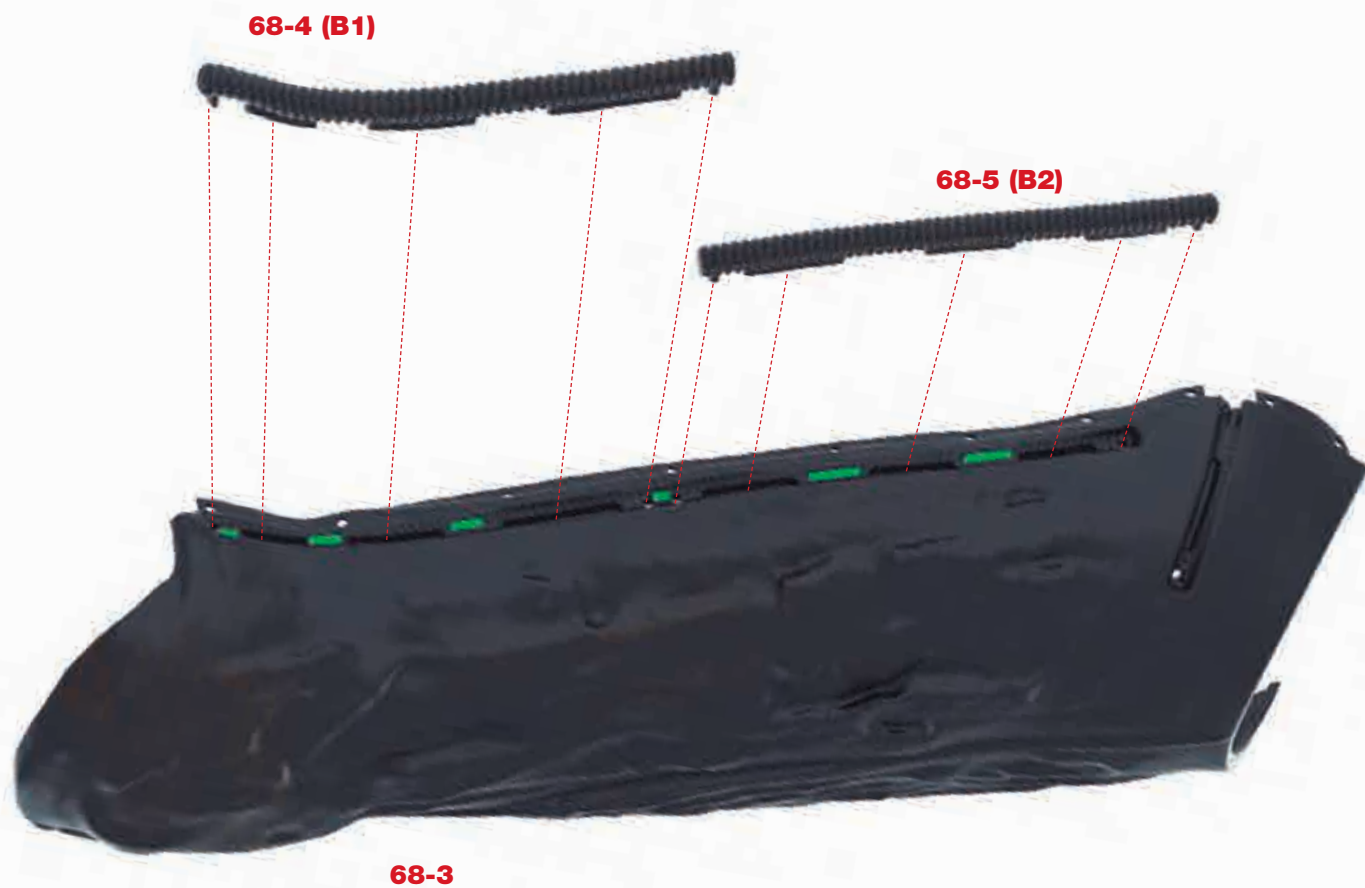

3

The two Pipes B1 **68-4** and B2 **68-5** are test-fitted to the outside of the Left Thigh Skin **68-3**; the tabs on the pipes fit into corresponding slots in the skin. When certain of a good fit, glue in place.

KIT 68: THE LEFT LEG (VII)

4



Turn the Skin **68-3** over and glue four Magnets **68-7** into the circular recesses inside; it doesn't matter which way up they are fitted. Make sure the magnets are firmly in place before moving on to the next step.




Place the Femur assembly **68-1/68-2** inside the Skin **68-3**. Make sure that the circular recesses in assembly **68-1/68-2** align with the magnets fitted below.



5

KIT 68: THE LEFT LEG (VII)

Four Magnets **68-7** are fitted inside the Femur parts **68-1** and **68-2**, as shown. Ensure that, when fixed in place, they are attracted to the magnets directly below.

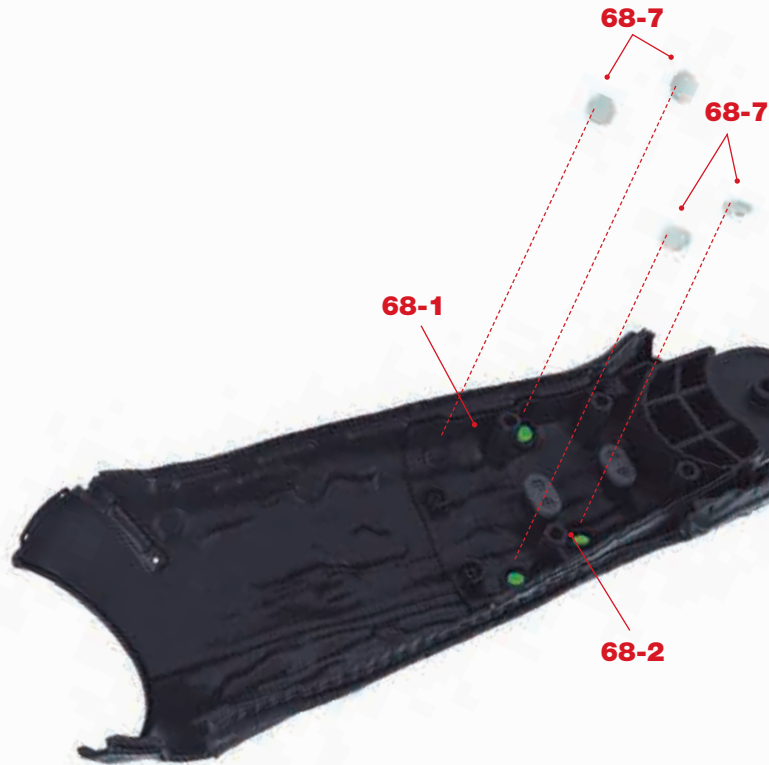

6

PACK 9 AND KIT 68 IS NOW COMPLETE



WORK HAS CONTINUED ON THE LEFT LEG WITH FEMUR PARTS BEING ATTACHED AND MAGNETS FITTED.