

ALIEN

SPECTACULAR

1:2
SCALE

EASY
ASSEMBLY

BUILD THE
TERRIFYING
XENOMORPH
FROM ALIEN

PACK 11
KITS 77 - 84

ALIEN

PACK 11 | BUILD INSTRUCTIONS



KIT 77

THE ABDOMEN (III)

KIT 78

THE ABDOMEN
AND THE TAIL (I)

KIT 79

THE ABDOMEN
AND THE TAIL (II)

KIT 80

THE ABDOMEN
AND THE TAIL (III)

KIT 81

THE ABDOMEN, THE TAIL
AND THE DORSAL GROWTHS (II)

KIT 82

THE TAIL AND THE DORSAL
GROWTHS (I)

KIT 83

THE TAIL AND THE DORSAL
GROWTHS (II)

KIT 84

THE TAIL AND THE DORSAL
GROWTHS (III)

WARNING: Some parts are assembled using magnets. These magnets can cause serious injury if they are swallowed. Keep away from children. If you suspect a magnet has been swallowed, seek medical help straight away.

Some parts may have sharp edges, please handle them with care.

The installation of electronic parts must always be carried out by an adult. When replacing batteries, use the same type of batteries.

Please ensure that the battery compartment is securely fastened before you use the model.

Used batteries should be recycled.

Please make sure to check with your local council how batteries should be disposed of in your area.

Batteries can present a choking danger to small children and may cause serious harm if ingested. Do not leave them lying around and keep any spare batteries locked away at all times.



STEPS & TIPS ONLINE

Hachette Partworks Ltd, 4th Floor, Jordan House,
47 Brunswick Place, London N1 6EB

www.hachettepartworks.com

© 2023/2024 Hachette Partworks Ltd.

© 2023/2024 20th Century Studios.

ALL RIGHTS RESERVED

All parts belong to a kit. Collectors item for adults.

Not suitable for children under 14.



KIT 77: THE ABDOMEN (III)

In this kit you will continue to work on parts of the Xenomorph's abdomen.

77-1



77-2



77-3



77-4



77-5



77-6



77-7



77-8




PARTS SUPPLIED

Ref	Name	Qty	Ref	Name	Qty
77-1	Abdomen 2	1	77-5	Abdomen Skin	1
77-2	Abdomen 3	1	77-6	Connector	4
77-3	Vertebrae 1	1	77-7	Magnets	11
77-4	Abdomen Skin	1	77-8	2.3x6mm screws (1 spare)	11


KIT 77: THE ABDOMEN (III)

1

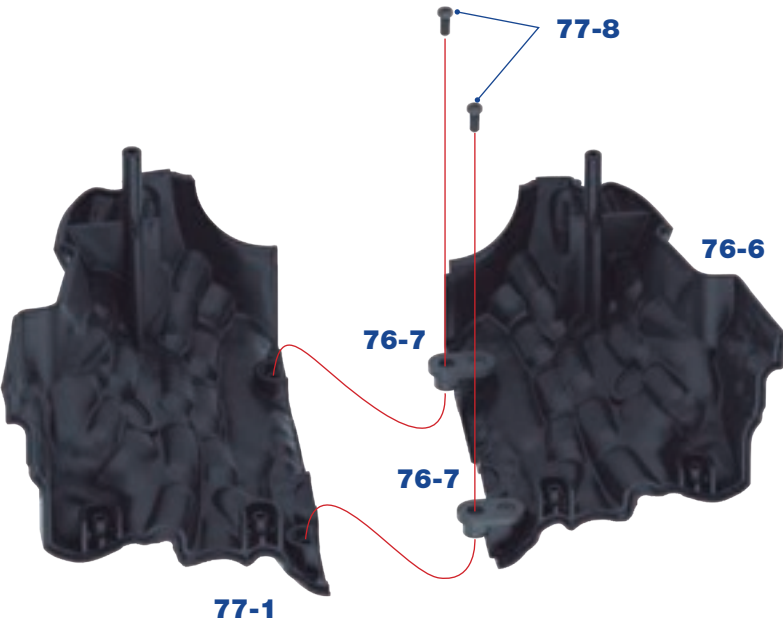


Take the abdomen **76-6** from pack 10 - kit 76 and join it to Abdomen **77-1**. This is done by fitting the two connectors **76-7** over the raised screw sockets on Abdomen **77-1**, as shown. Secure each connector in place with a 2.3x6mm screw.

2

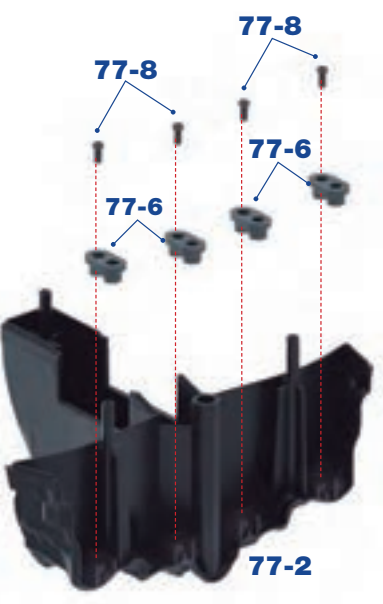


Next take the Abdomen **77-2** and fit four Connectors **77-6** over the raised screw sockets as shown by the red lines in the diagram. Fix each Connector **77-6** in place with a 2.3x6mm screw **77-8**.

3




Take the assembly **76-6/77-1** from step 1 and join it to Abdomen **77-2** by fitting the four Connectors **77-6** over the raised screw sockets on the assembly **76-6/77-1**. Secure each Connector **77-6** in place with a 2.3x6mm screw **77-8**.

KIT 77: THE ABDOMEN (III)

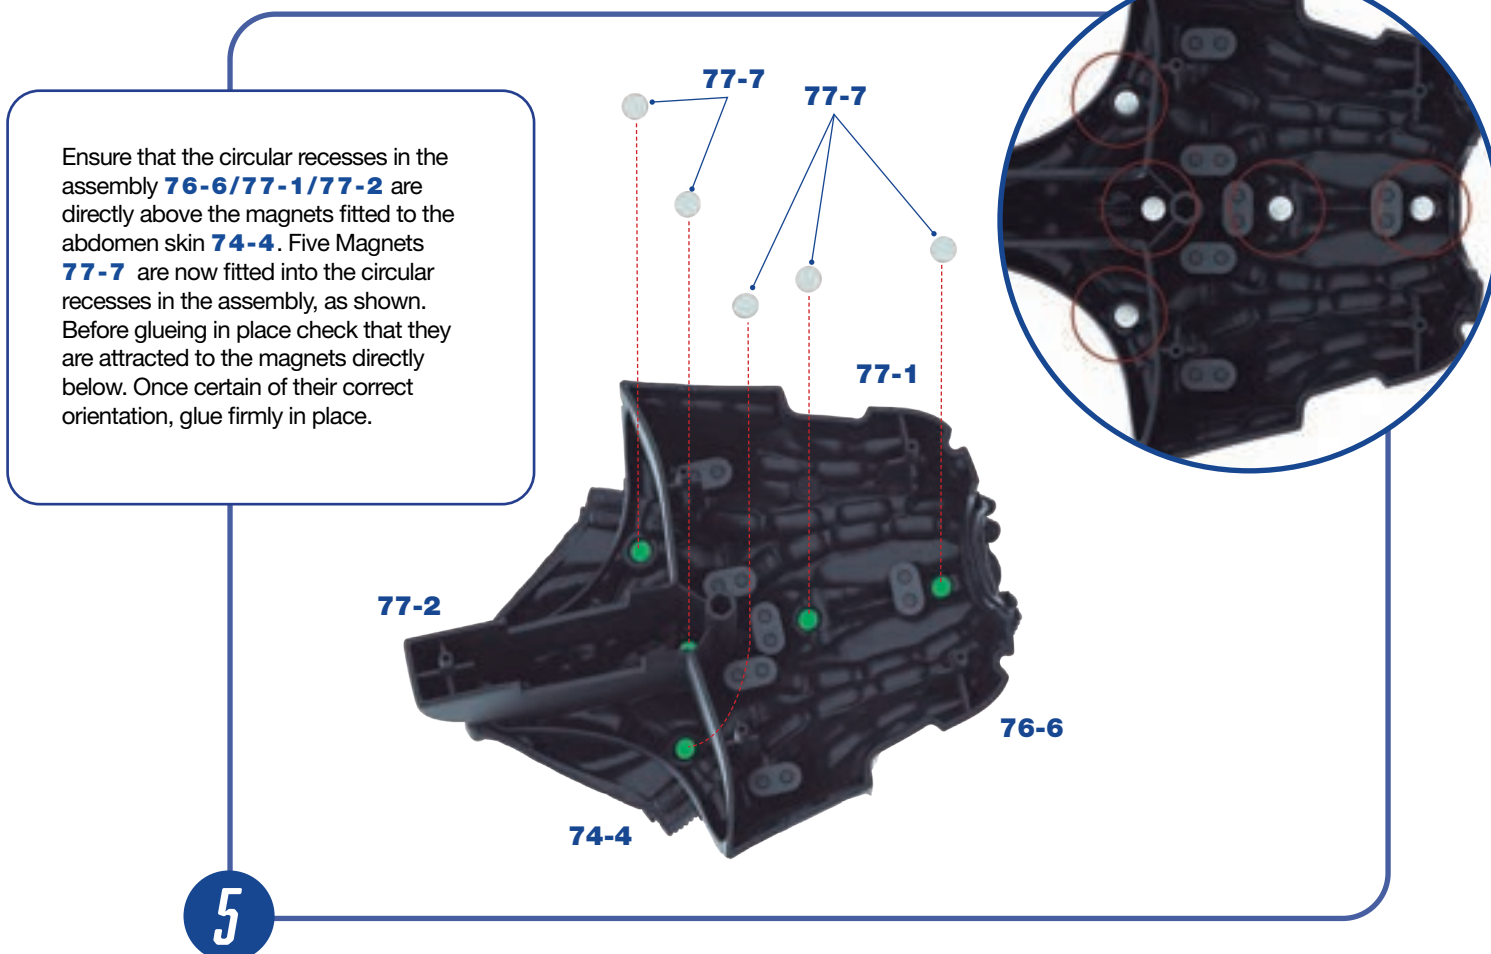


KIT 77: THE ABDOMEN (III)

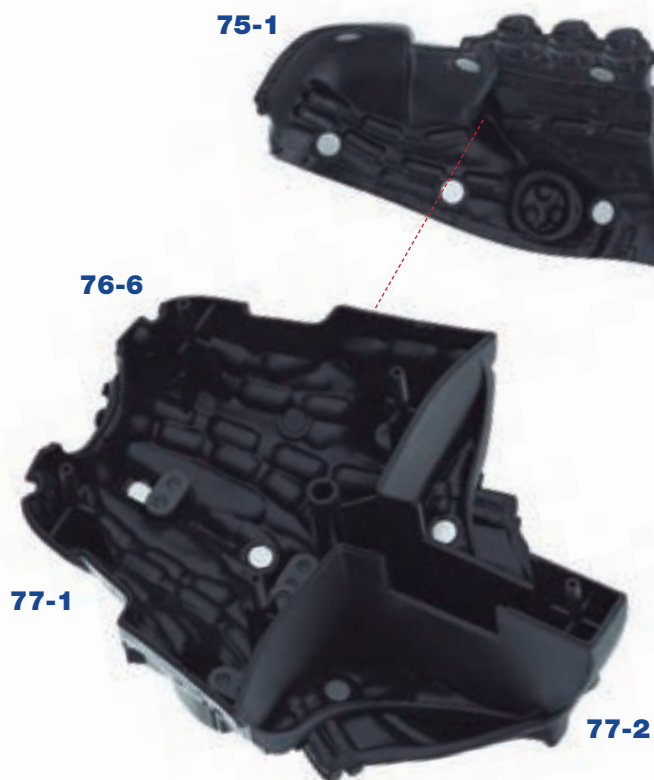

Take the right flank skin **75-1** which was worked on in pack 10 - kit 75 and place the abdomen assembly **76-6/77-1/77-2** inside it. Make sure that the circular recesses in the abdomen assembly are directly above the magnets previously fitted to the skin.

6

Fit three Magnets **77-7** into the circular recesses in the abdomen assembly **76-6/77-1/77-2**. After checking that they are attracted to the magnets directly below, glue in place.



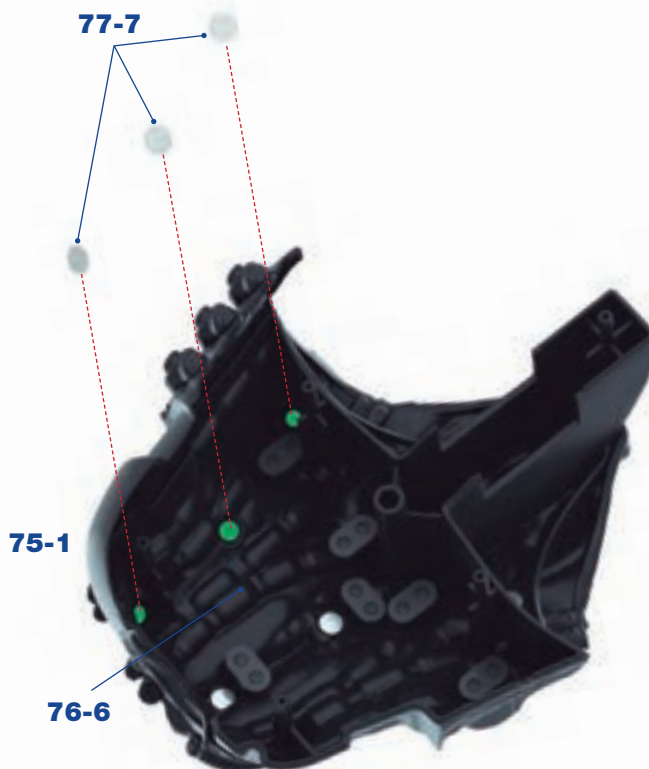


7

KIT 77: THE ABDOMEN (III)

Take the left flank skin **76-1** which was worked on in pack 10 - kit 76 and place the abdomen assembly **72-2/76-6/77-1** inside it so that the circular recesses in it align with the magnets below.


8

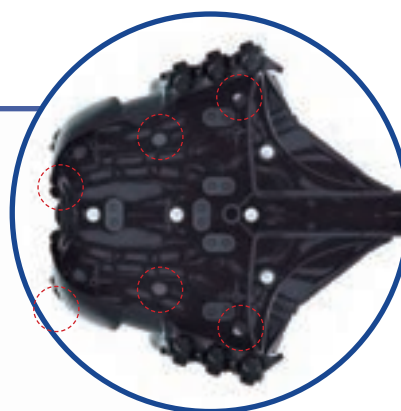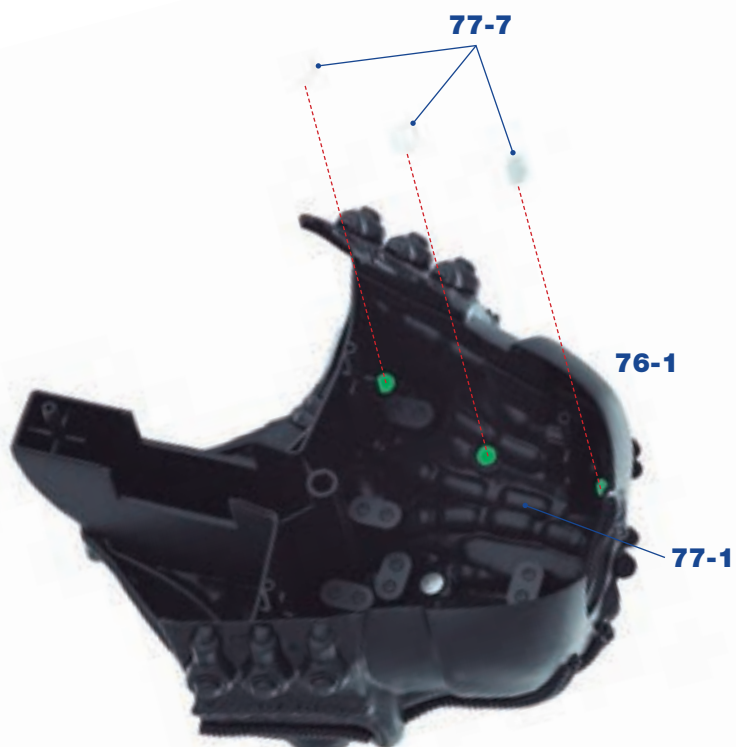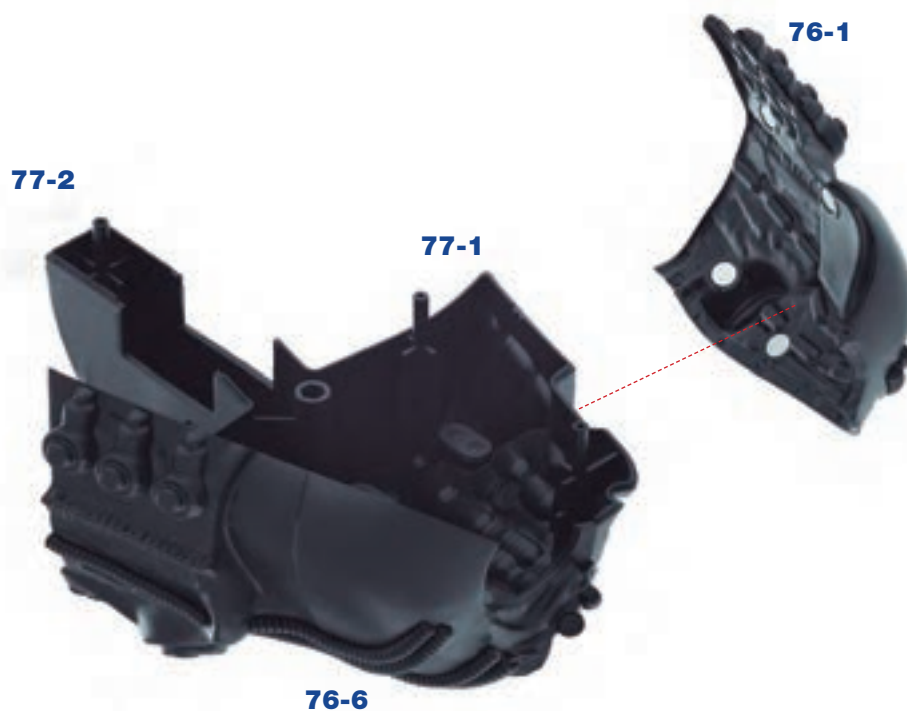

Three Magnets **77-7** are fitted into the circular recesses inside Abdomen **77-1**. Once certain that they are attracted to the magnets directly below, glue firmly in place.

9

KIT 77: THE ABDOMEN (III)

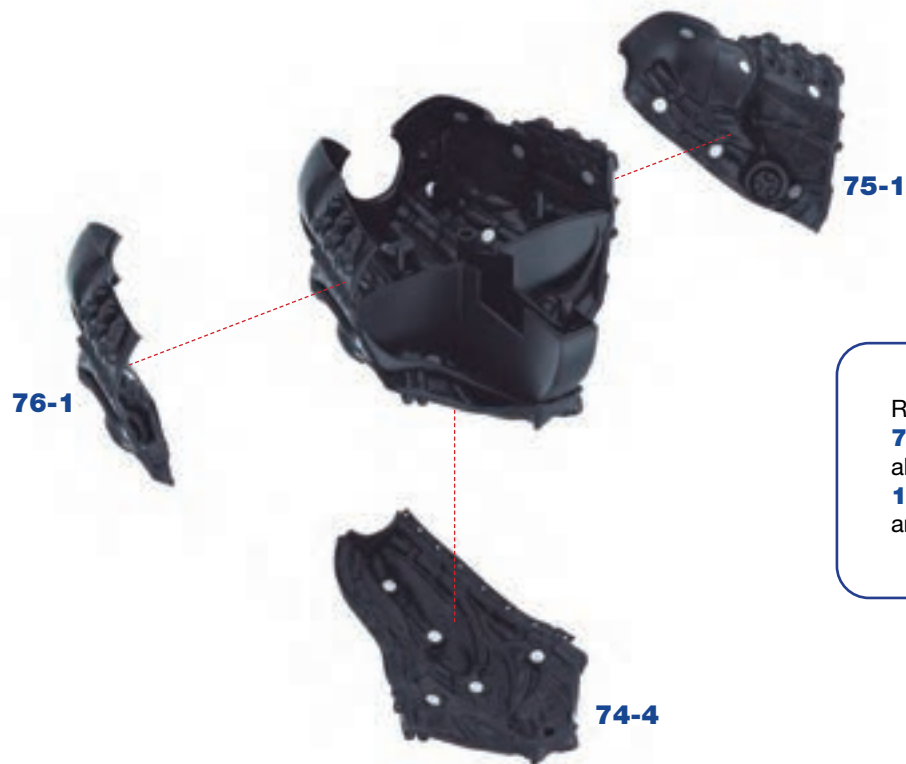

Remove the three skin assemblies **74-4**, **75-1** and **76-1** from the abdomen assembly **72-2/76-6/77-1** and keep them safely aside until they are needed again in a later kit.

10

KIT 77 IS COMPLETE



SECTIONS OF THE ABDOMEN HAVE BEEN JOINED TOGETHER AND MAGNETS FITTED.

! Keep parts not fitted in this kit safely aside until they are needed in the next kit.

KIT 78: THE ABDOMEN AND THE TAIL (I)

In this kit you will continue to work on parts of the abdomen and begin assembly of the tail of the Xenomorph.




PARTS SUPPLIED

Ref	Name	Qty
78-1	Tail 1	1
78-2	Tail 2	1
78-3	Abdomen 4	1

Ref	Name	Qty
78-4	Connector	2
78-5	Magnets	6
78-6	2.3x6mm screws (1 spare)	3

KIT 78: THE ABDOMEN AND THE TAIL (I)

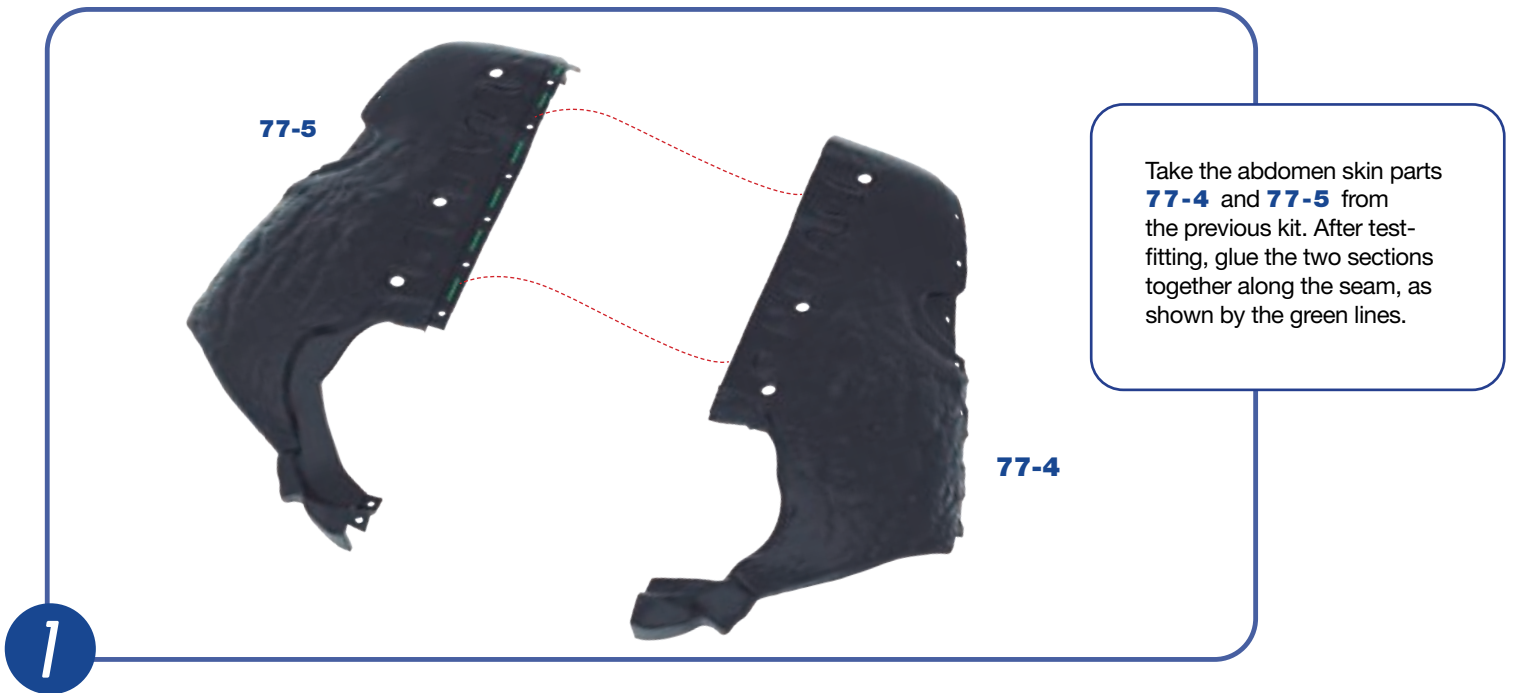


KIT 78: THE ABDOMEN AND THE TAIL (I)



Take the Abdomen **78-3** and fit two Connectors **78-4** over the raised screw sockets, as shown. Secure in place with two 2.3x6mm screws **78-6**.

4

Take the skin assembly from step 2 and turn it over. Insert three Magnets **78-5** into the circular recesses inside skin **77-5** and glue in place. The orientation of these magnets doesn't matter.

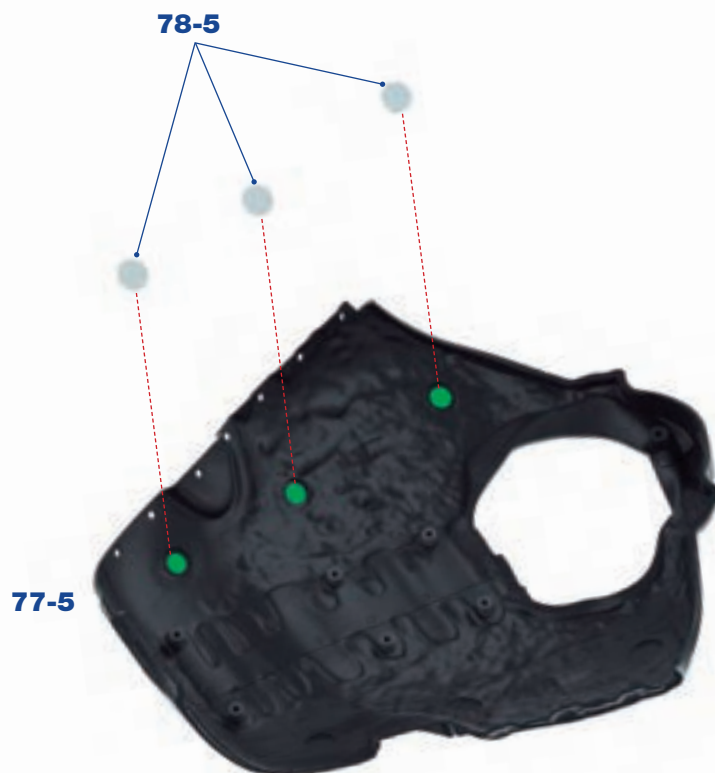

5

KIT 78: THE ABDOMEN AND THE TAIL (I)



Repeat the previous step to fix three more Magnets **78-5** into the circular recesses inside skin **77-4**.

6

KIT 78 IS COMPLETE



THE CONSTRUCTION OF THE ABDOMEN HAS CONTINUED AND WORK HAS BEGUN ON THE TAIL.

KIT 79: THE ABDOMEN AND THE TAIL (II)



In this kit you will continue to work on parts of the Xenomorph's abdomen and tail.



PARTS SUPPLIED


Ref	Name	Qty	Ref	Name	Qty
79-1	Tail 3	1	79-5	Connectors	4
79-2	Tail 4	1	79-6	Magnets	12
79-3	Abdomen 5	1	79-7	2.3x 6mm screws (1 spare)	11
79-4	Abdomen 6	1			

KIT 79: THE ABDOMEN AND THE TAIL (II)

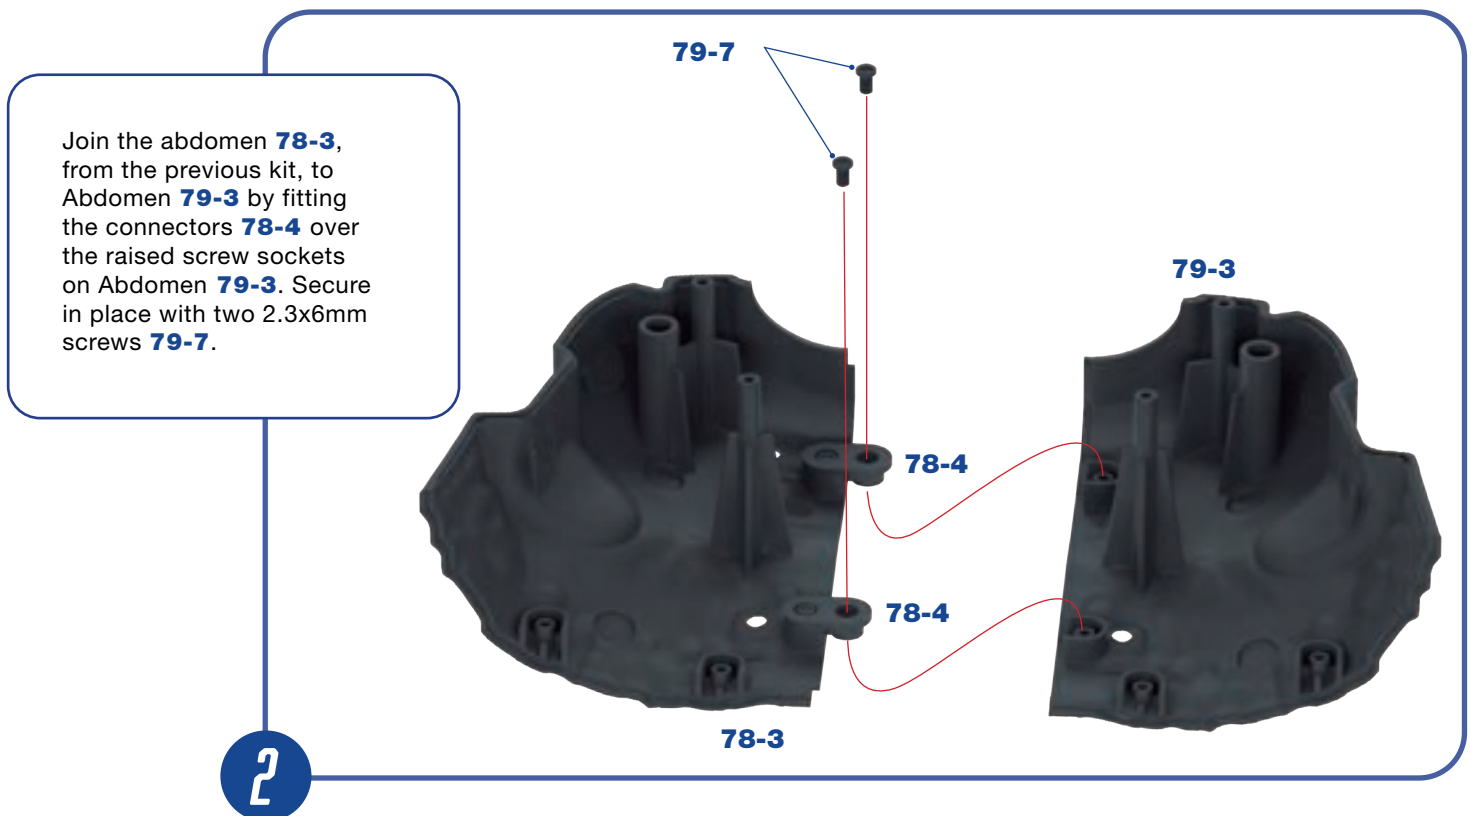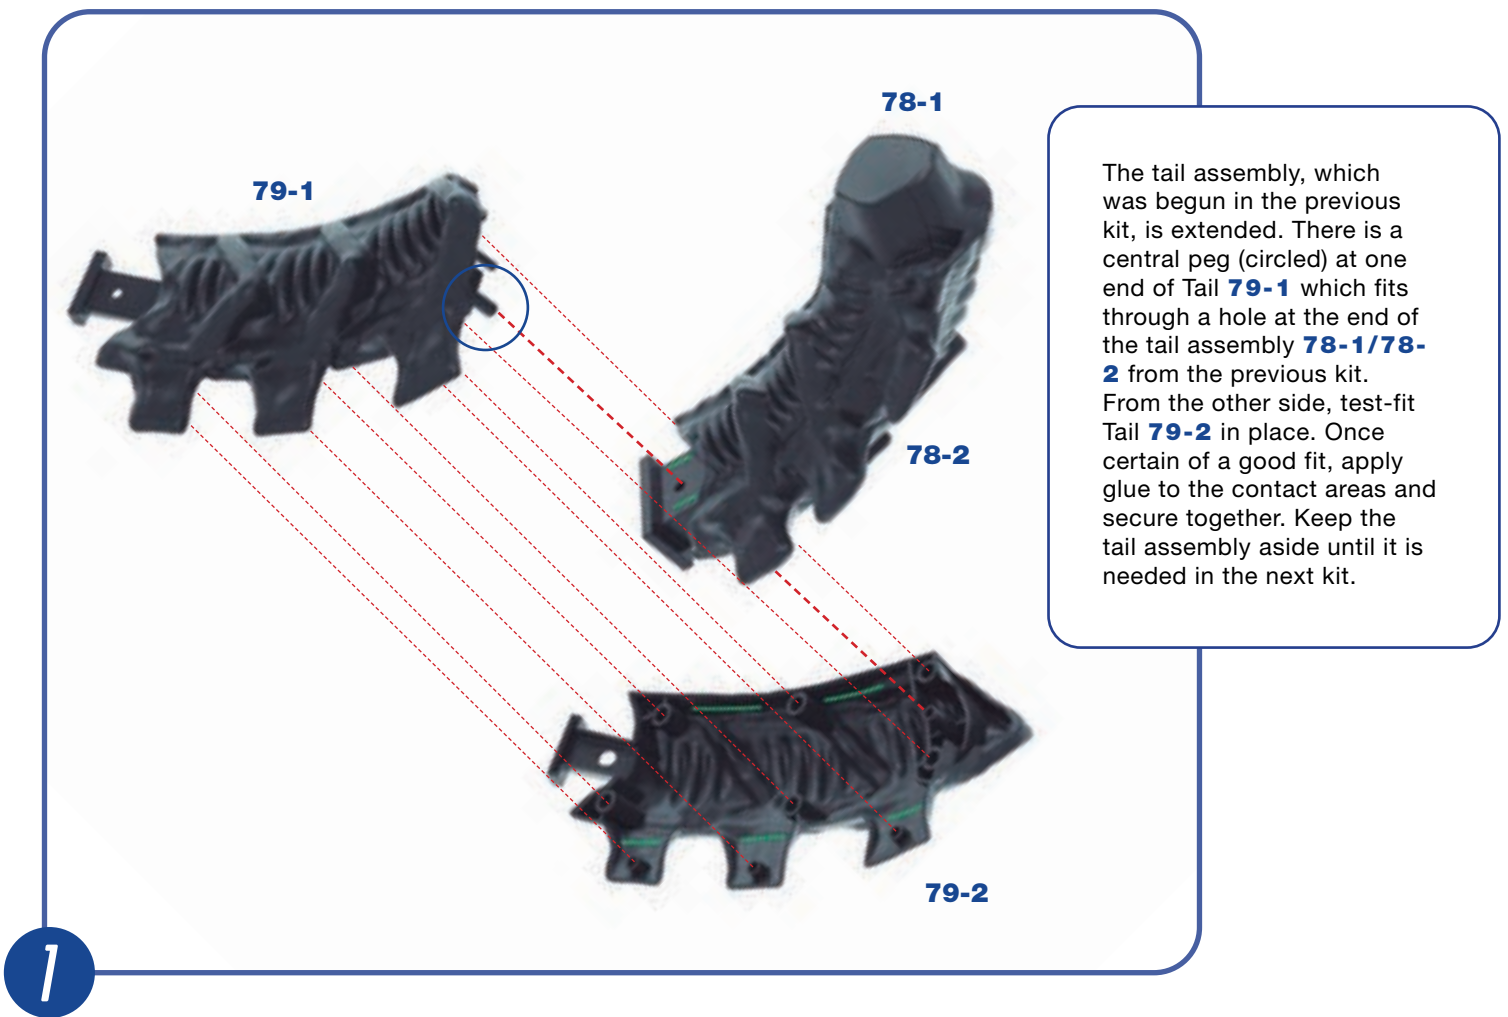


KIT 79: THE ABDOMEN AND THE TAIL (II)

3

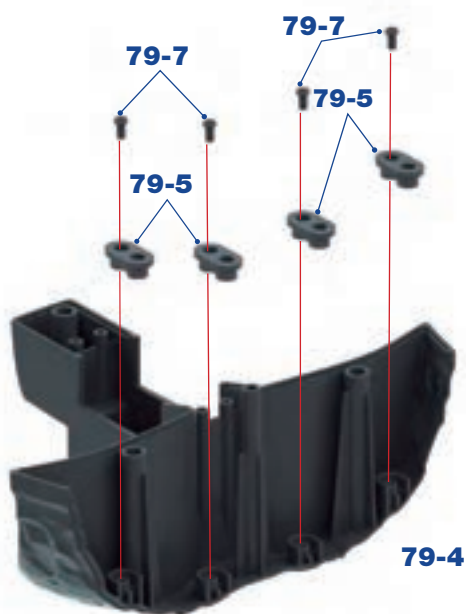

Next, take the Abdomen **79-4** and fit four Connectors **79-5** onto the raised screw sockets, as shown. Secure each in place with a 2.3x6mm screw **79-7**.

The abdomen assembly **78-3/79-3** from step 2 is joined to the Abdomen **79-4**. Place the four Connectors **79-5**, fitted in the previous step, over the raised screw sockets and secure in place with four 2.3x6mm screws **79-7**.

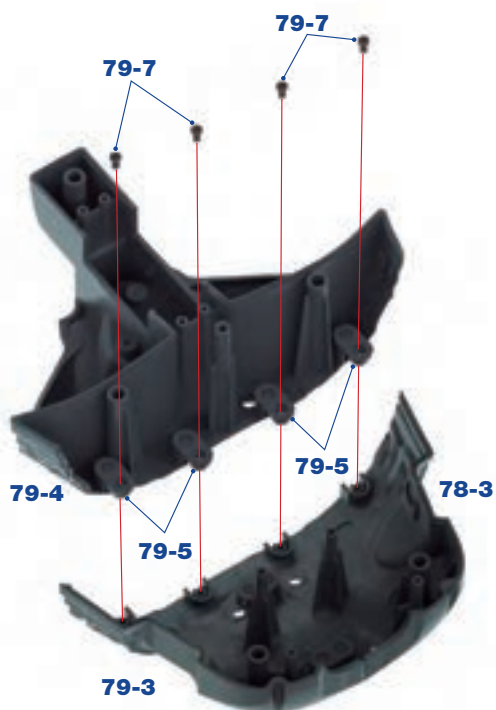

4




5

Take the skin assembly **77-3/77-4/77-5** from the previous kit and fit the abdomen assembly **78-3/79-3/79-4** into it. Make sure that the parts are positioned so that the circular recesses in the abdomen assembly align with the magnets in the skin below.

KIT 79: THE ABDOMEN AND THE TAIL (II)

6

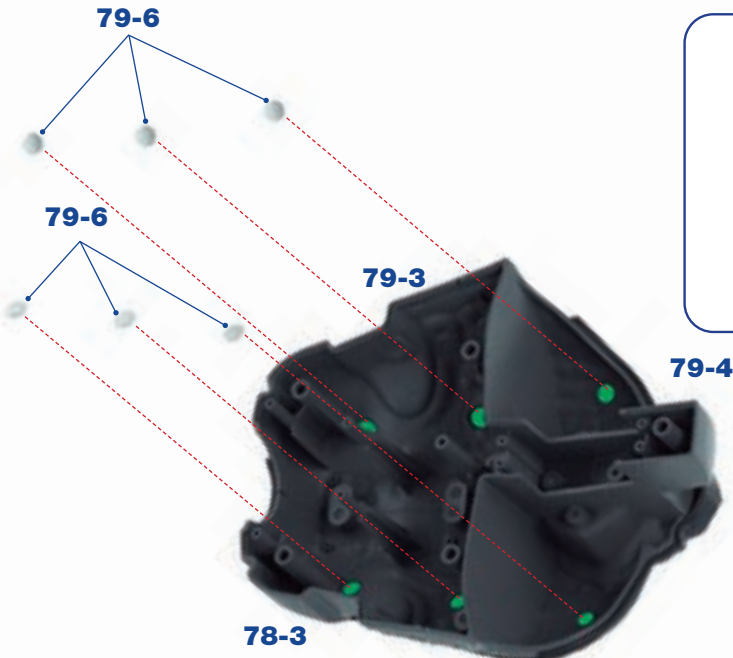

Six Magnets **79-6** are fitted into the circular recesses in the abdomen assembly **78-3/79-3/79-4**. After checking that they are attracted to the magnets directly below, glue in place.

7



Take the left flank skin **76-1** which was worked on in kit 76 and fit it around Abdomen **79-3**, as shown.

8



Fit three Magnets **79-6** into the circular recesses in Abdomen **79-3**. After checking that each magnet is attracted to the one directly below, glue in place.

KIT 79: THE ABDOMEN AND THE TAIL (II)

75-1

78-3

In a similar way, take the right flank skin **75-1**, assembled in pack 10 - kit 75, and fit it around the abdomen **78-3**.

9

Three Magnets **79-6** are fitted into the circular recesses in abdomen **78-3**. After making sure that each magnet is attracted to the one directly below, glue in place.

75-1

79-6


78-3

10

KIT 79: THE ABDOMEN AND THE TAIL (II)

Remove the skin assemblies **75-1**, **76-1** and **77-3/77-4/77-5** and keep them safely aside until they are needed in a later kit.

11

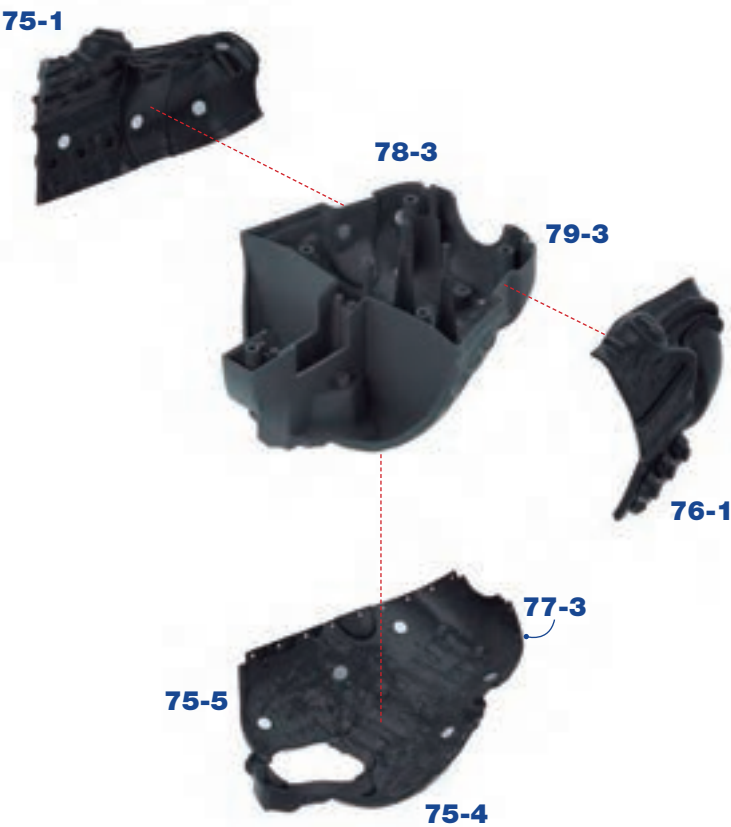


KIT 79 IS COMPLETE



THE TAIL HAS BEEN EXTENDED AND FURTHER WORK COMPLETED ON THE ABDOMEN.

KIT 80: THE ABDOMEN AND THE TAIL (III)

In this kit you will continue to build the abdomen and tail of the Xenomorph.

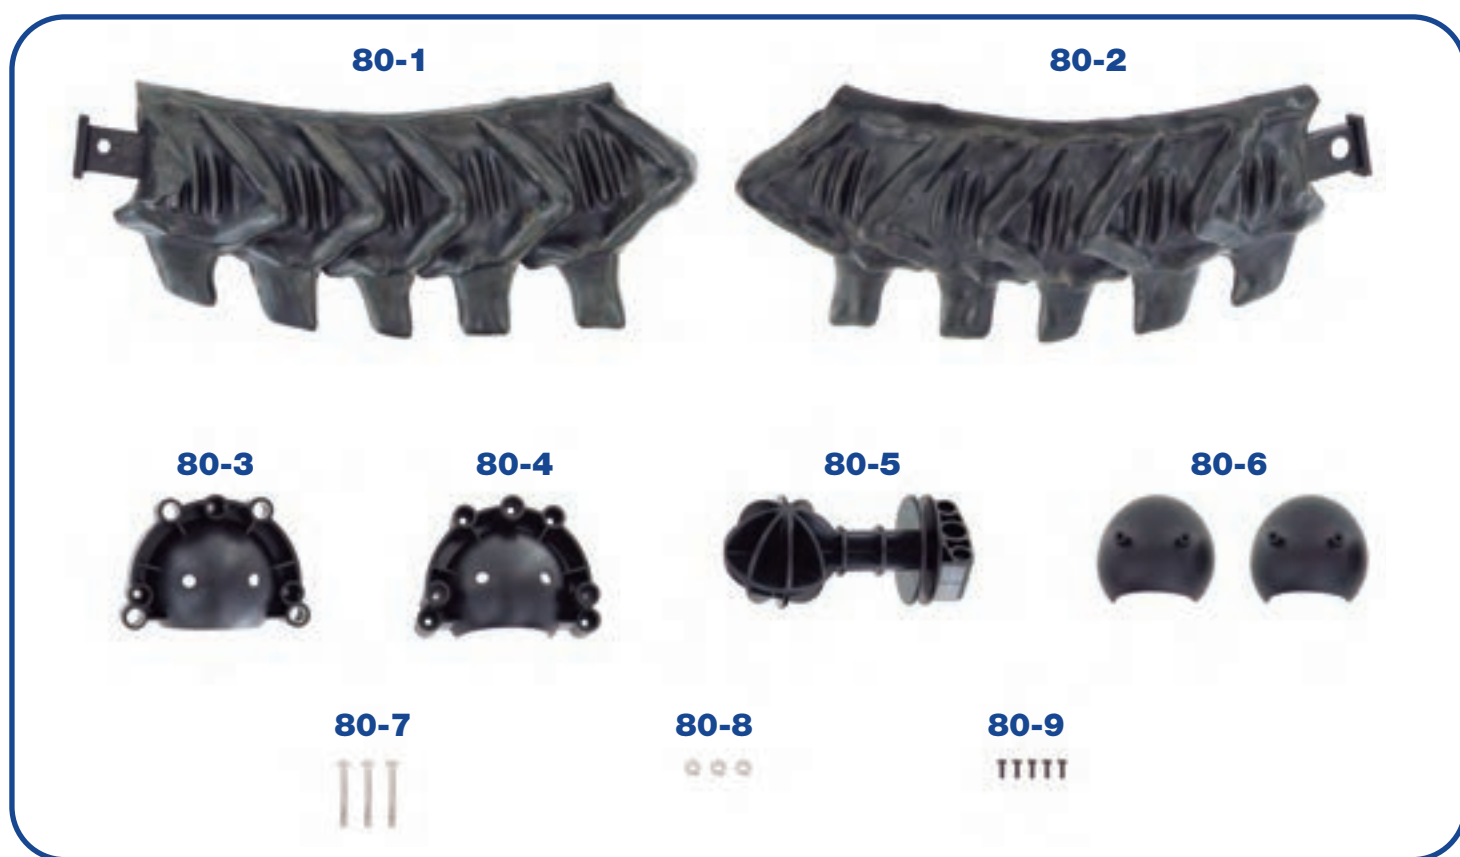


PARTS SUPPLIED

Ref	Name	Qty
80-1	Tail 5	1
80-2	Tail 6	1
80-3	Ball Joint Surround	1
80-4	Ball Joint Surround	1
80-5	Abdomen Ball Joint	1

Ref	Name	Qty
80-6	Socket Liner	2
80-7	3x22mm screw	3
80-8	Nuts	3
80-9	2.3x6mm screws (1 spare)	5

KIT 80: THE ABDOMEN AND THE TAIL (III)


1

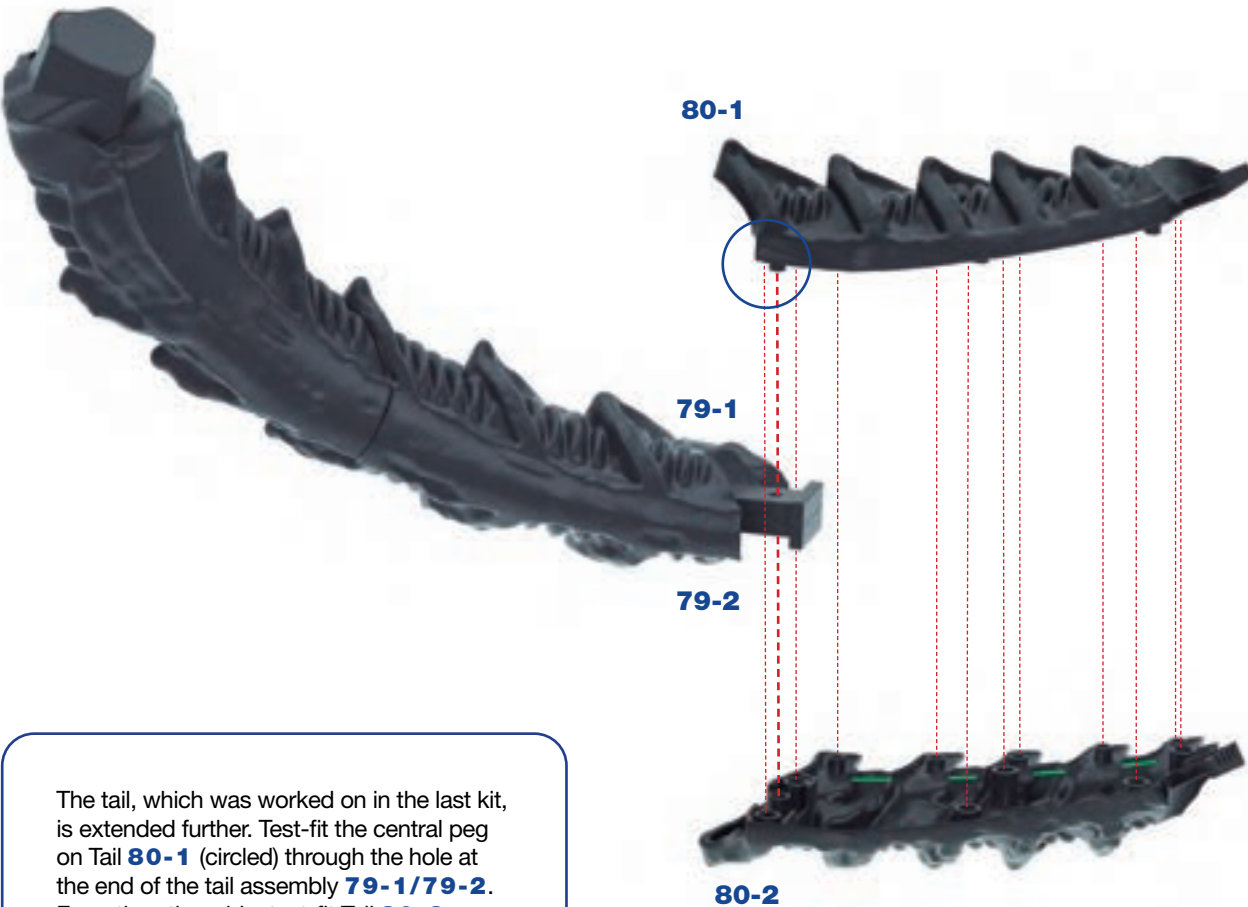

The tail, which was worked on in the last kit, is extended further. Test-fit the central peg on Tail **80-1** (circled) through the hole at the end of the tail assembly **79-1/79-2**. From the other side, test-fit Tail **80-2**, as shown by the red lines. When certain of a good fit, secure together by applying glue to the contact areas and hold firmly in place until the glue has dried.

The Abdomen Ball Joint **80-5** is assembled as shown above. First fit the Socket Liners **80-6** into the Ball Joint Surrounds **80-3** and **80-4**. Then sandwich the Abdomen Ball Joint **80-5** between the Ball Joint Surrounds **80-3** and **80-4**.



2

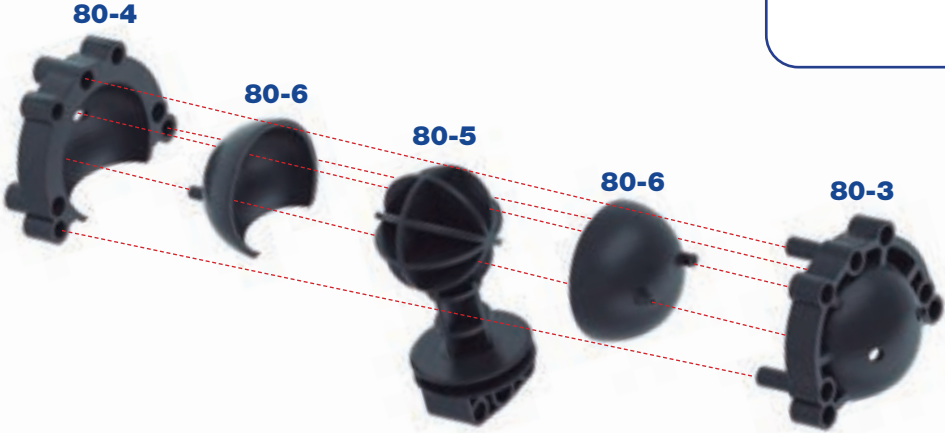

KIT 80: THE ABDOMEN AND THE TAIL (III)


3

Keeping the assembly held together, insert three 3x22mm screws **80-7** as shown, and secure in place with three nuts **80-8** which fit into hexagonal recesses in part **80-4** (see inset). Take care not to over-tighten the joint as it is important that the joint is free to move slightly yet stiff enough to hold the body securely in place.

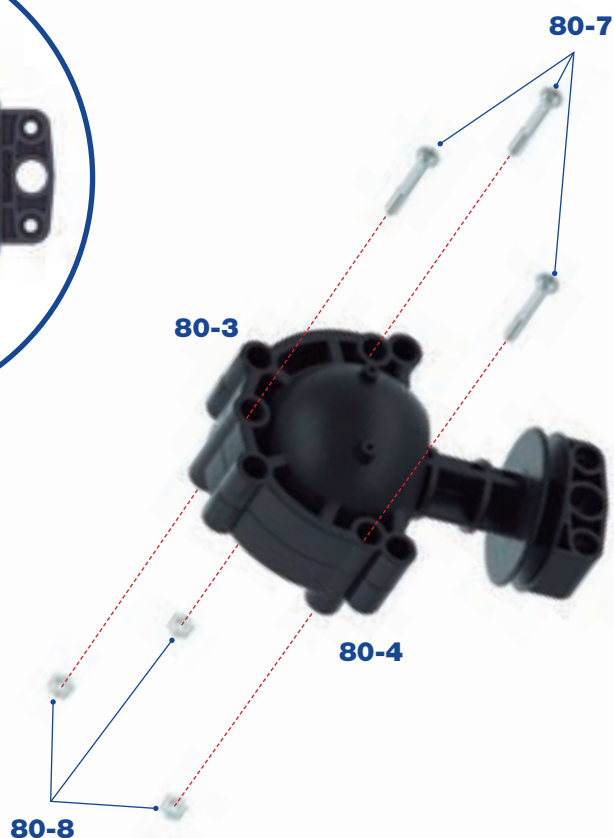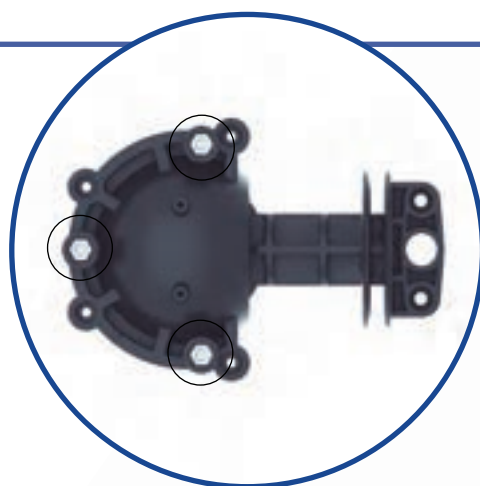


4

Take the abdomen assembly **78-3/79-3** from the last kit and fit the four remaining holes on Ball Joint Surround **80-4** onto the raised screw sockets on parts **78-3/79-3**. See also the next step.

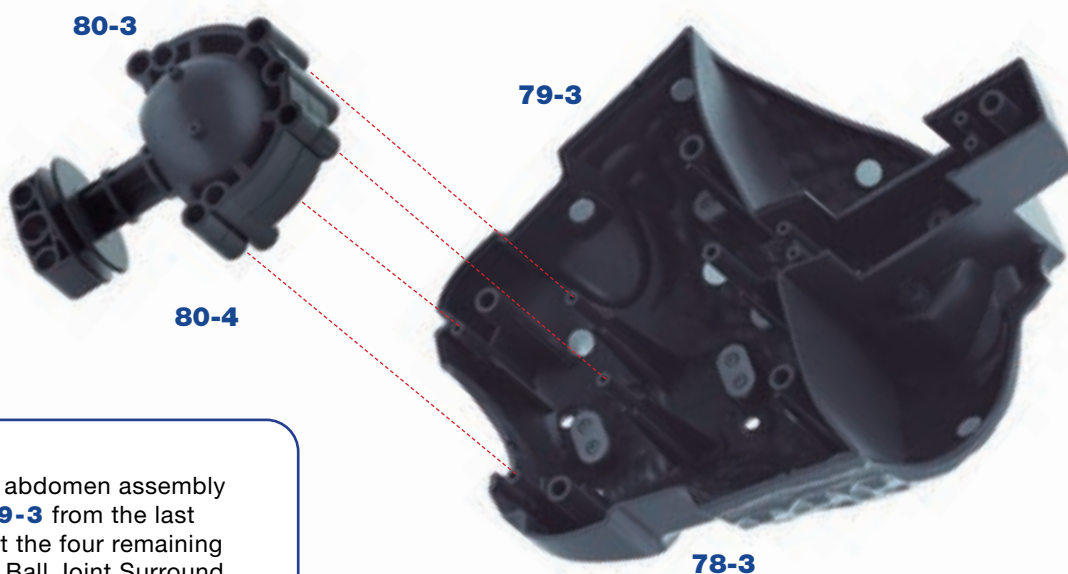

KIT 80: THE ABDOMEN AND THE TAIL (III)

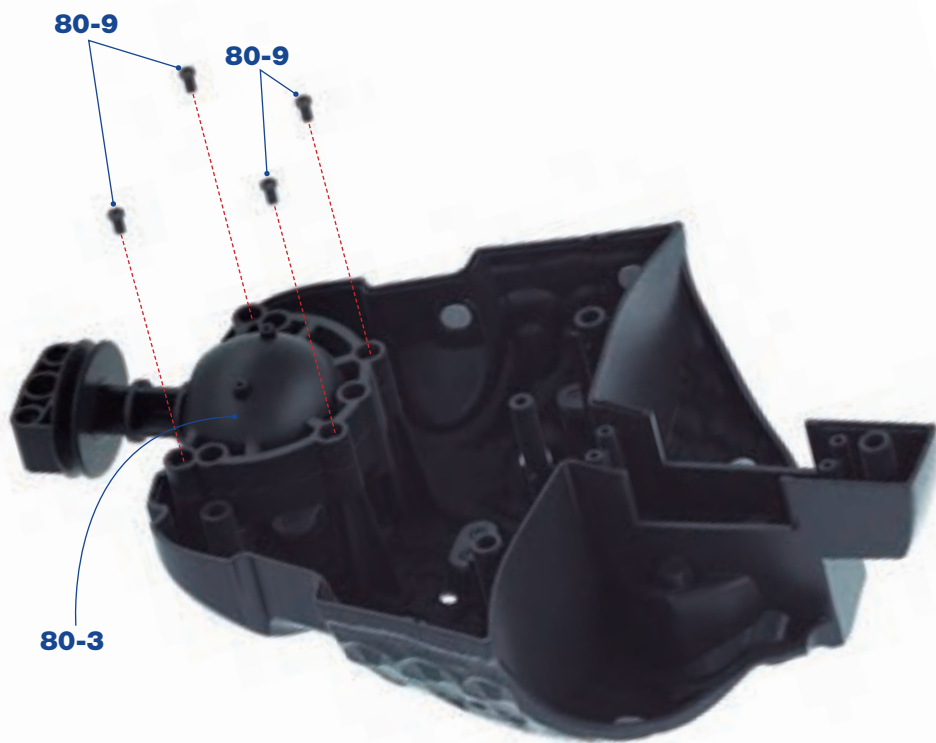

When certain the parts are correctly aligned, fix in place with four 2.3x6mm screws **80-9**.

5


KIT 80 IS COMPLETE



THE ABDOMEN BALL JOINT HAS BEEN ASSEMBLED AND THE TAIL LENGTHENED.

KIT 81: THE ABDOMEN, THE TAIL & THE DORSAL GROWTHS


In this kit you will complete the assembly of the abdomen, continue with building the tail and start to assemble the dorsal growths.

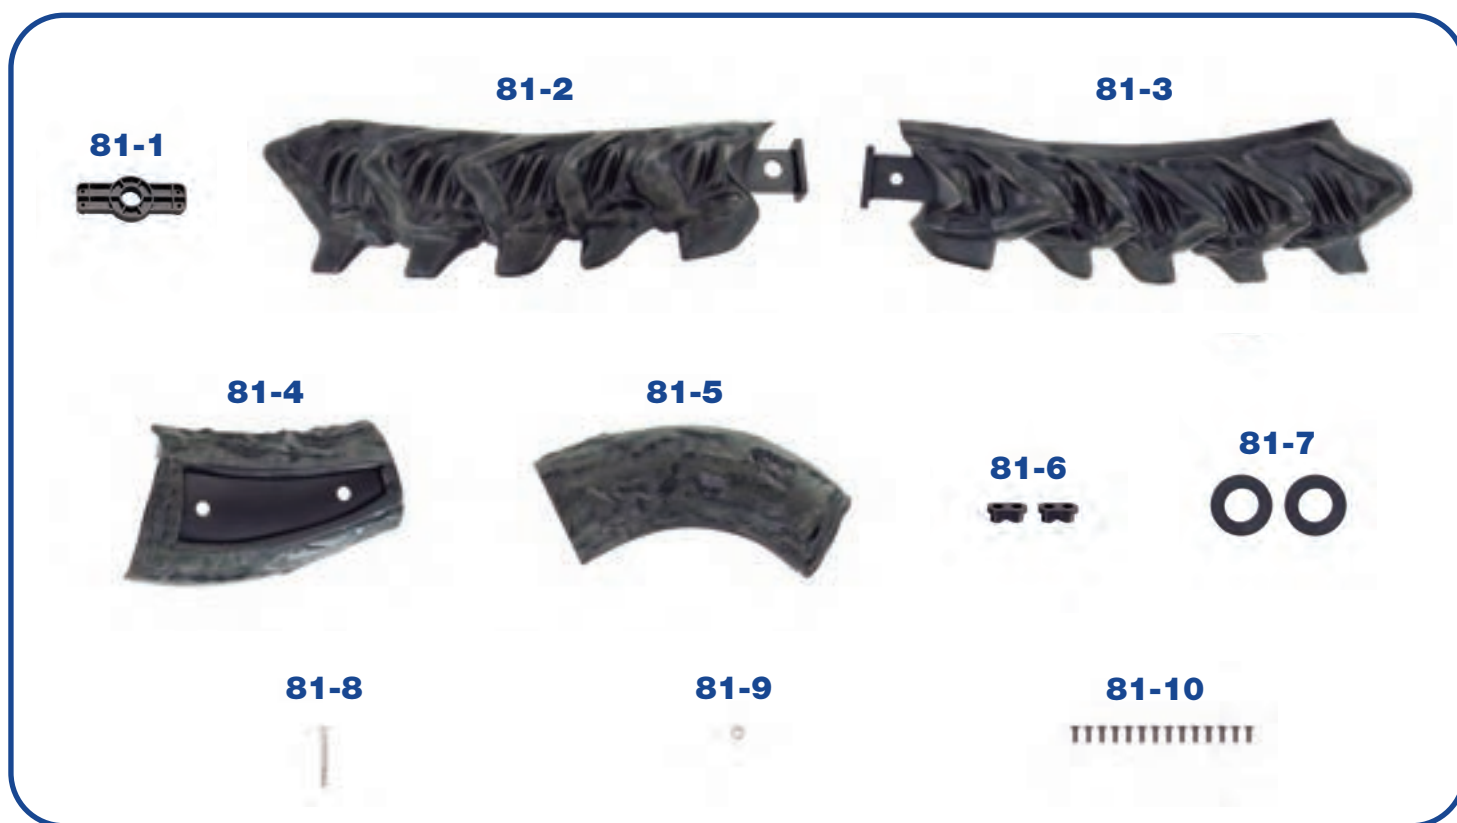

PARTS SUPPLIED

Ref	Name	Qty	Ref	Name	Qty
81-1	Bracket	1	81-6	Connector	2
81-2	Tail 7	1	81-7	Washers	2
81-3	Tail 8	1	81-8	3x28mm screw	1
81-4	Back A1	1	81-9	Nut	1
81-5	Back A2	1	81-10	2.3x6mm screws (1 spare)	14

KIT 81: THE ABDOMEN, THE TAIL AND THE DORSAL GROWTHS


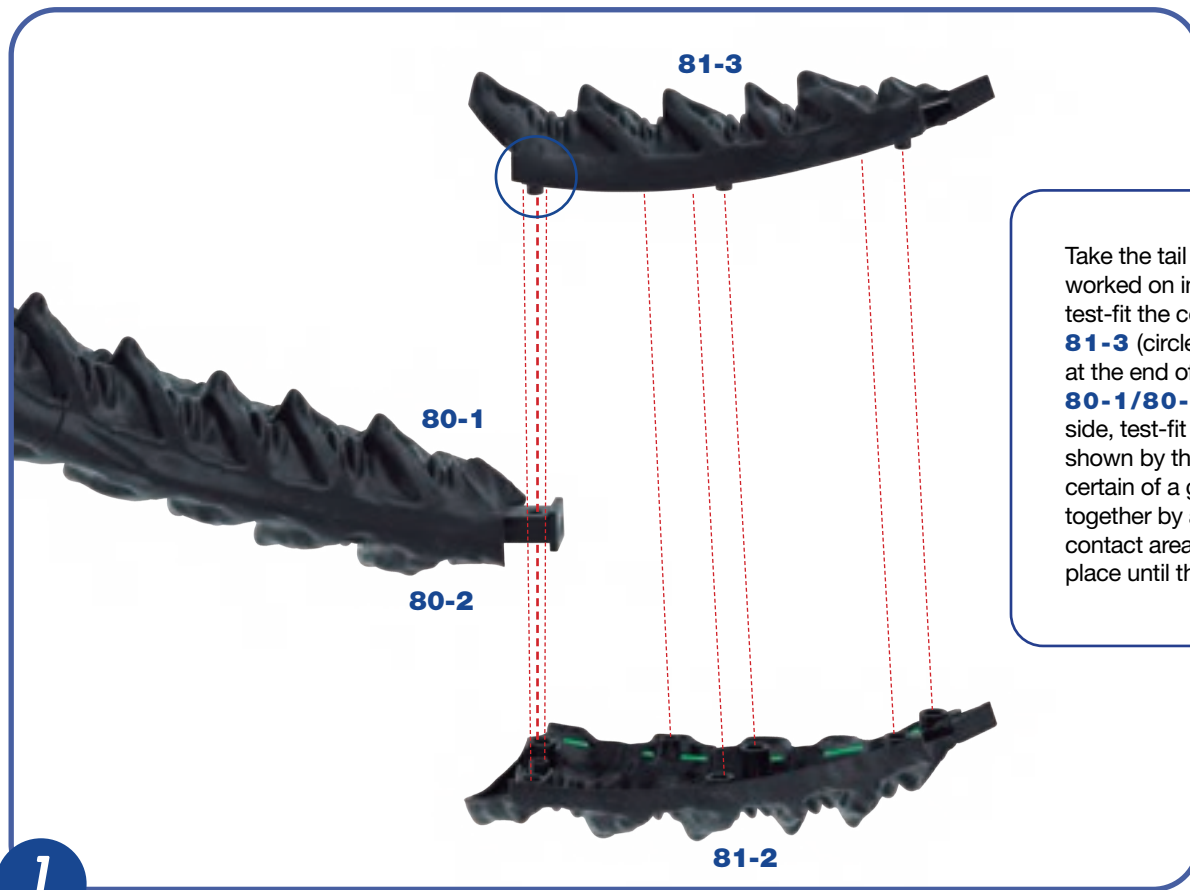


Take the tail assembly which was worked on in the previous kit and test-fit the central peg on Tail 8 **81-3** (circled) through the hole at the end of the tail assembly **80-1/80-2**. From the other side, test-fit Tail 7 **81-2**, as shown by the red lines. When certain of a good fit, secure together by applying glue to the contact areas and hold firmly in place until the glue has dried.




After studying the diagrams (left), take the right leg assembly (pack 6 - kit 43) and the left leg assembly (pack 10 - kit 74). Fit one of the Washers **81-7** on the right leg joint **40-4** and place the Bracket **81-1** on top, followed by the other Washer **81-7**. Next, take the left leg and insert the 3x28mm screw **81-8** through the hole in joint **70-3** and continue through the aligned joint, as shown. The screw is secured in place with a Nut **81-9** fitted in the back of joint **40-4**. Make sure the parts are properly secured together.

KIT 81: THE ABDOMEN, THE TAIL AND THE DORSAL GROWTHS

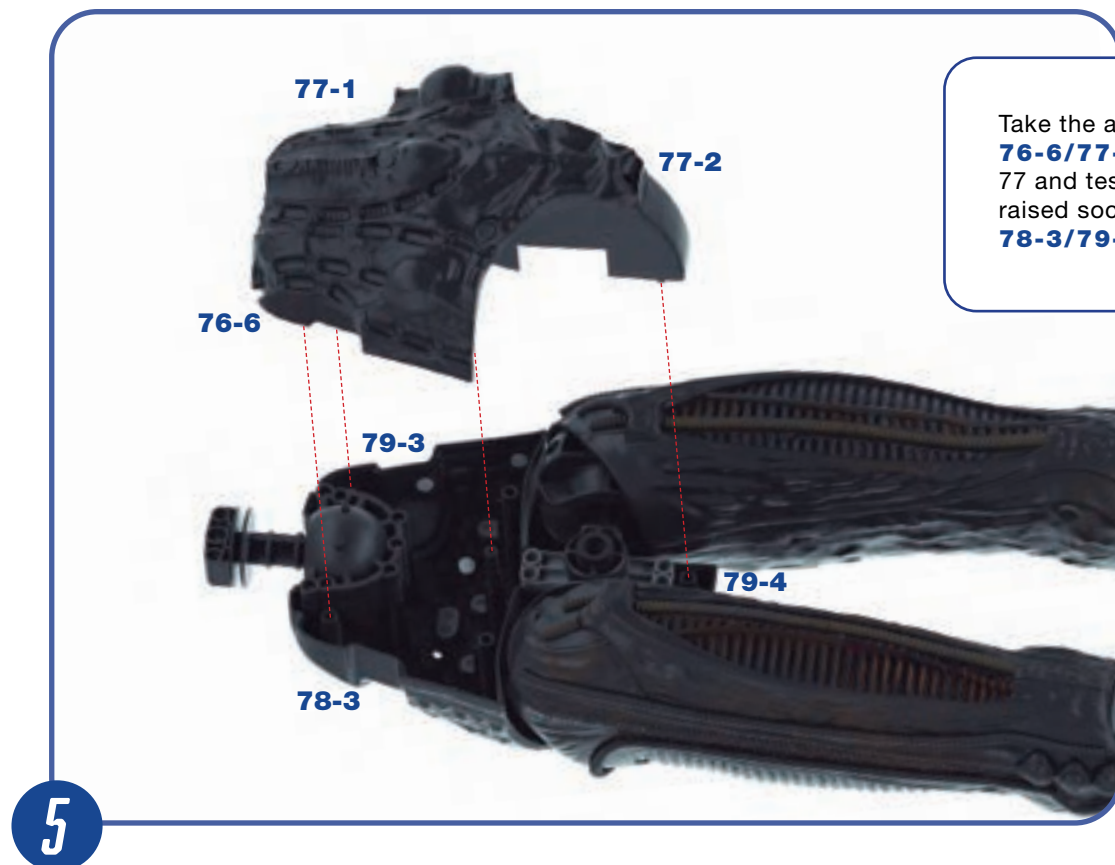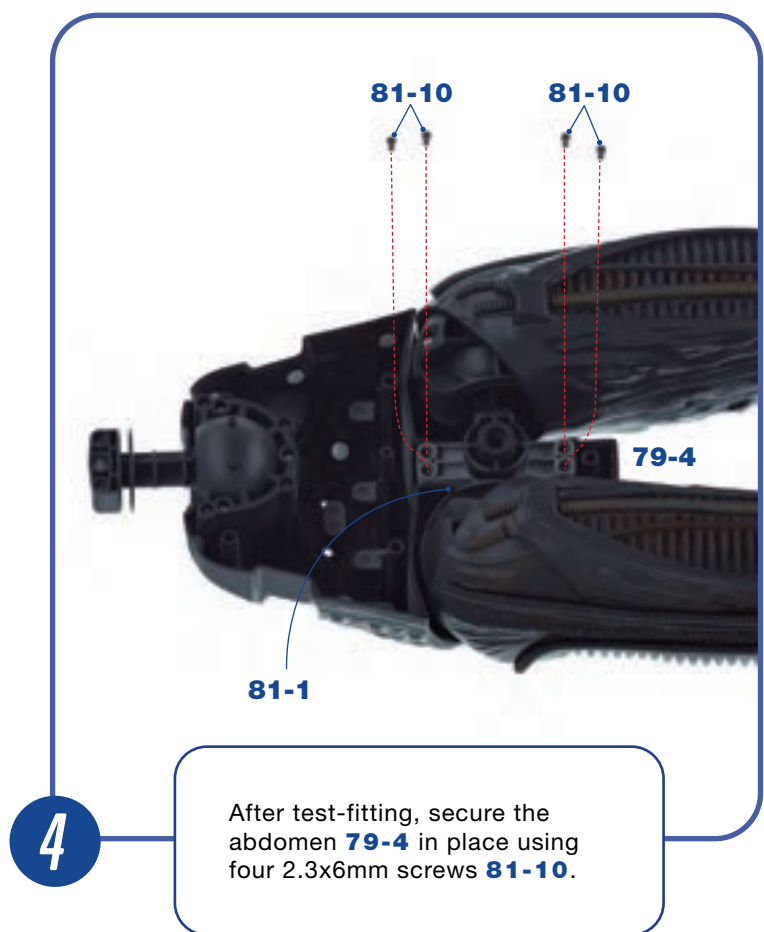

KIT 81: THE ABDOMEN, THE TAIL AND THE DORSAL GROWTHS

6

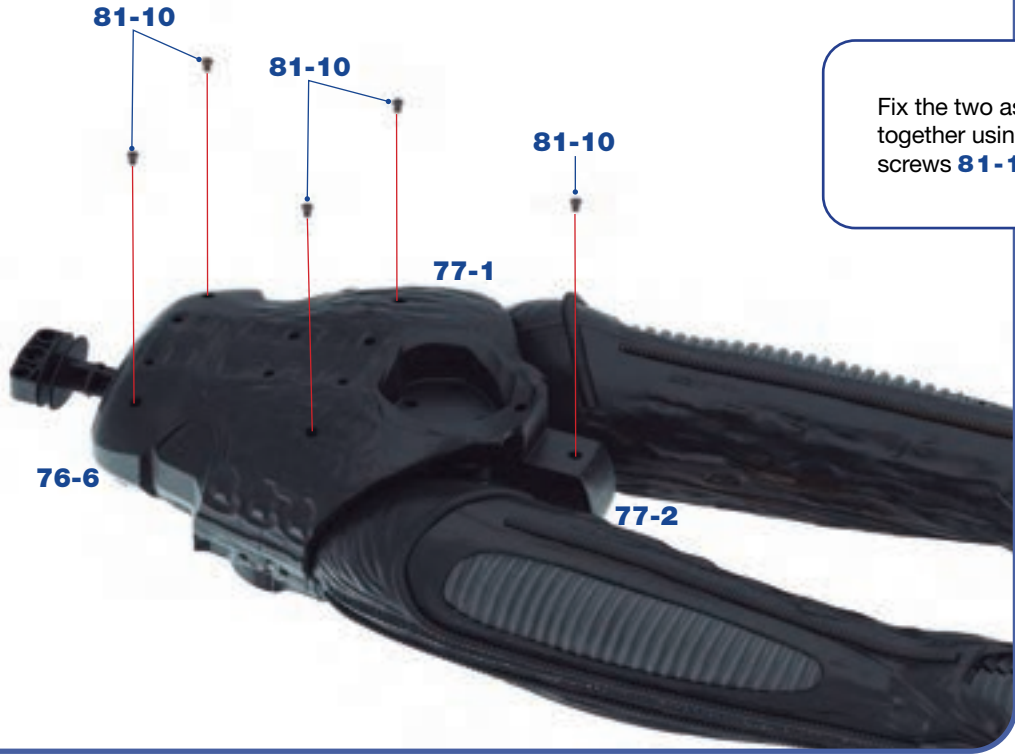

81-10 81-10 81-10

76-6 77-1 77-2

Fix the two assemblies together using five 2.3x6mm screws **81-10**, as shown.

7




74-4 76-1 75-1

Next, join the abdomen skin assemblies **74-1**, **75-1** and **76-1** together. After test-fitting, glue the long edge of skin **76-1** to the left side of skin **74-4** and hold in place until firmly attached. Then, in a similar way, glue the skin **75-1** to the right hand side of skin **74-4**. Again, hold firmly in place until the glue has dried.

KIT 81: THE ABDOMEN, THE TAIL AND THE DORSAL GROWTHS

Turn the assembly **74-4/75-1/76-1** over and test-fit the skin assembly **77-3/77-4/77-5** in place, as shown. When certain of a good fit, apply glue to the contact areas along just one of the edges and hold firmly in place until the glue has dried. Do not fix the other edges together just yet, as the skin assembly needs to be fitted around the abdomen.

8

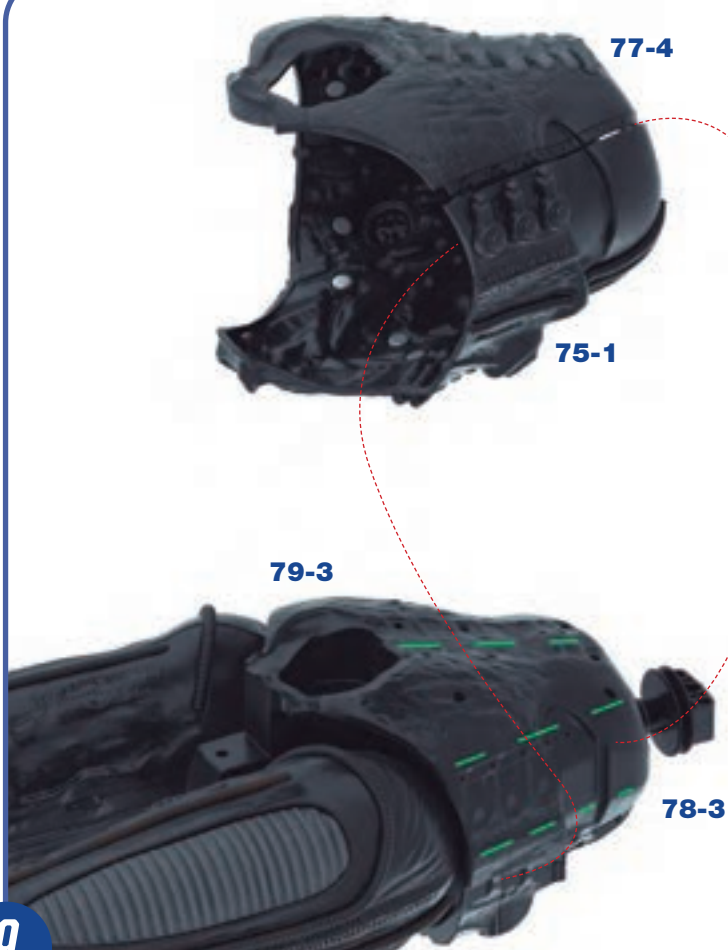


Test-fit the skin assembly from the previous step around the abdomen assembly, as shown left and in the inset. When certain that it is positioned correctly, glue the remaining two edges together and hold firmly in place until the glue has set.

9

KIT 81: THE ABDOMEN, THE TAIL AND THE DORSAL GROWTHS

10

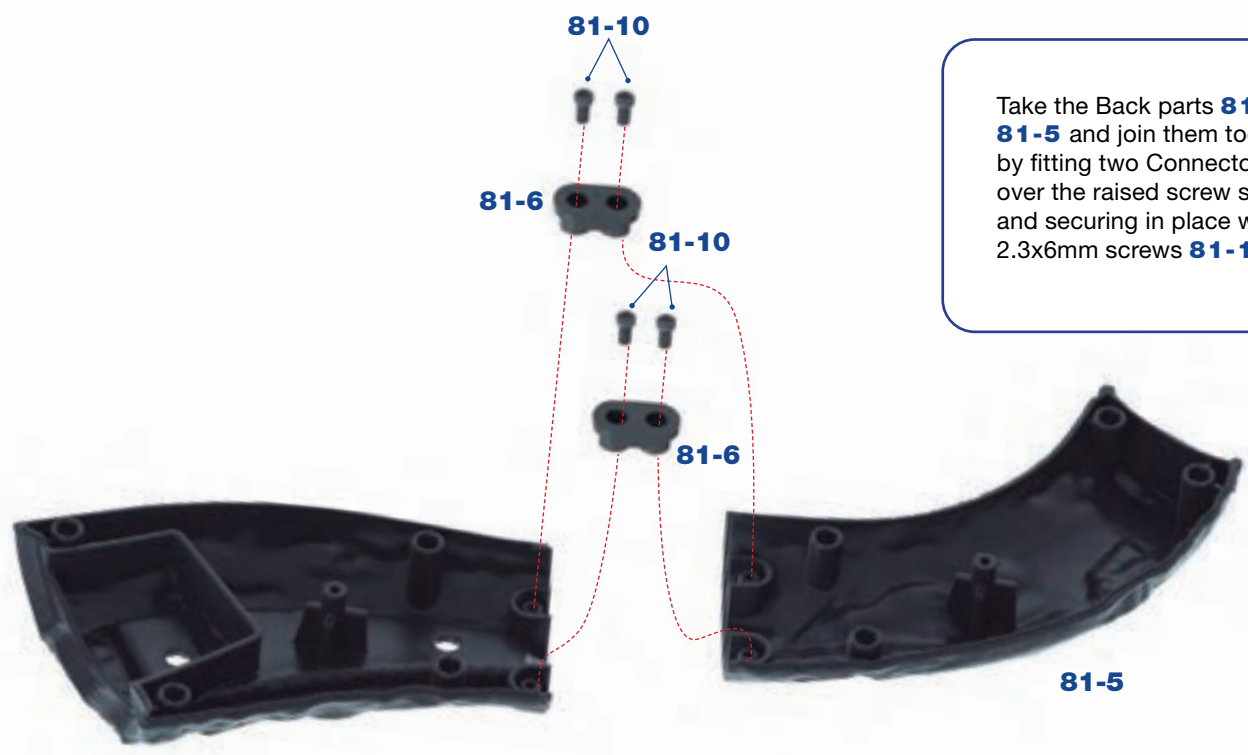

The diagram illustrates the assembly of the back section. Two large, curved black plastic parts, labeled 81-4 and 81-5, are shown. Between them are two smaller connectors, labeled 81-6, and four screws, labeled 81-10. Red dashed lines indicate the assembly path: the connectors 81-6 are placed over the raised screw sockets on parts 81-4 and 81-5, and the screws 81-10 are used to secure them in place.

Take the Back parts **81-4** and **81-5** and join them together by fitting two Connectors **81-6** over the raised screw sockets and securing in place with four 2.3x6mm screws **81-10**.

KIT 81 IS NOW COMPLETE



The image shows the completed assembly of Kit 81. The central figure is a dark, articulated model of a creature's lower body, including the legs and abdomen. To the left of the main figure is a curved, segmented tail piece. To the right is a small, dark, curved dorsal growth piece.

THE LEGS AND ABDOMEN HAVE BEEN JOINED, WORK HAS BEGUN ON THE BACK AND FURTHER WORK HAS BEEN DONE ON THE TAIL.

KIT 82: THE TAIL AND THE DORSAL GROWTHS (I)

In this kit you will continue to work on the tail and dorsal appendages.





PARTS SUPPLIED

Ref	Name	Qty	Ref	Name	Qty
82-1	Back Protector A3	1	82-5	Back A5	1
82-2	Tail 9	1	82-6	Connector	2
82-3	Tail 10	1	82-7	2.3x6mm screws (1 spare)	7
82-4	Back A4	1			

KIT 82: THE TAIL AND THE DORSAL GROWTHS (I)

Take the tail assembly which was worked on in the previous kit and test-fit the central peg on Tail 9 **82-2** (circled) through the hole at the end of the tail assembly **81-2/81-3**. From the other side, test-fit Tail 10 **82-3**, as shown by the red lines. When certain of a good fit, secure together by applying glue to the contact areas and hold firmly in place until the glue has dried.

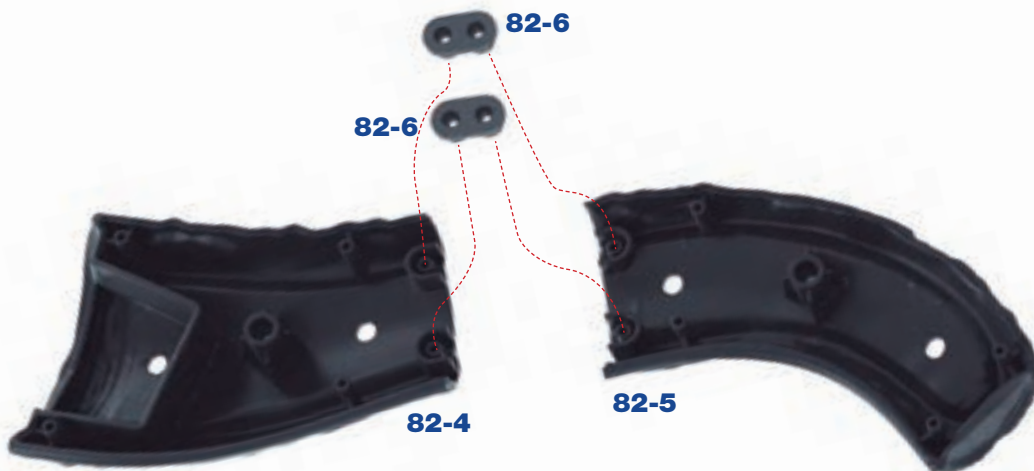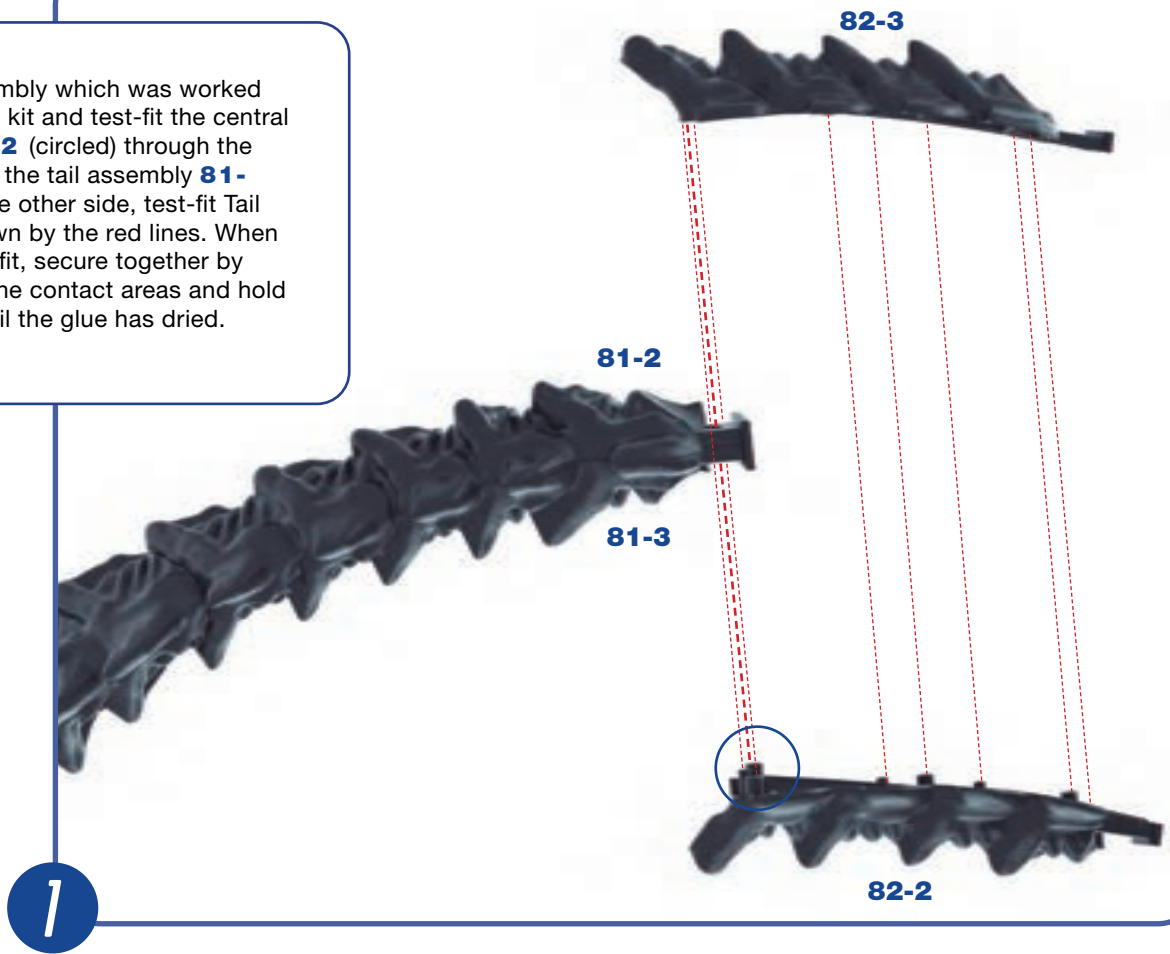


Join the Back A4 **82-4** and Back A5 **82-5** together by fitting two Connectors **82-6** over the raised screw sockets inside the oval recesses.

KIT 82: THE TAIL AND THE DORSAL GROWTHS (I)



KIT 82: THE TAIL AND THE DORSAL GROWTHS (I)

6

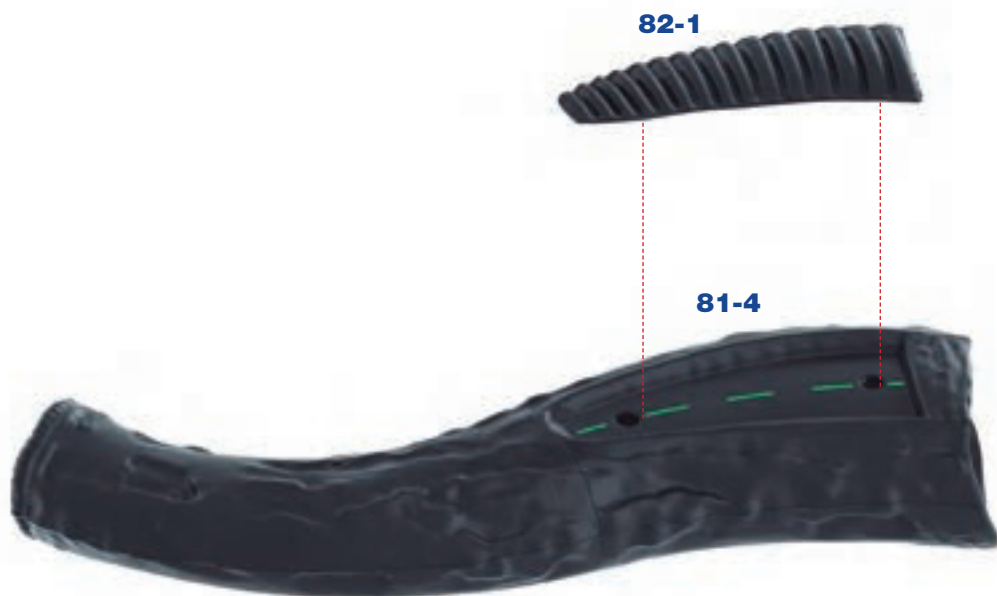

The assembly is turned over again so that the Back Protector A3 **82-1** can be fitted into the back assembly, as shown. Once certain of a good fit, glue in place.

KIT 82 IS COMPLETE

*THE TAIL HAS BEEN LENGTHENED AND
WORK HAS CONTINUED ON THE BACK.*



KIT 83: THE TAIL AND THE DORSAL GROWTHS (II)

In this kit you will continue to work on the tail and dorsal appendages.




PARTS SUPPLIED

Ref	Name	Qty
83-1	Back Protector A6	1
83-2	Back Protector A7	1
83-3	Tail 11	1
83-4	Tail 12	1

Ref	Name	Qty
83-5	Back B1	1
83-6	Back B2	1
83-7	Connector	2
83-8	2.3x6mm screws (1 spare)	5

KIT 83: THE TAIL AND THE DORSAL GROWTHS (II)

Take the tail assembly worked on in the previous kit and test-fit the central peg on Tail 11 **83-3** through the hole at the end of the tail assembly **82-2/82-3**. From the other side, test-fit Tail 12 **83-4**, as shown by the red lines. When certain of a good fit, secure together by applying glue to the contact areas and hold firmly in place until the glue has dried.

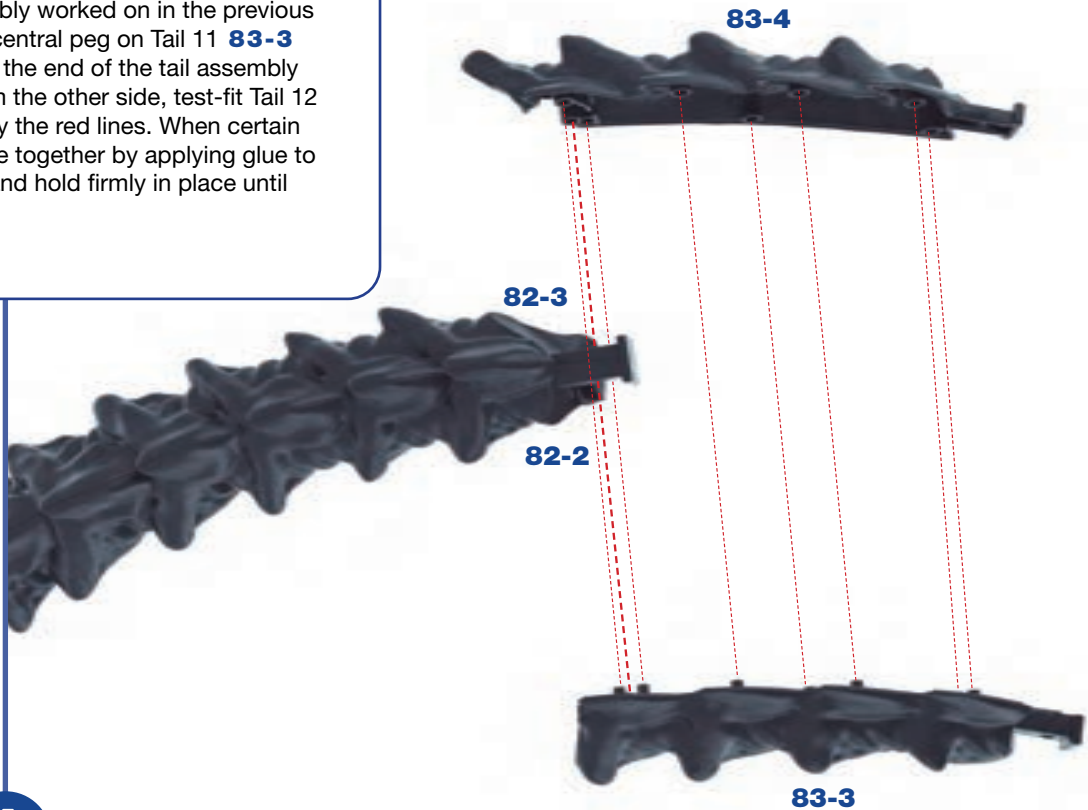

1

83-1 (A6)




The Back Protector A6 **83-1** is fitted to the back assembly **82-4/82-5**, which was worked on in the previous kit. There are two pegs on Back Protector **83-1** which fit into corresponding holes in back **82-4**. After test-fitting, glue in place.

2

KIT 83: THE TAIL AND THE DORSAL GROWTHS (II)

In a similar way, test-fit the pegs on Back Protector A7 **83-2** into the corresponding holes in back **82-5**. Once certain of a good fit, glue in place.

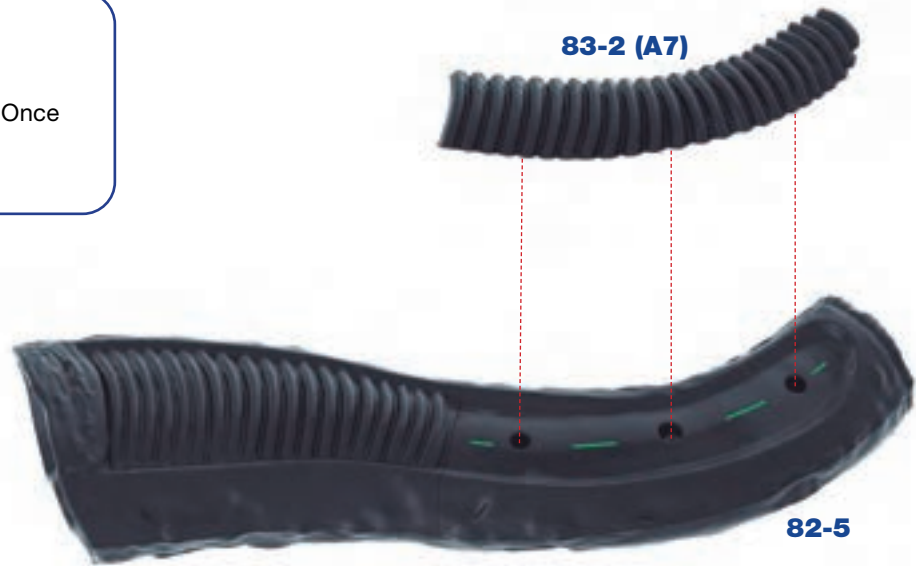


3



Join the two Back parts B1 **83-5** and B2 **83-6** by fitting two Connectors **83-7** over the raised screw sockets, as shown.

4

KIT 83: THE TAIL AND THE DORSAL GROWTHS (II)

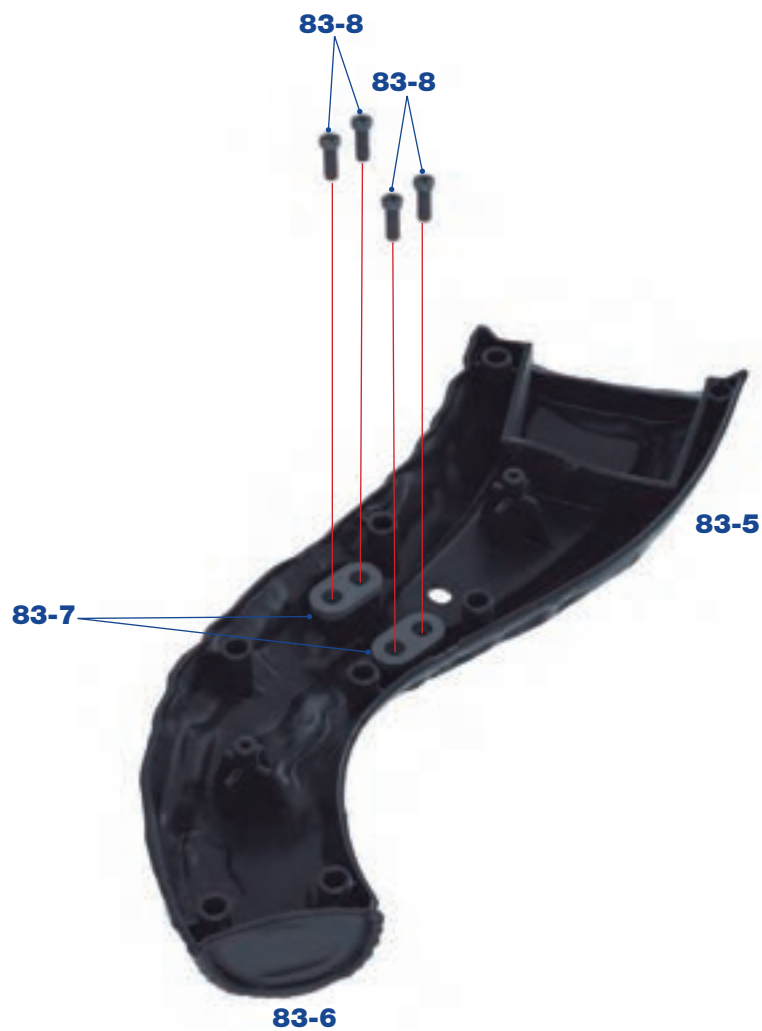

Secure the Connectors **83-7** in place using four 2.3x6mm screws **83-8**.

5

KIT 83 IS COMPLETE



KIT 84: THE TAIL AND THE DORSAL GROWTHS (III)

In this kit you will continue to work on the tail and dorsal appendages.




PARTS SUPPLIED

Ref	Name	Qty
84-1	Back Protector B3	1
84-2	Tail 13	1
84-3	Tail 14	1
84-4	Back B4	1

Ref	Name	Qty
84-5	Back B5	1
84-6	Connector	2
84-7	2.3x6mm screws (1 spare)	7

KIT 84: THE TAIL AND THE DORSAL GROWTHS (III)

1

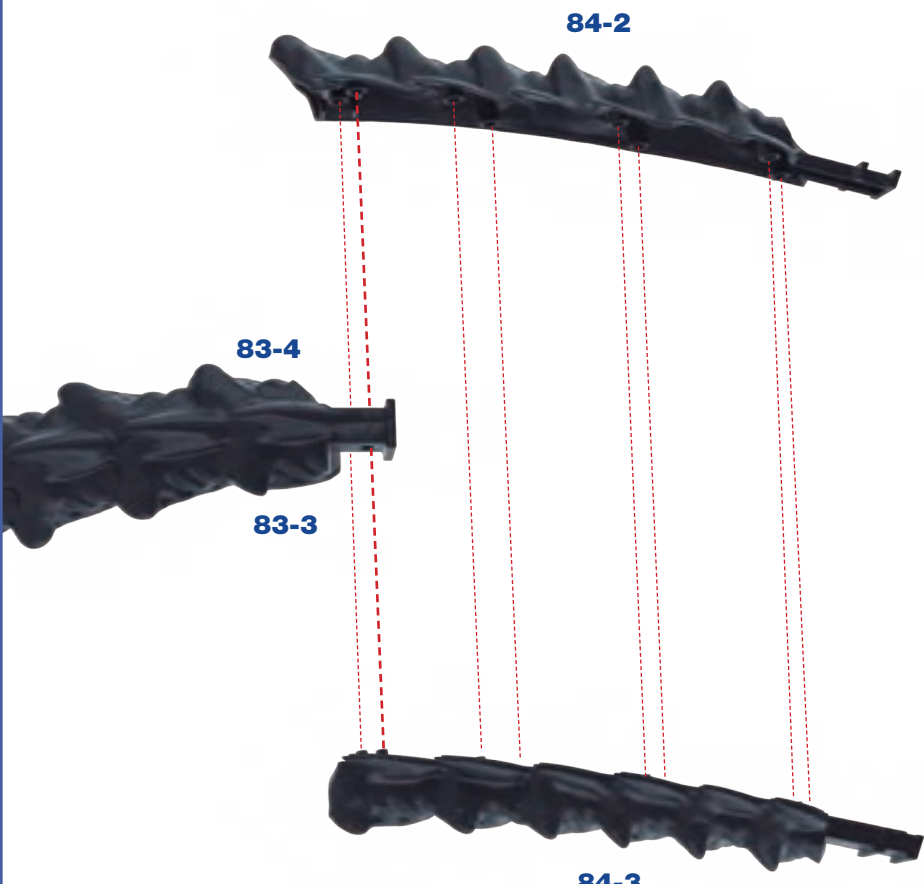

84-2


83-4

83-3

84-3

Take the tail assembly which was worked on in the previous kit and test-fit the central peg on Tail 14 **84-3** through the hole at the end of the tail assembly **83-3/83-4**. From the other side, test-fit Tail 13 **84-2**, as shown by the red lines. When certain of a good fit, secure together by applying glue to the contact areas and hold firmly in place until the glue has dried.

2



84-1 (B3)


83-6

83-5

Fit the Back Protector B3 **84-1** to the back assembly **83-5/83-6**, which was worked on in the previous kit. There are two pegs on Back Protector B3 **84-1** which fit into corresponding holes in Back **83-5**. After test-fitting, glue in place.


KIT 84: THE TAIL AND THE DORSAL GROWTHS (III)

3

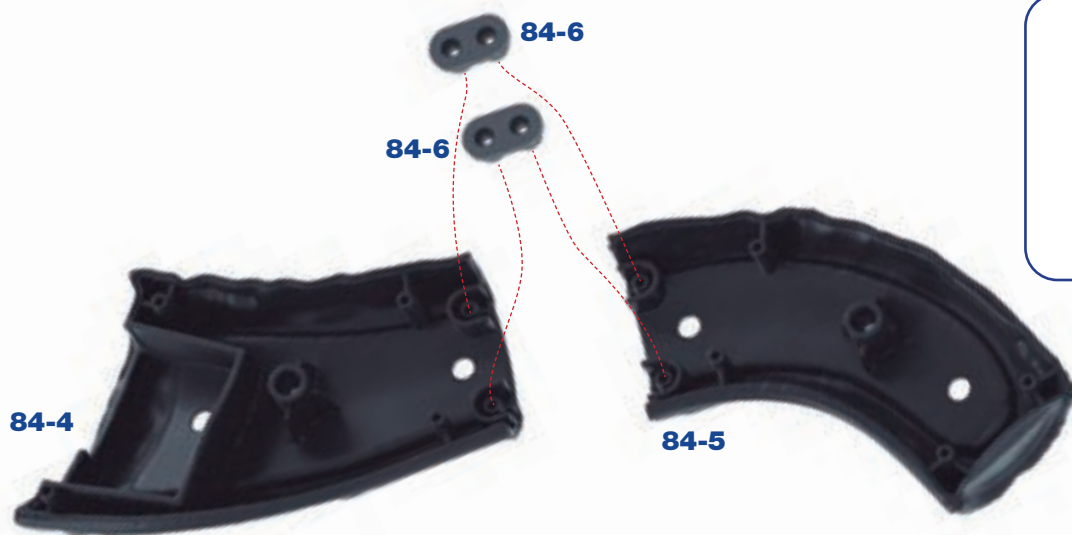

Taking Back B4 **84-4** and Back B5 **84-5**, join them together by fitting two Connectors **84-6** over the raised screw sockets.

4

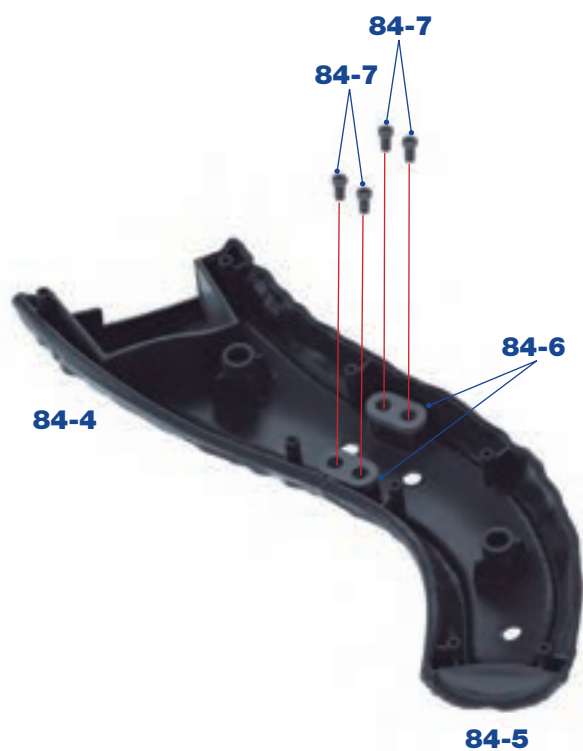

Secure the Connectors **84-6** in place with four 2.3x6mm screws **84-7**.

5



The assembly **83-5/83-6**, from the previous kit, and the assembly **84-4/84-5** are joined together as shown. There are raised sockets, shown by the red lines, which fit together.

KIT 84: THE TAIL AND THE DORSAL GROWTHS (III)



KIT 84 IS COMPLETE

THE TAIL HAS BEEN EXTENDED FURTHER AND WORK HAS CONTINUED ON THE DORSAL GROWTHS.

